
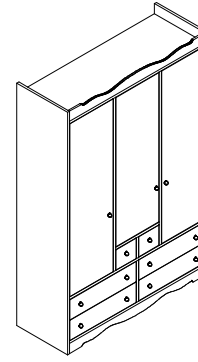


GALY 3 KAPAKLI DOLAP MONTAJ TALIMATI  
GALY 3 DOORS WARDROBE INSTALLATION INSTRUCTIONS

PARÇA LİSTESİ - PIECE LIST

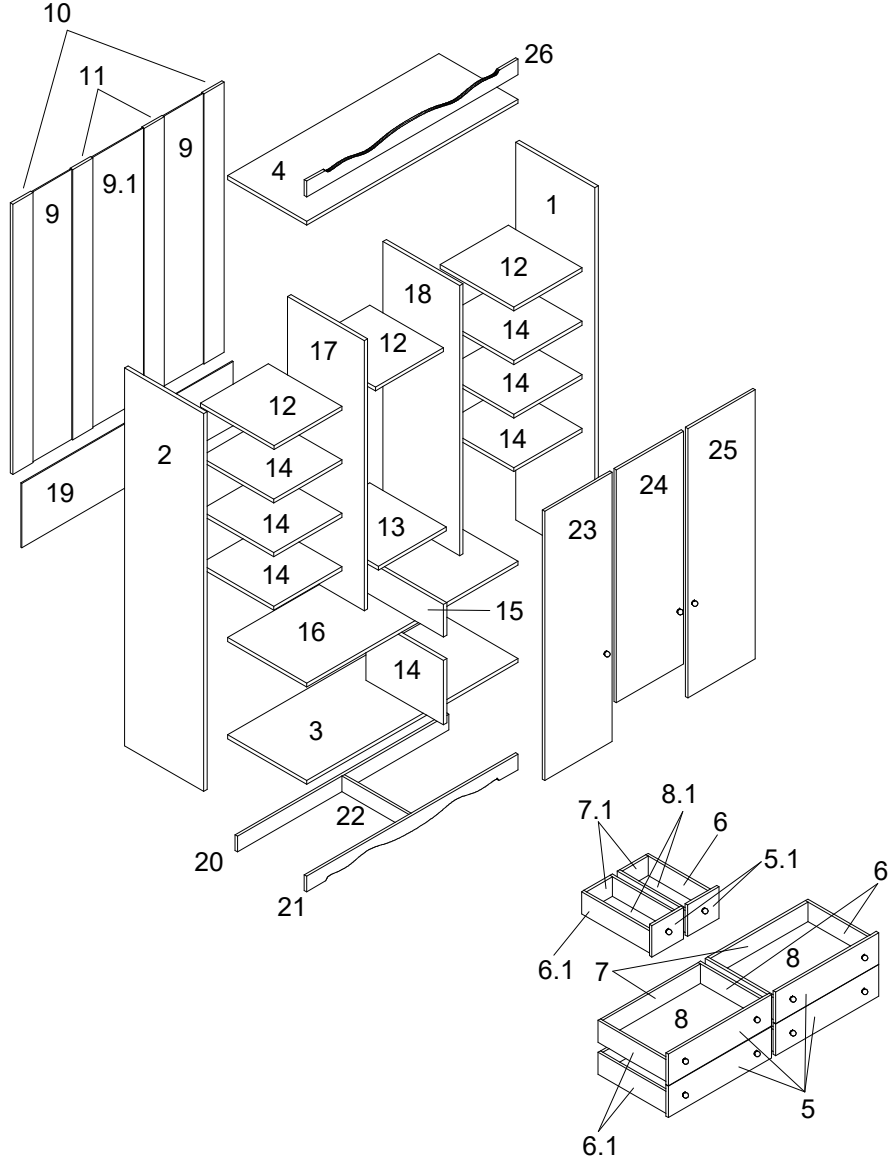

1











Modul Name




GALY 3 DOORS WARDROBE

AKSESUAR LİSTESİ - ACCESSORIES LIST

A	B	C	D	E	F	G
108-Pcs	108-Pcs	60-Pcs	108-Pcs	112-Pcs	6-Set	6-Pcs
H	I	J	K	L	M	N
6-Pcs	24-Pcs	9-Pcs	9-Pcs	13-Pcs	13-Pcs	24-Pcs
O	P	R	S	T		
1-Pc	24-Pcs	2-Pcs				


EKSİK PARÇA VE AKSESUAR DURUMUNDA MONTAJ TALIMATINDA BELİRTİLEN KODU VE ADI İLE İSTEYİNİZ  
IF YOU ARE MISSING PARTS AND ACCESSORIES WANTED CODE AND NAME OF THE SPECIFIED IN THE INSTALLATION INSTRUCTIONS

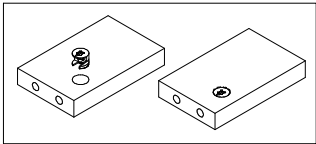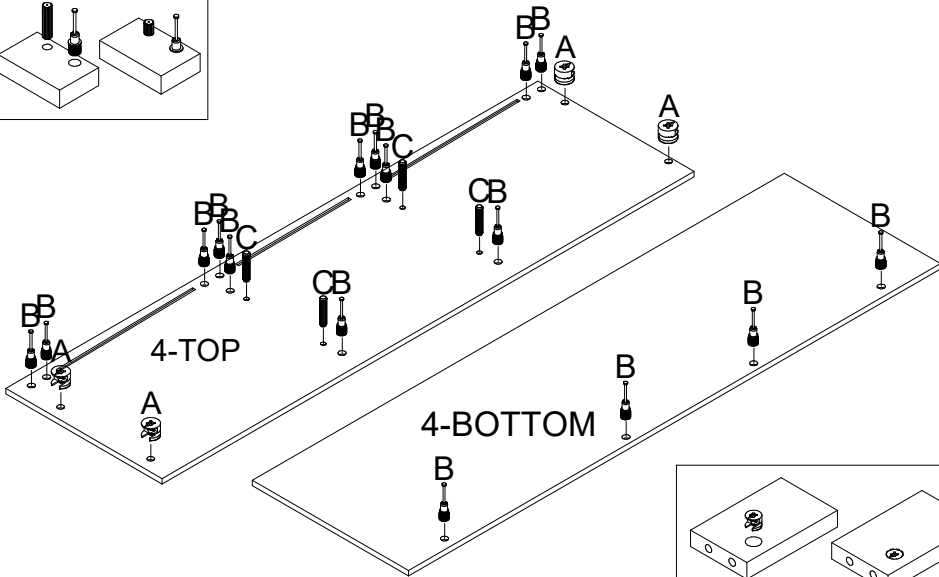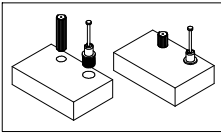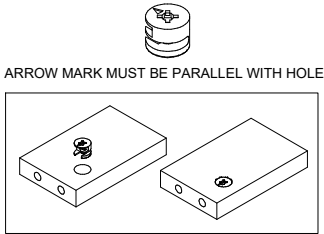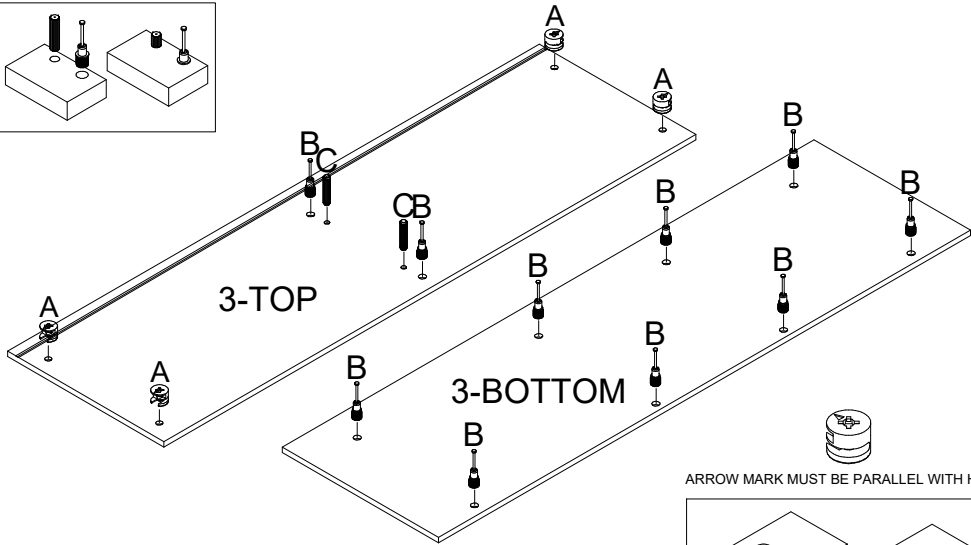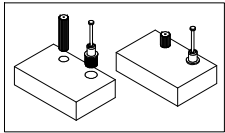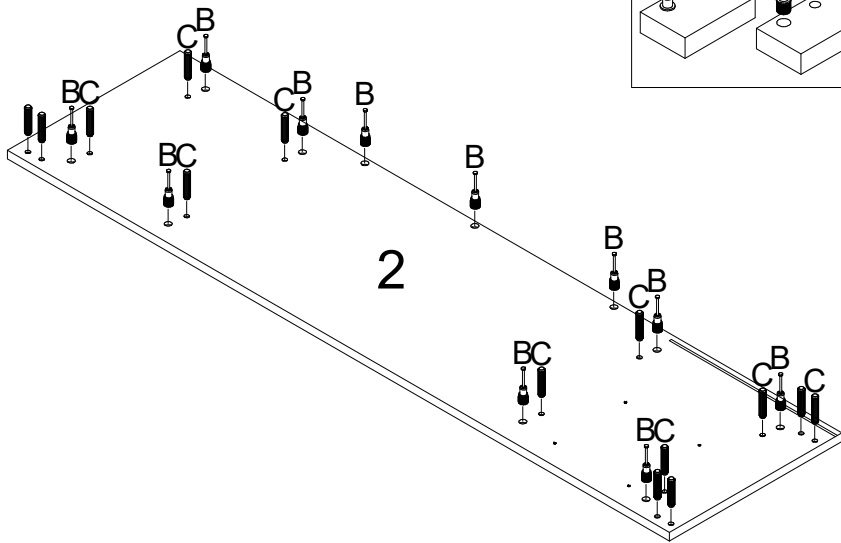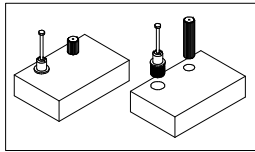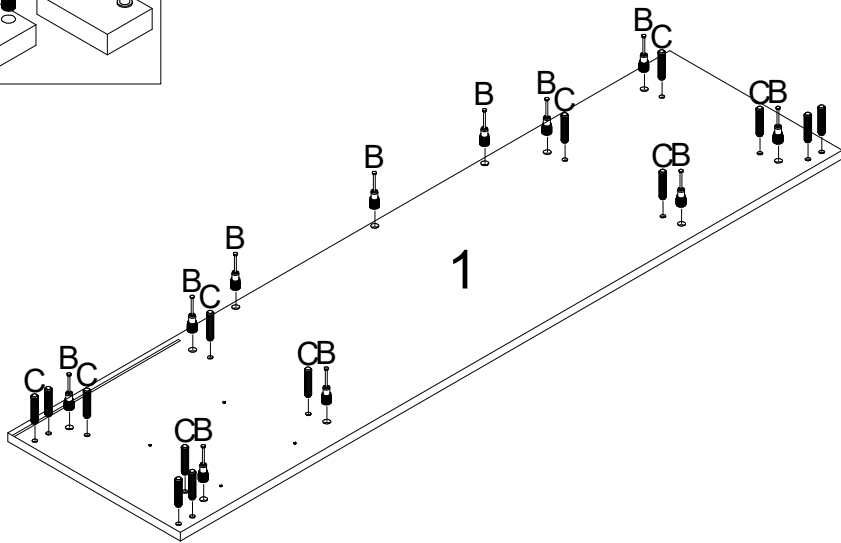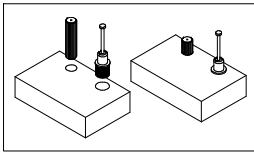




3

5




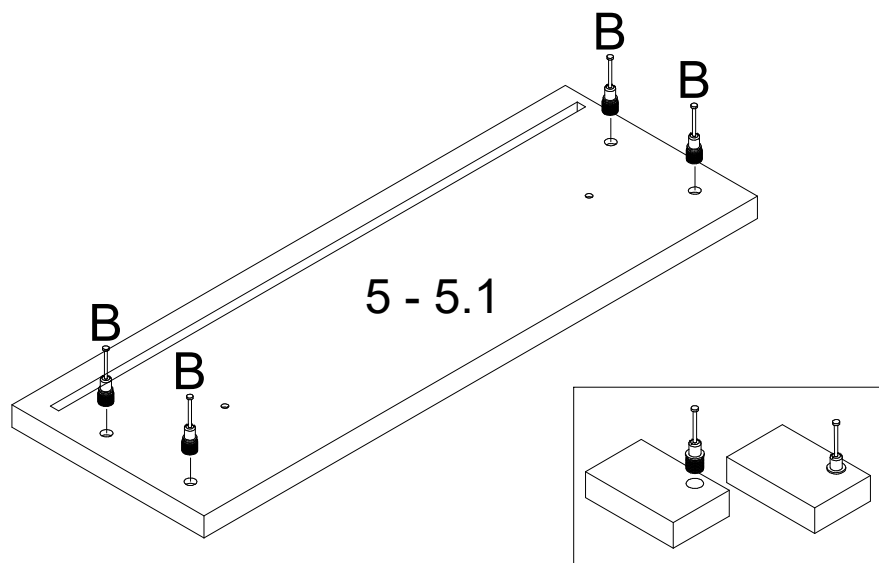




ARROW MARK MUST BE PARALLEL WITH HOLE

6

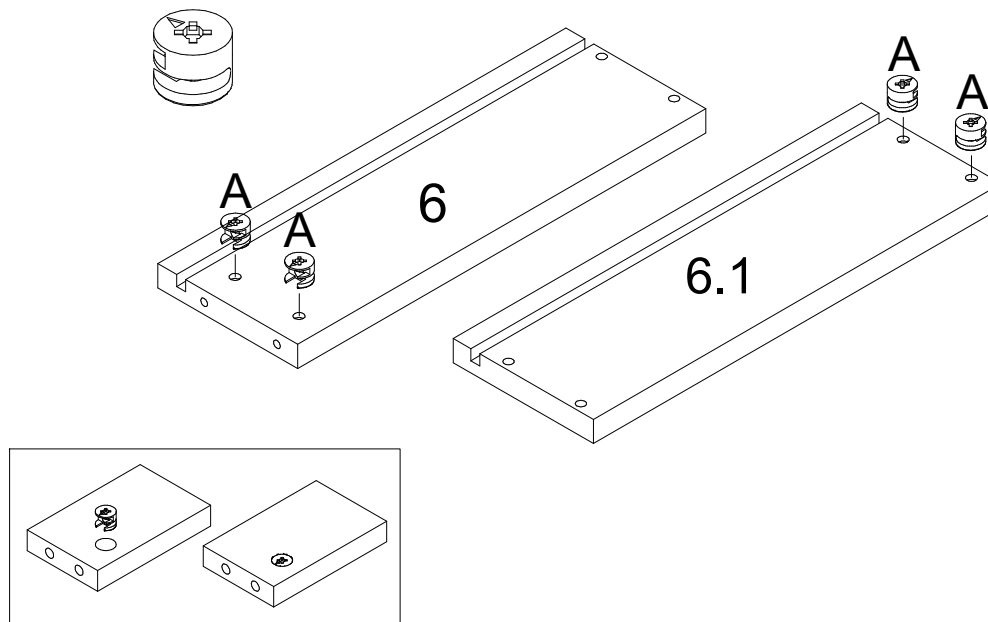


7

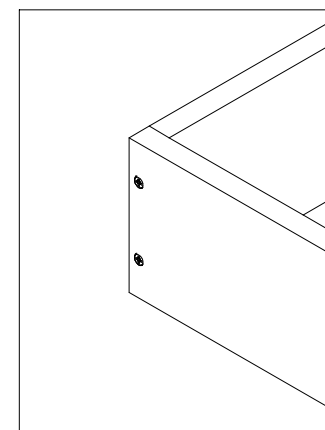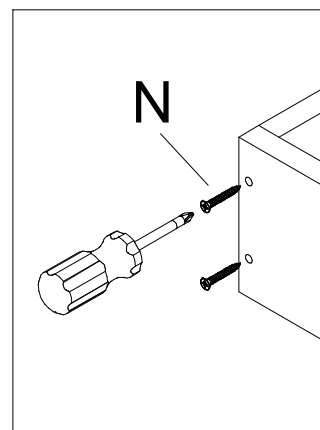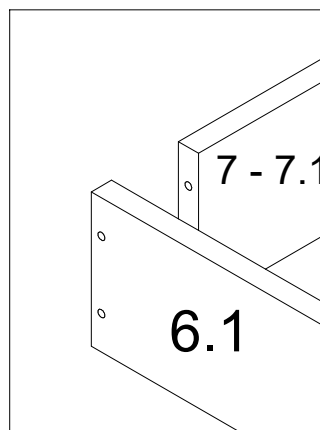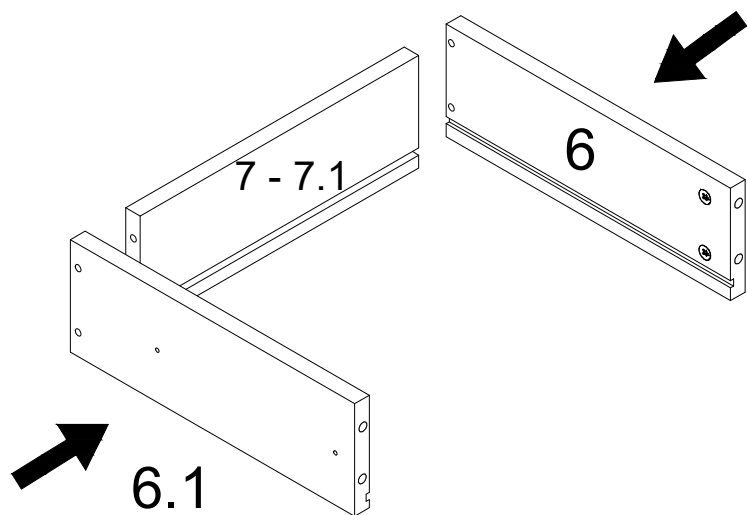




4


8

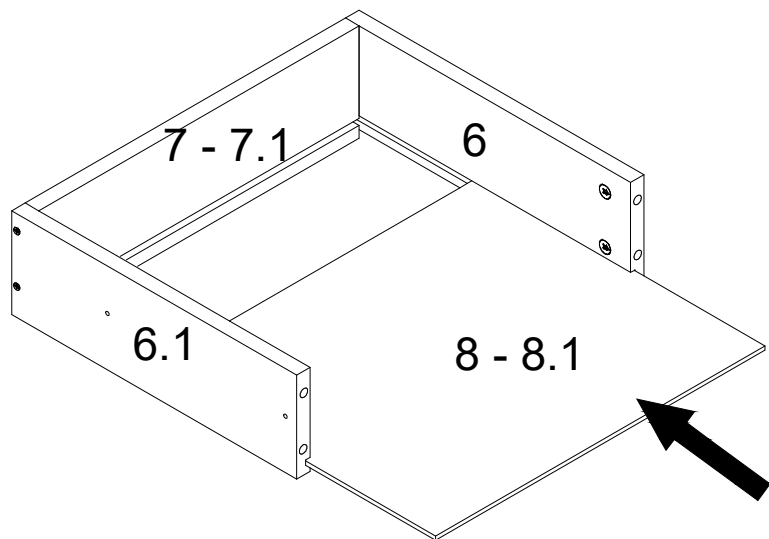



9


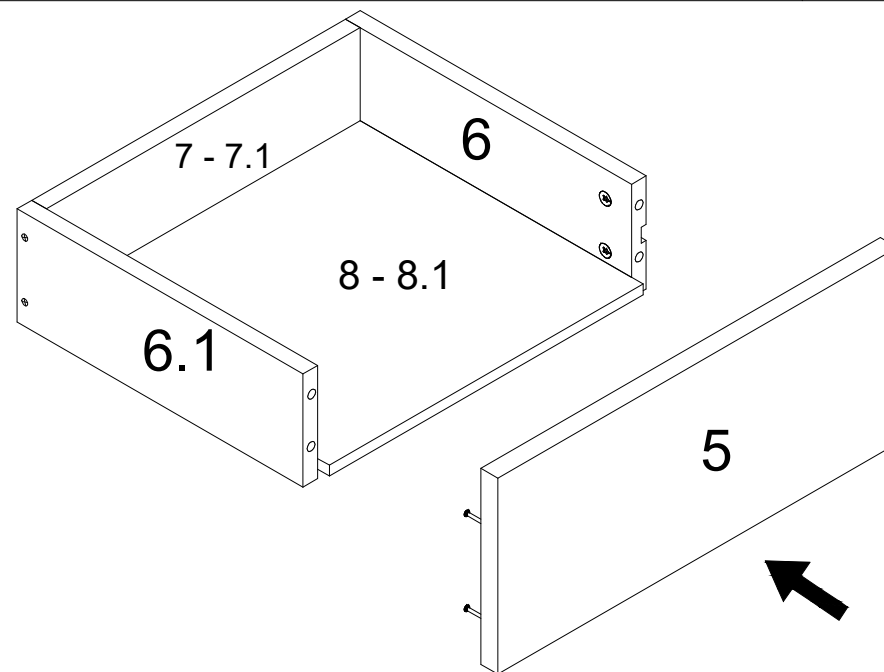


10

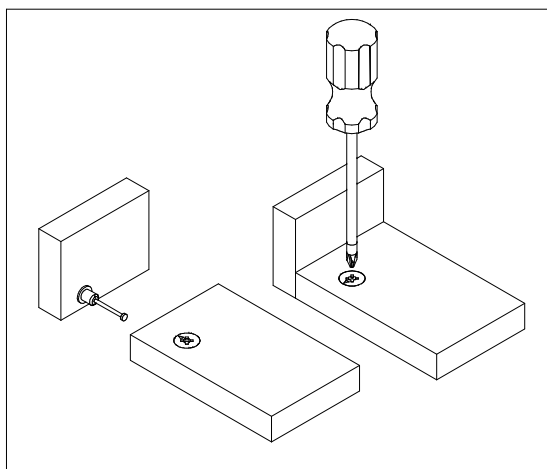


11

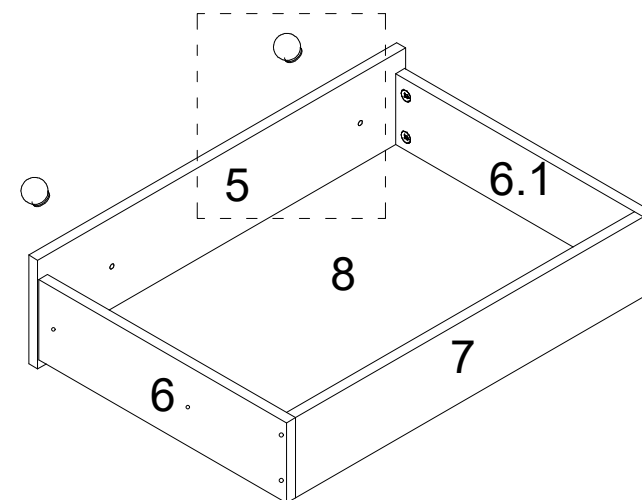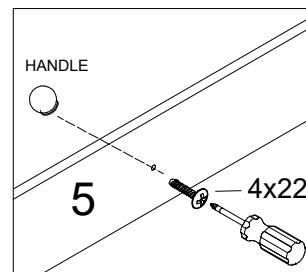




5

## BACK-LEFT AND RIGHT SUPPORT

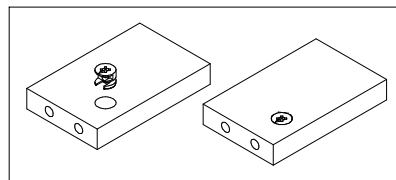


12

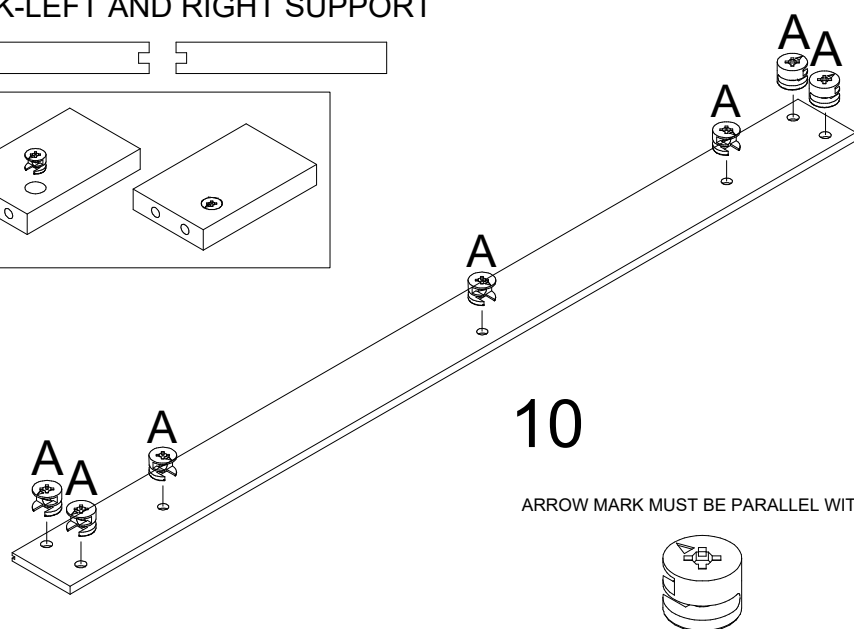


10

ARROW MARK MUST BE PARALLEL WITH HOLE


## BACK-MIDDLE SUPPORT



ARROW MARK MUST BE PARALLEL WITH HOLE





13

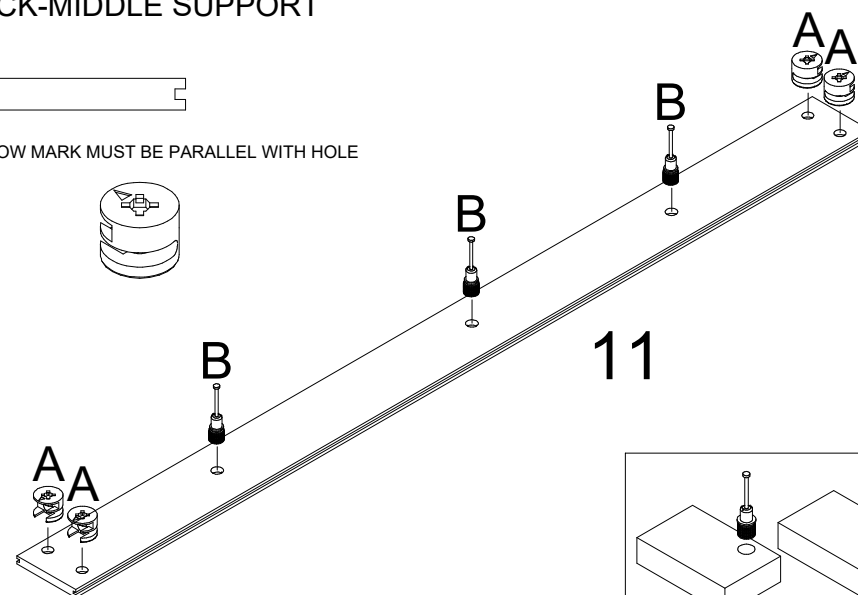

11



ARROW MARK MUST BE PARALLEL WITH HOLE

14

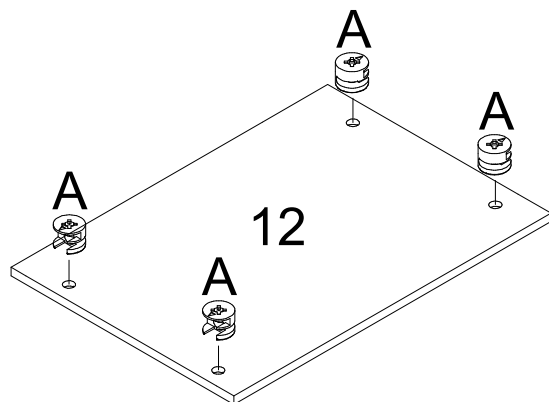



12

15

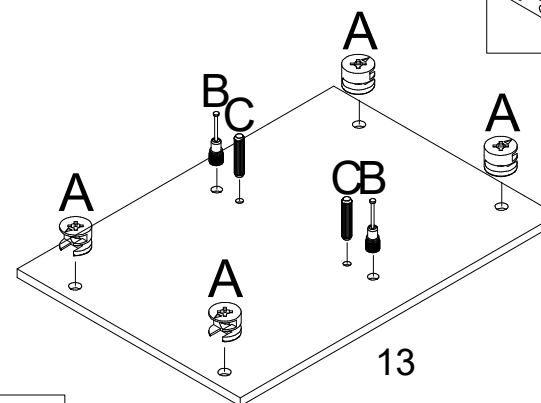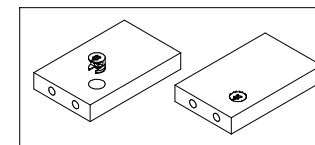


13




6



16

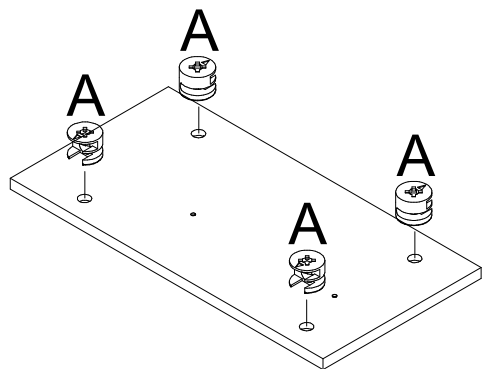



15-LEFT SIDE

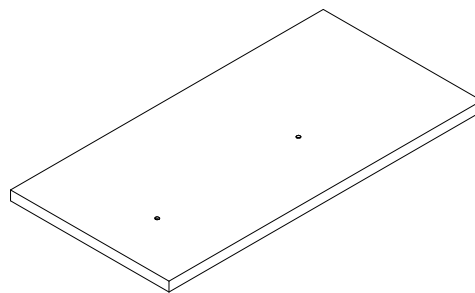



15-RIGHT SIDE

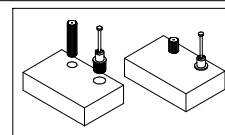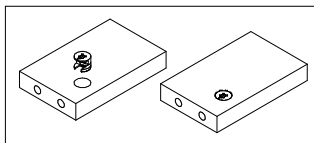


17

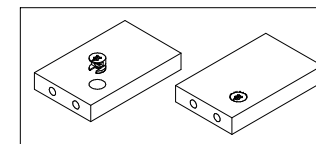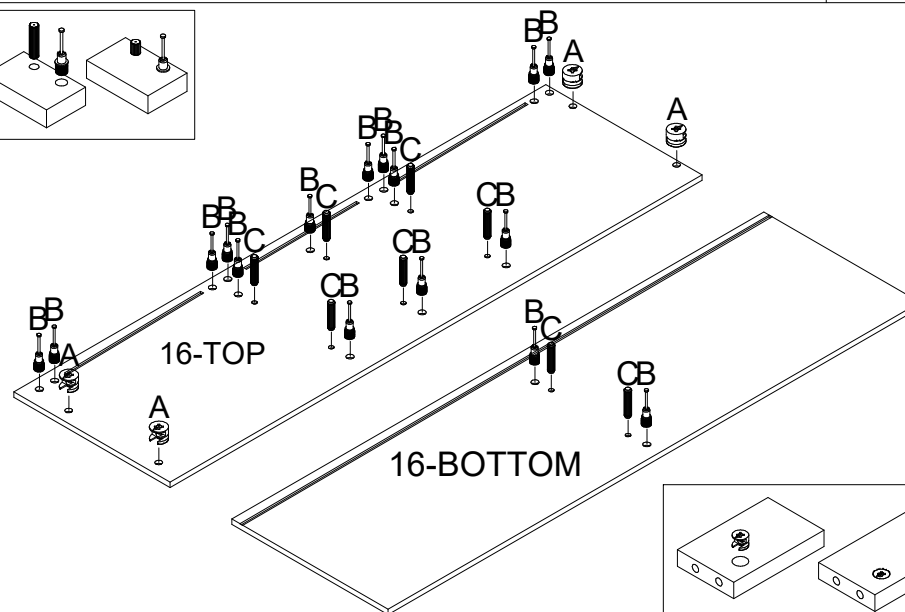


18

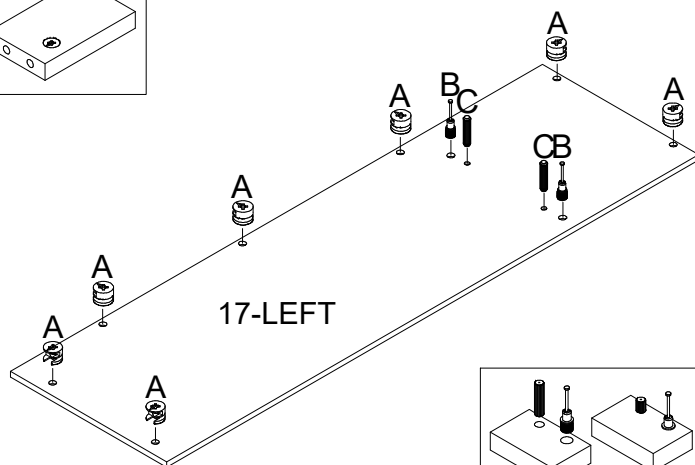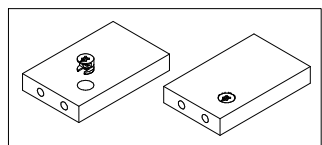


17-LEFT


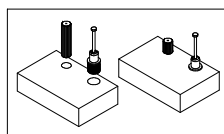


19

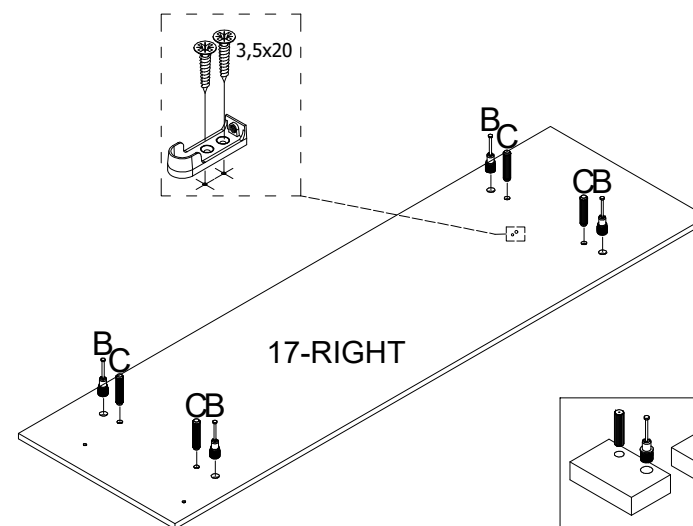


17-RIGHT

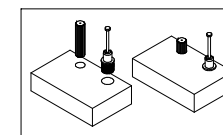




7


20

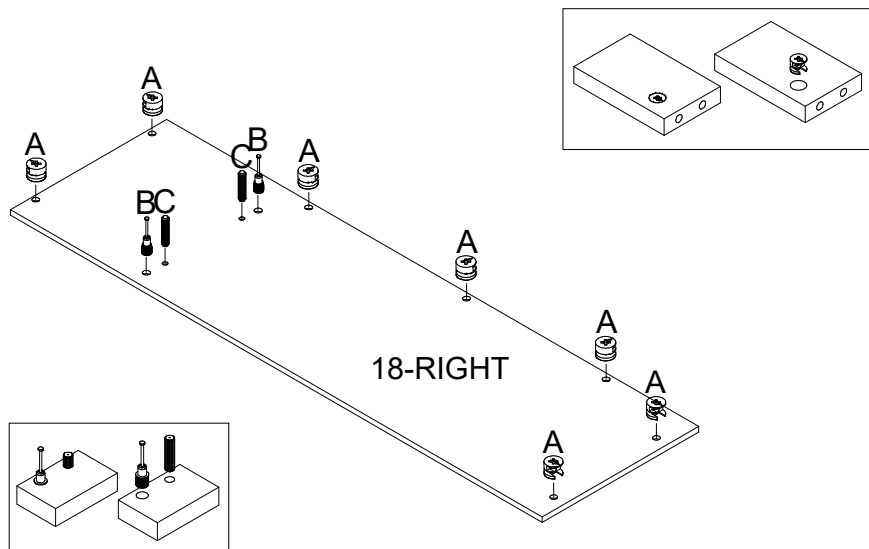


21


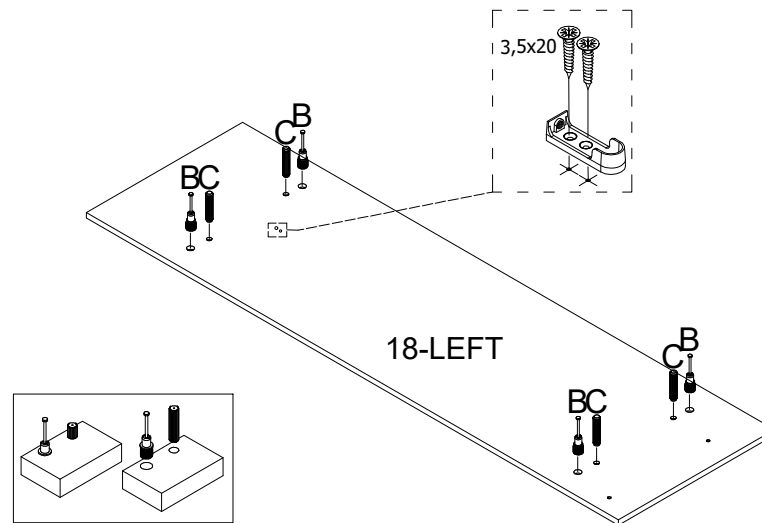


22

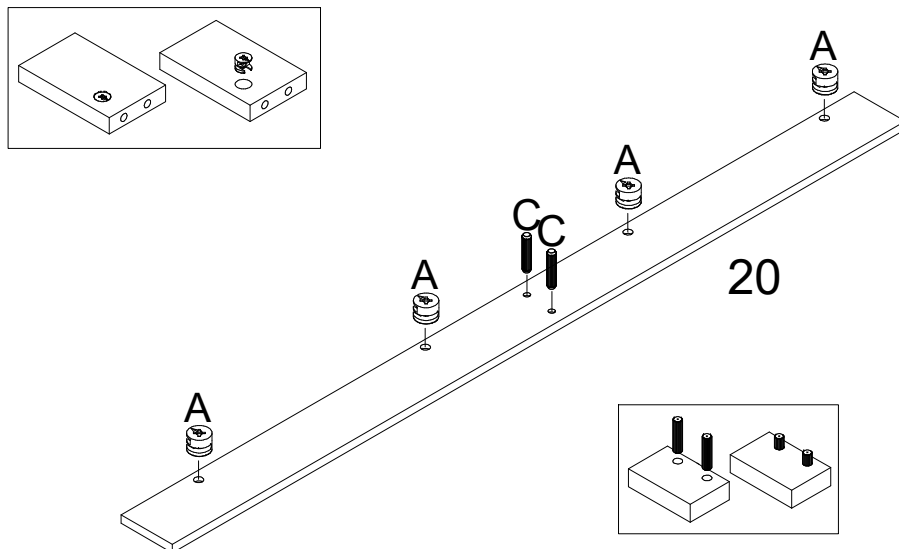


23

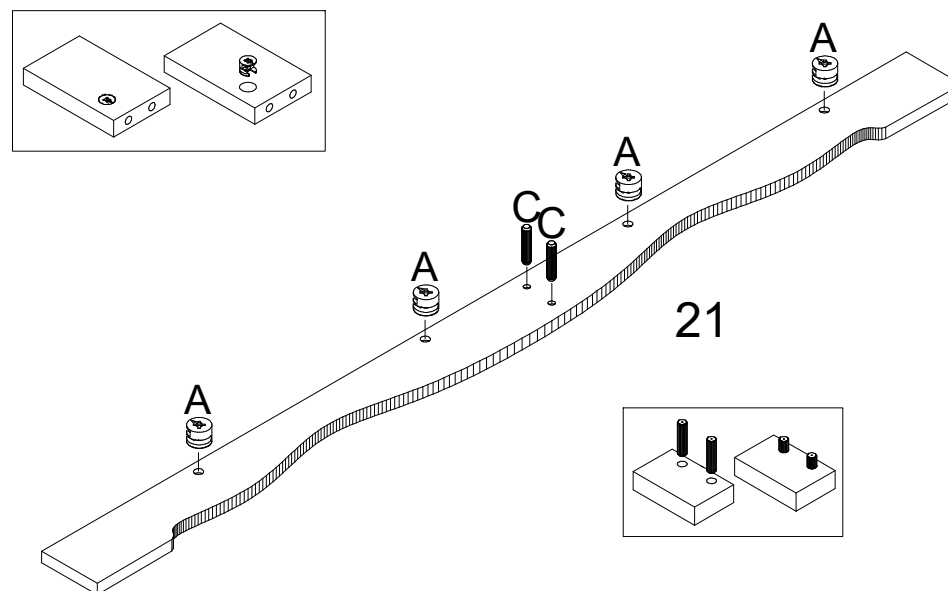




8


24

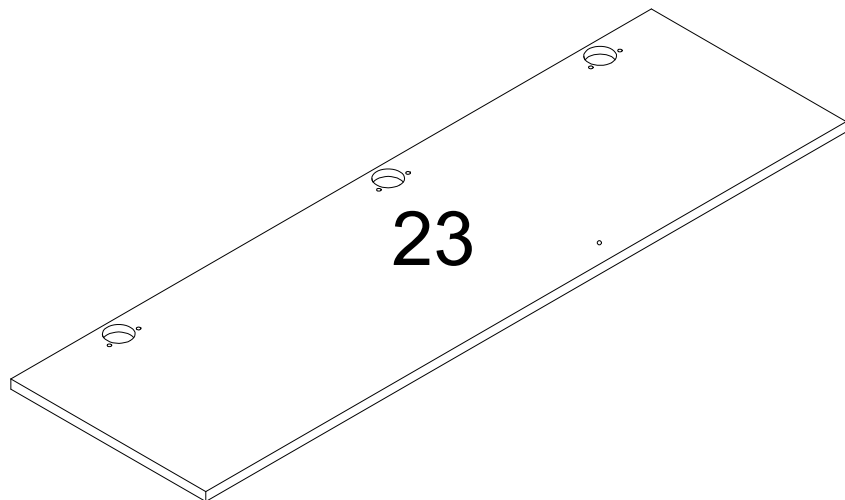



25

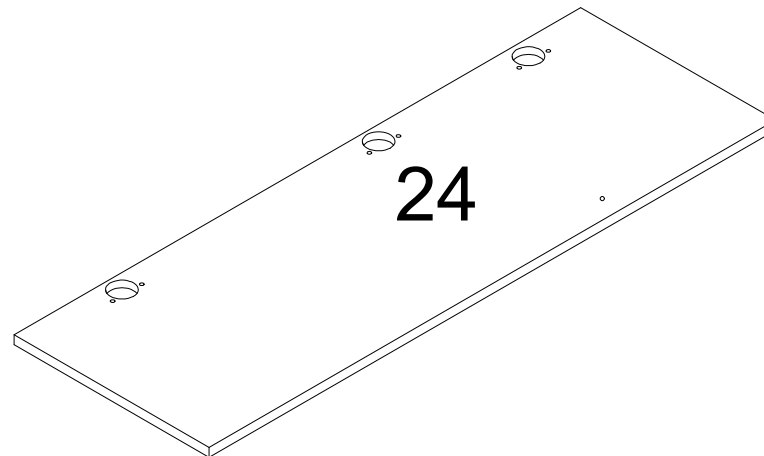




26

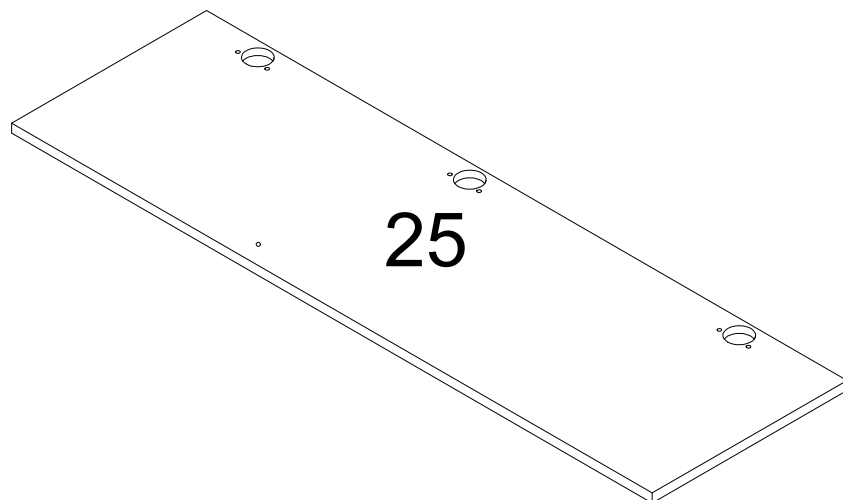

27

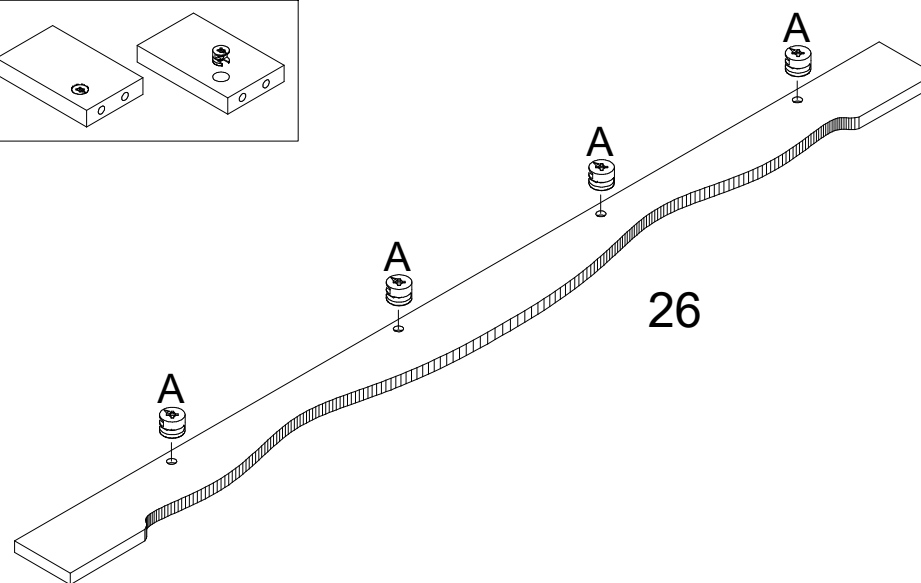
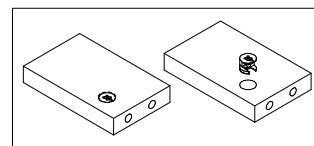







9

28

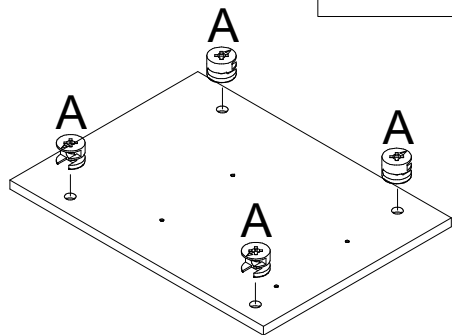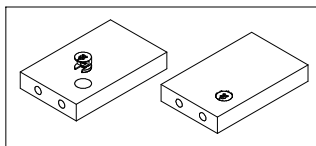


27-LEFT SIDE

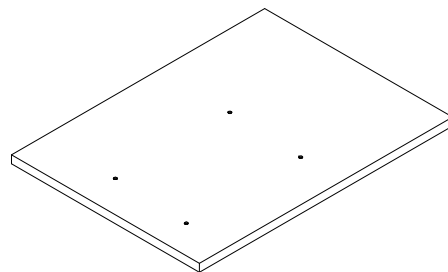


27-RIGHT SIDE


29


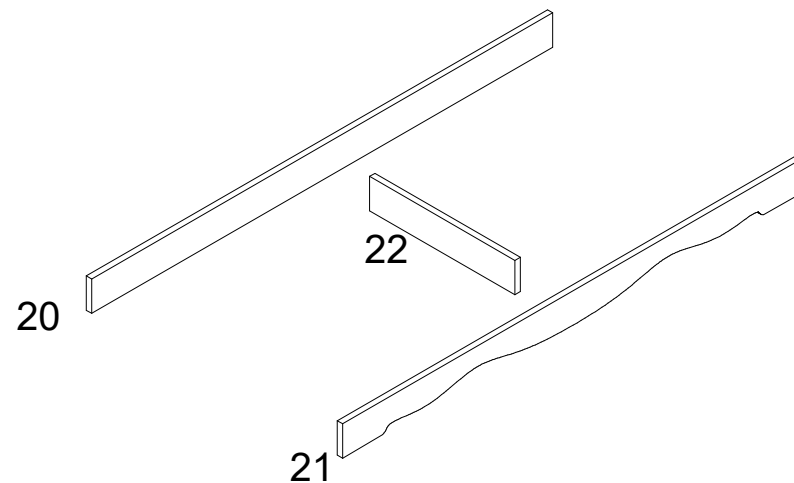


30

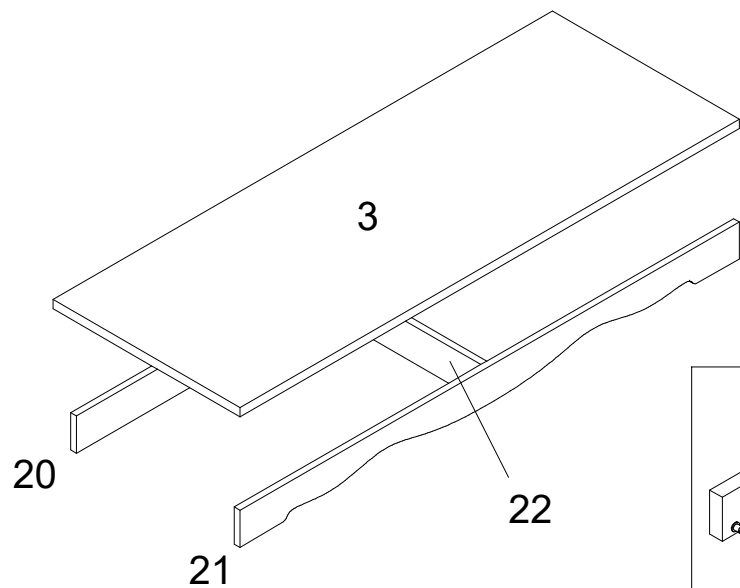


31

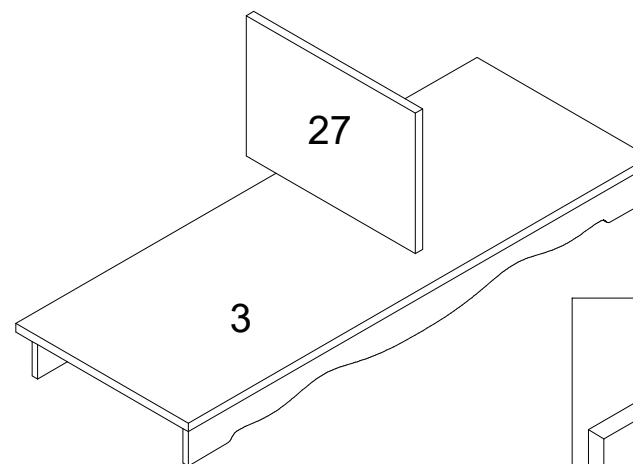





10



32

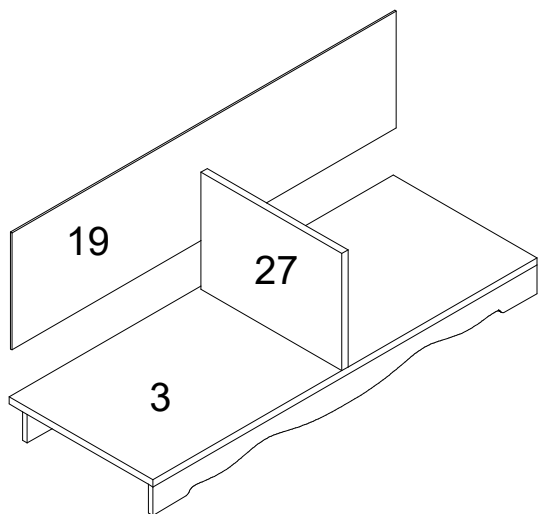



33

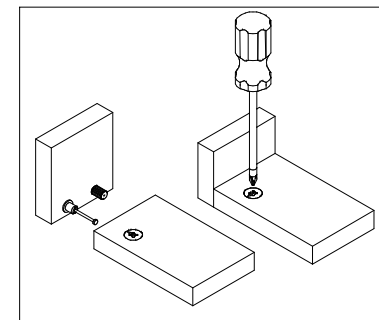
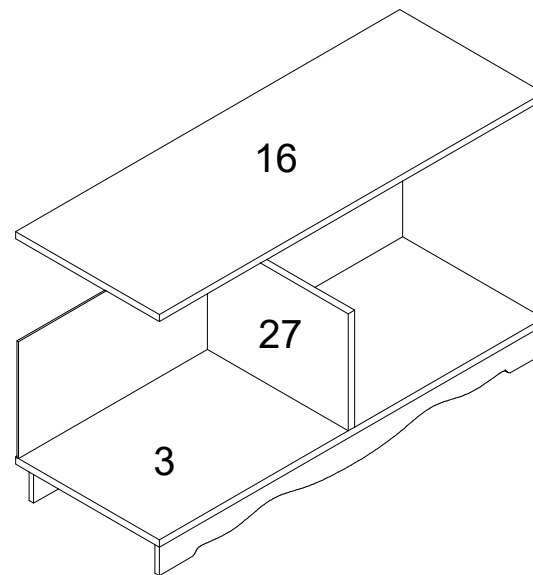


34

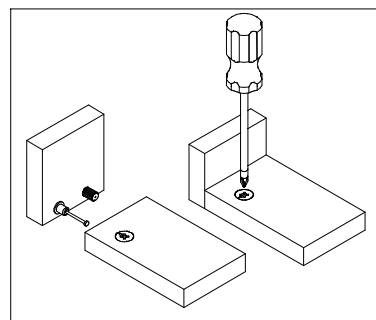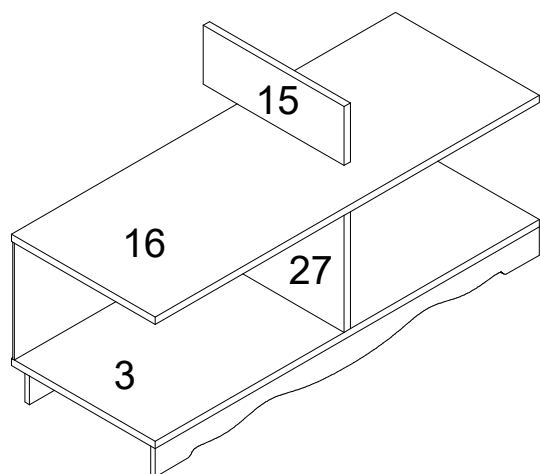


35

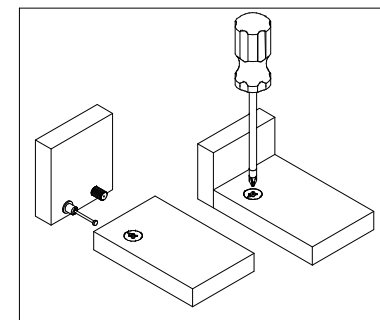
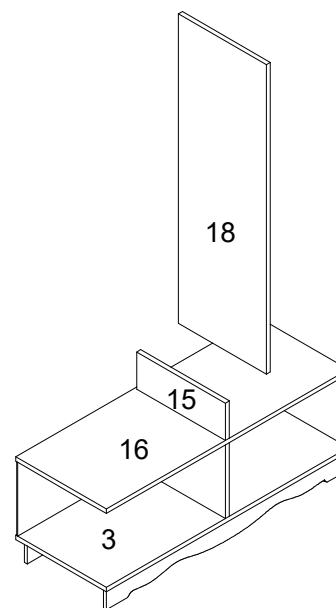





11

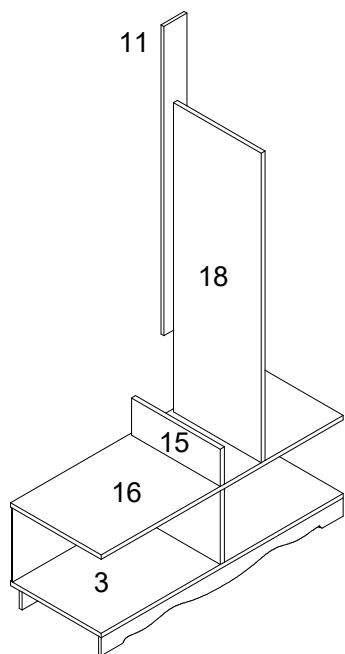



36

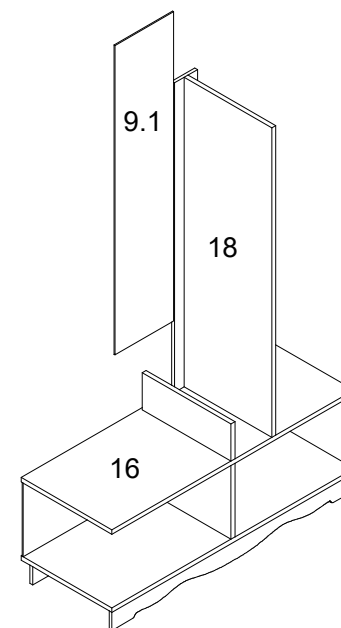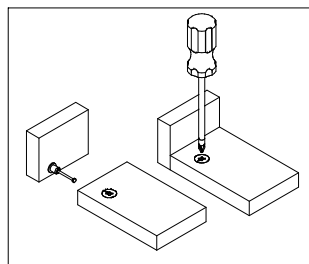


37


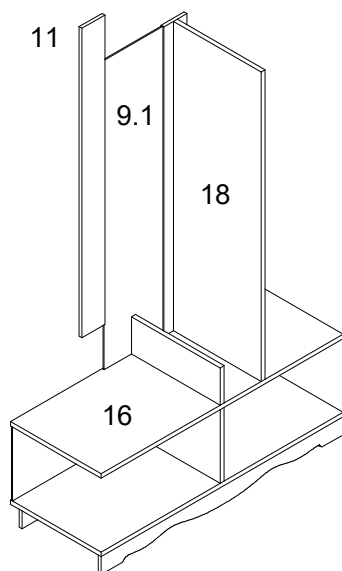


38

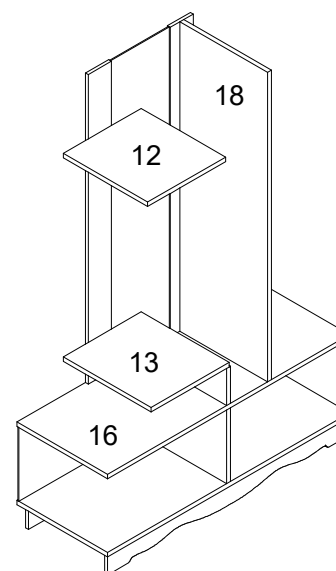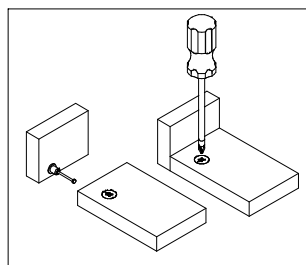



39

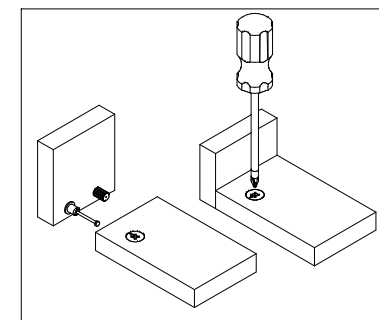




12



40

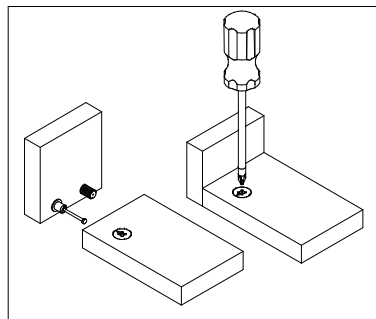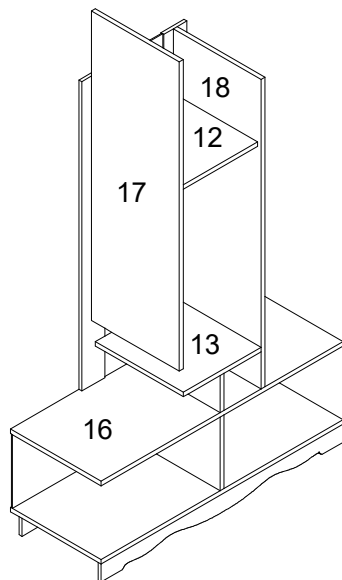


41


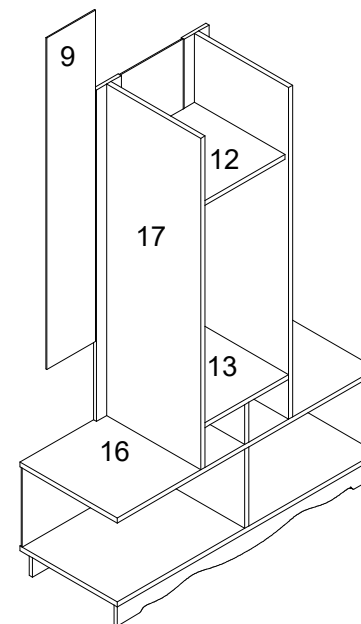


42

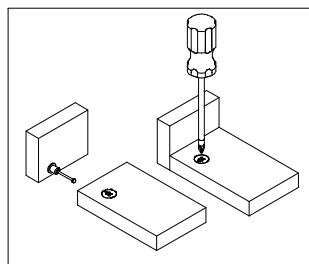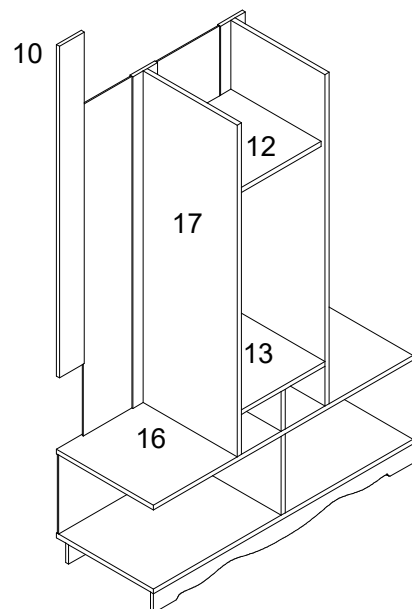


43

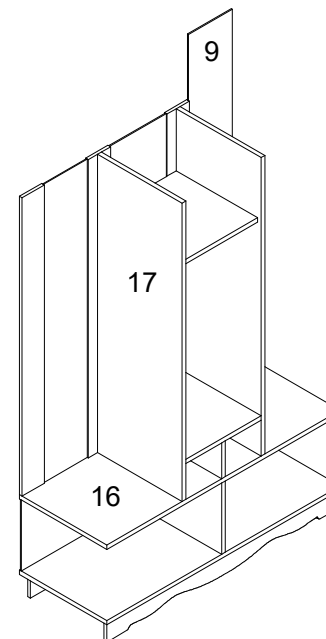






13

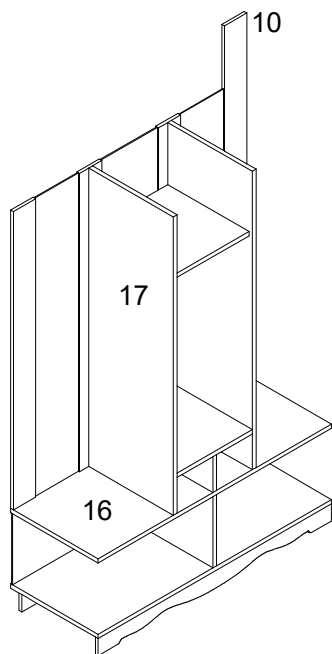



44

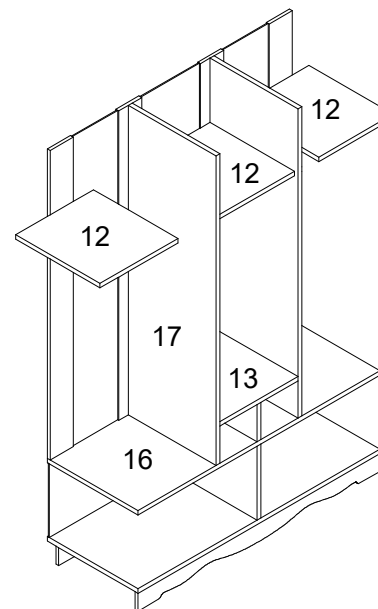


45

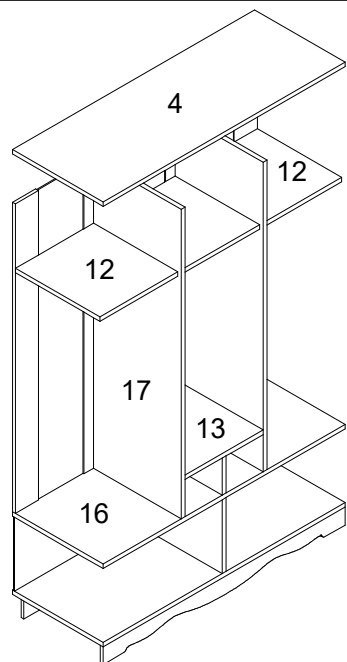
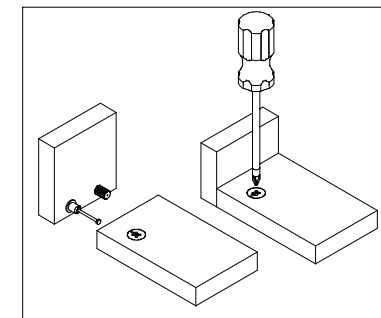


46

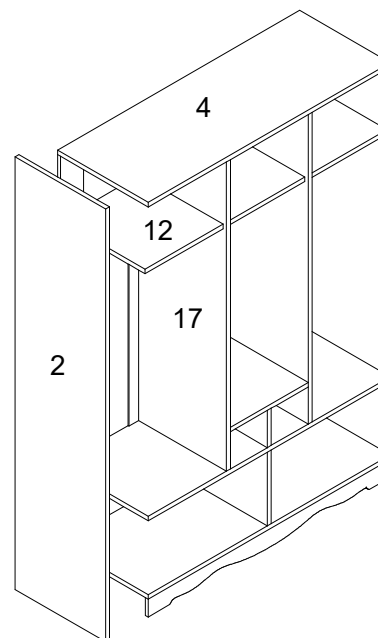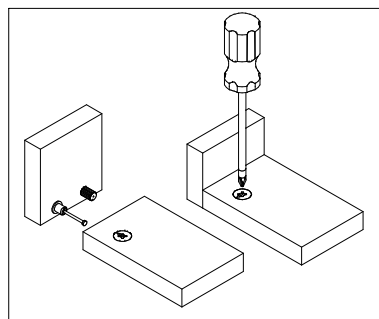


47


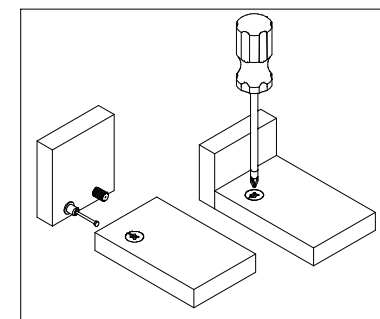






14

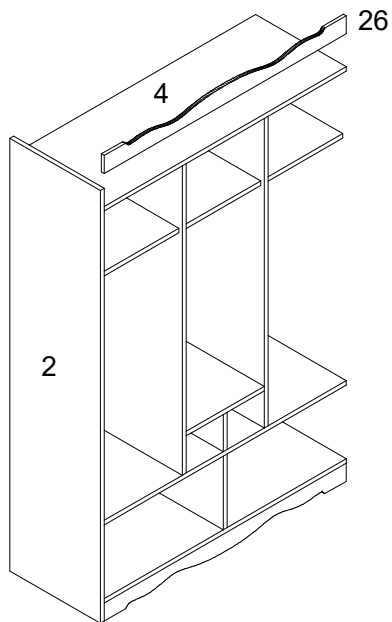



48

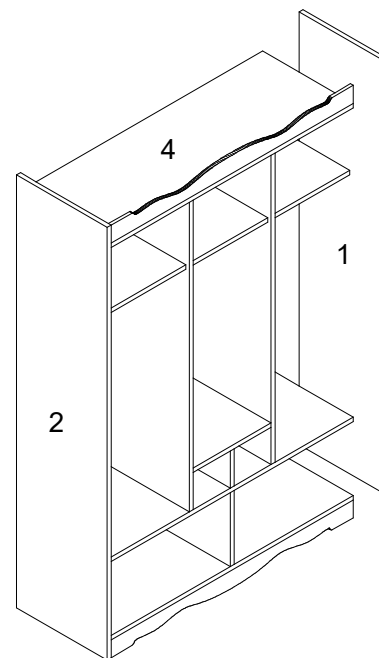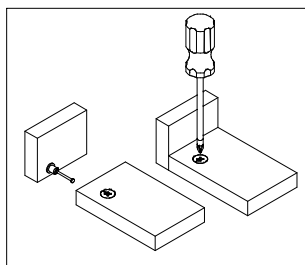




49

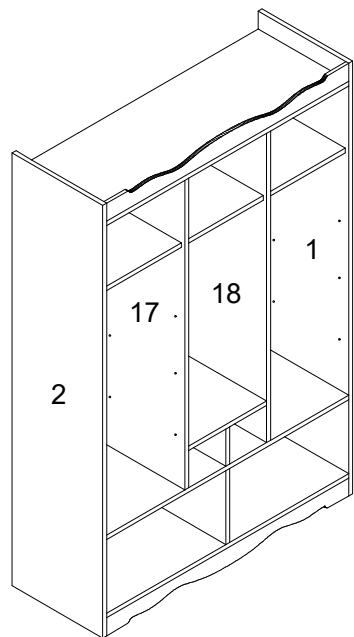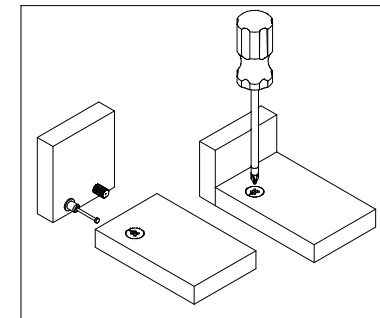


50


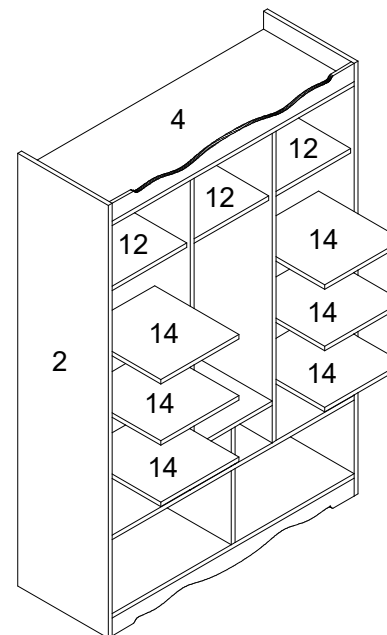
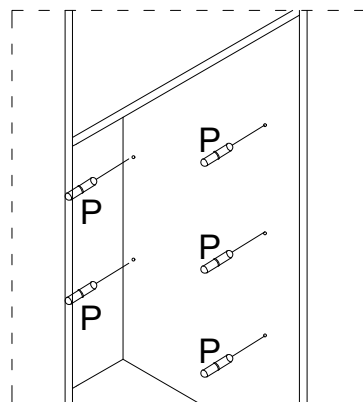


51





52




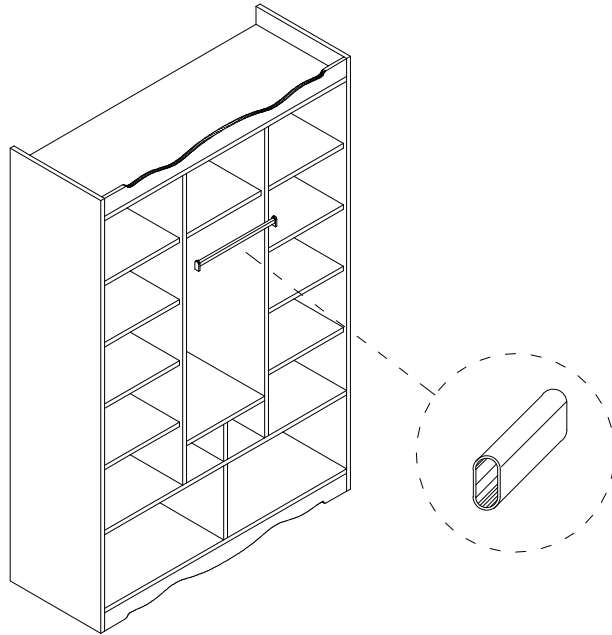


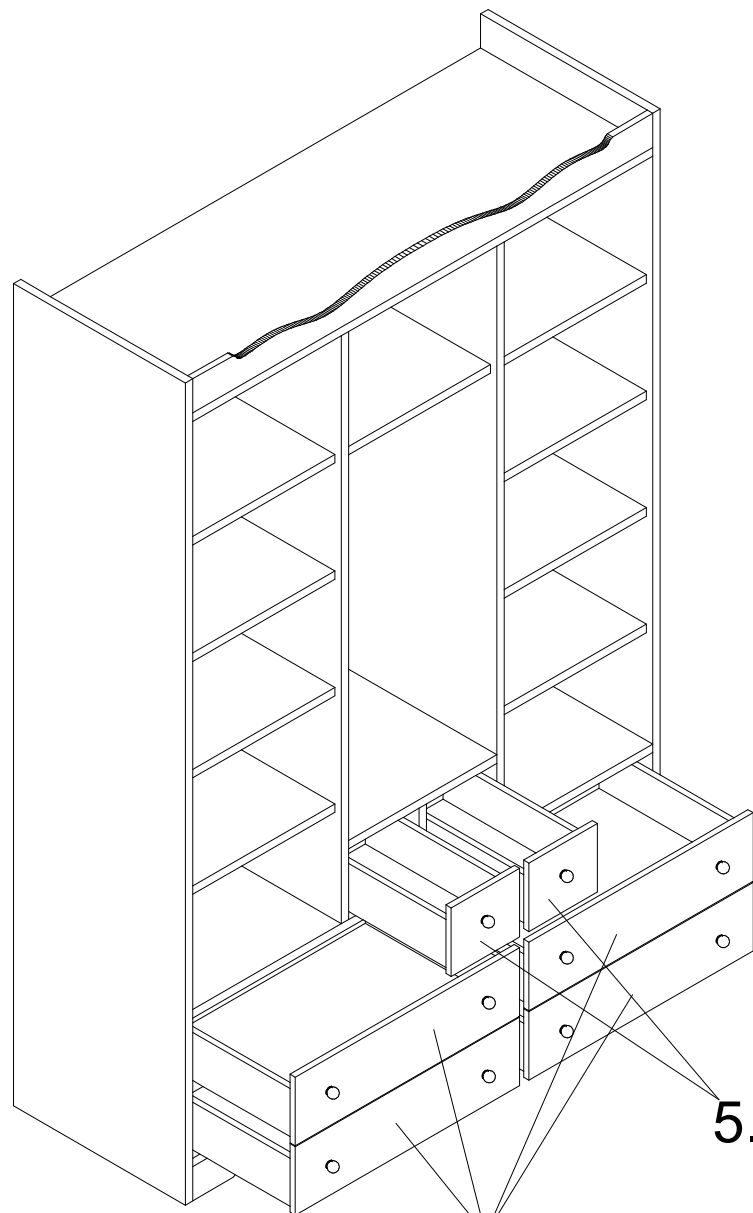


3,5x20

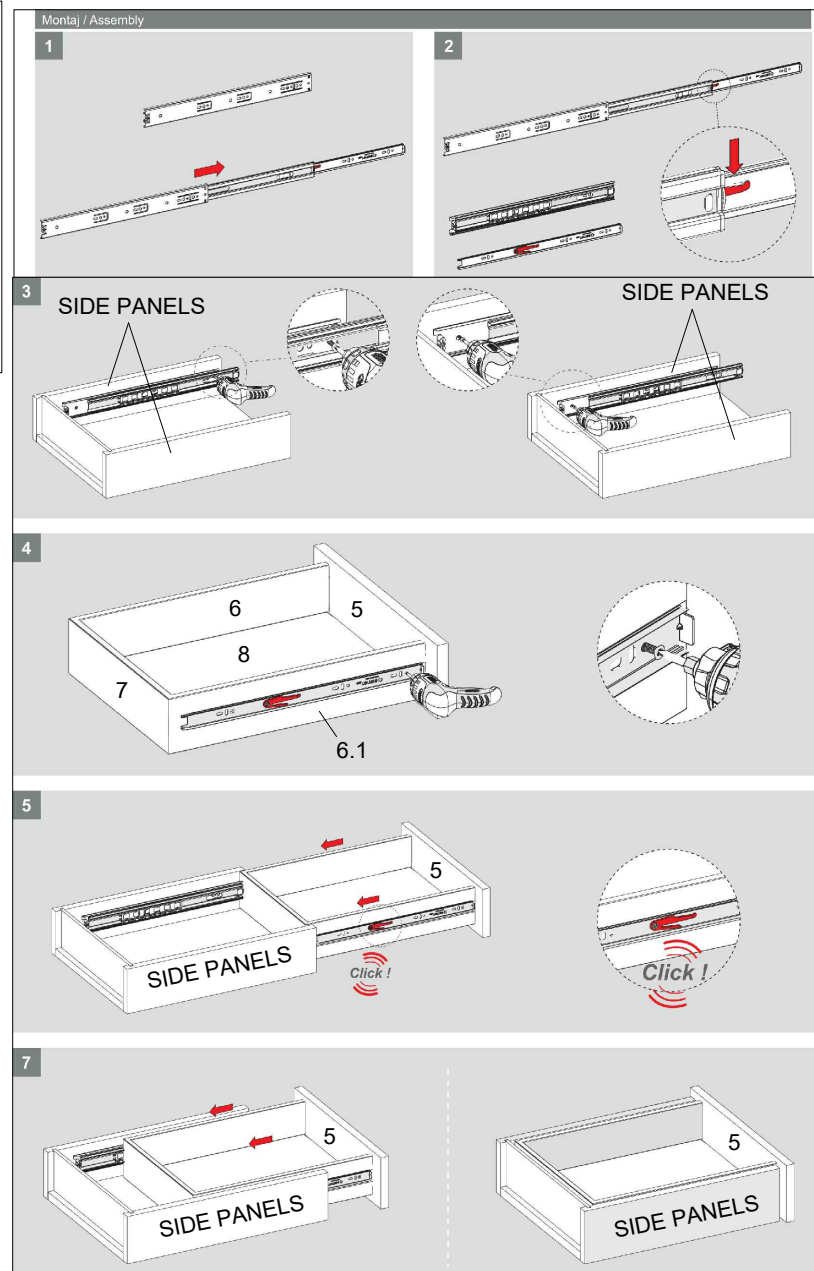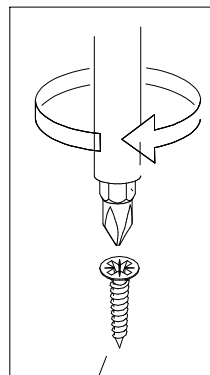



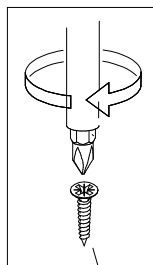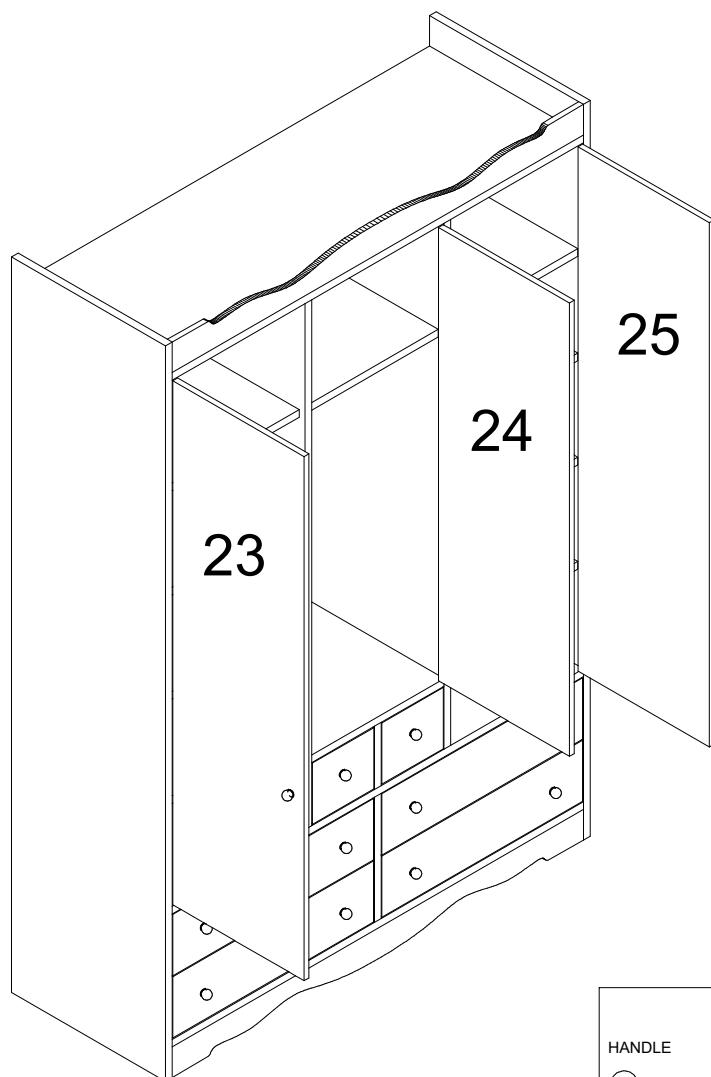










3,5x20

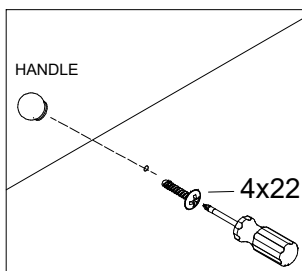

HANDLE

4x22

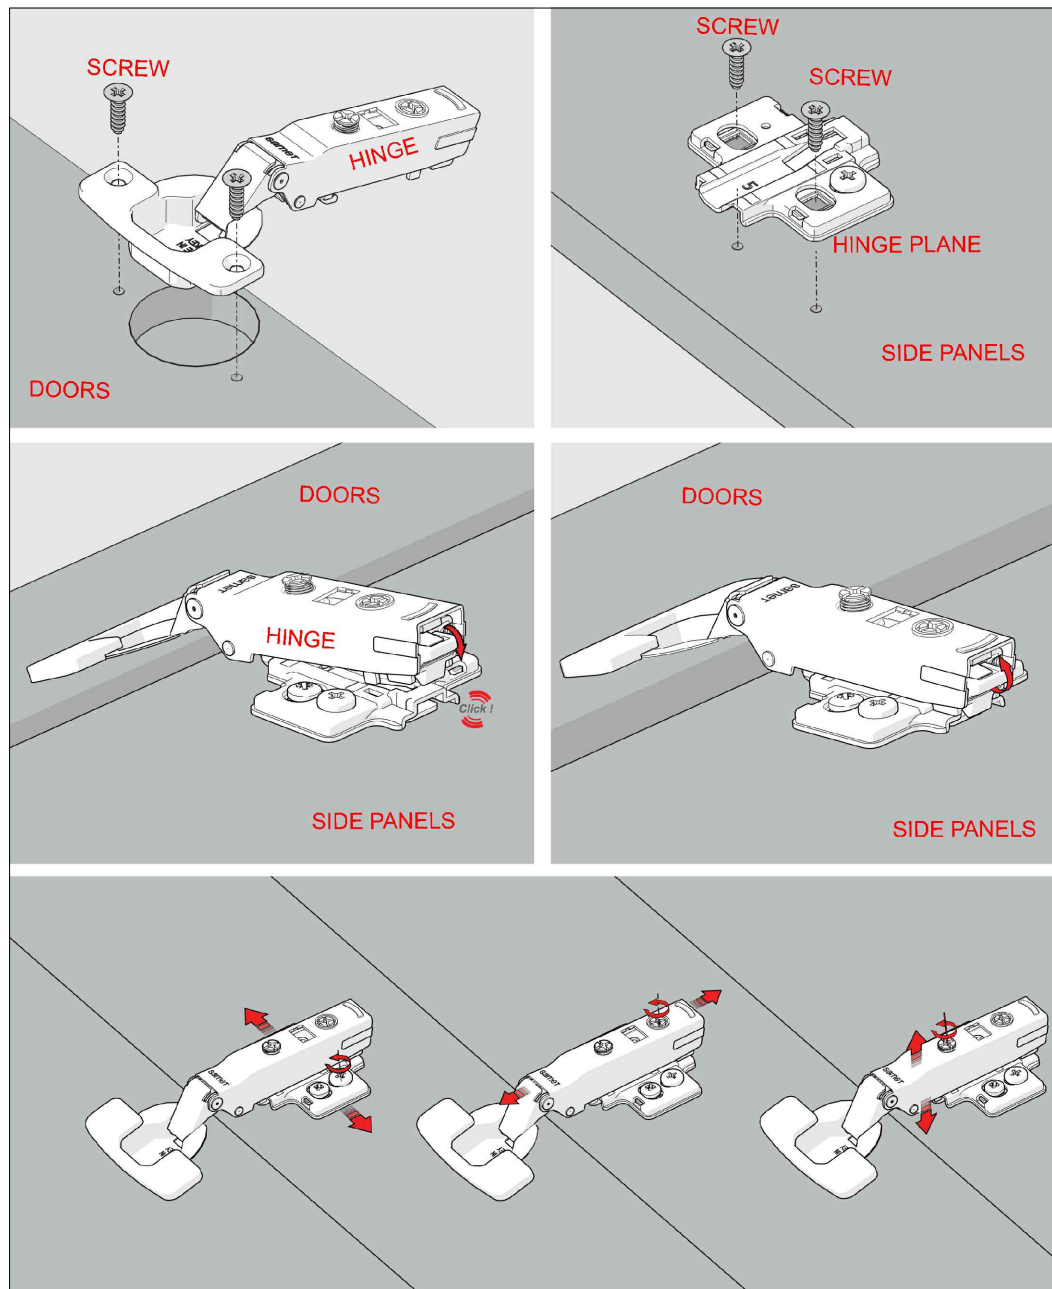

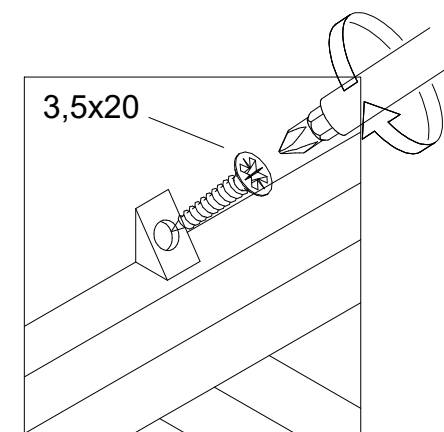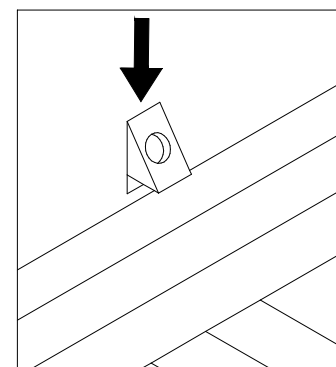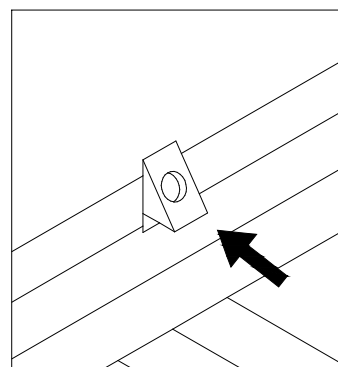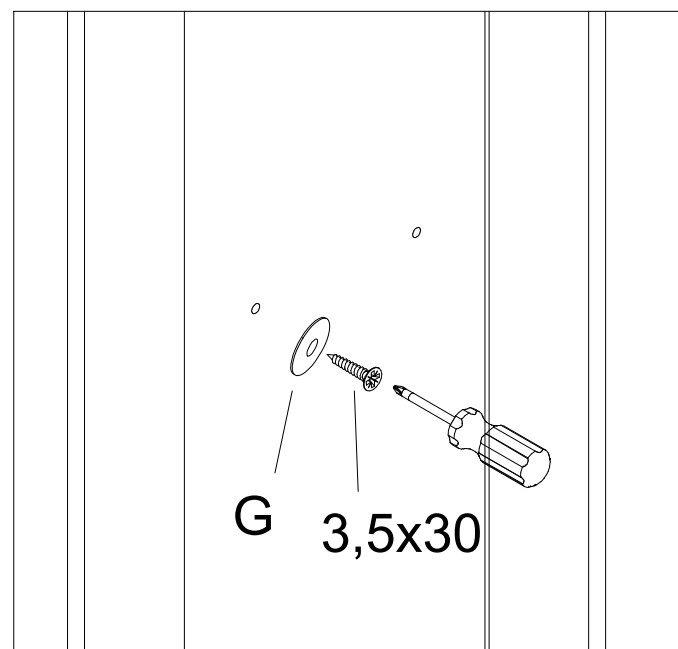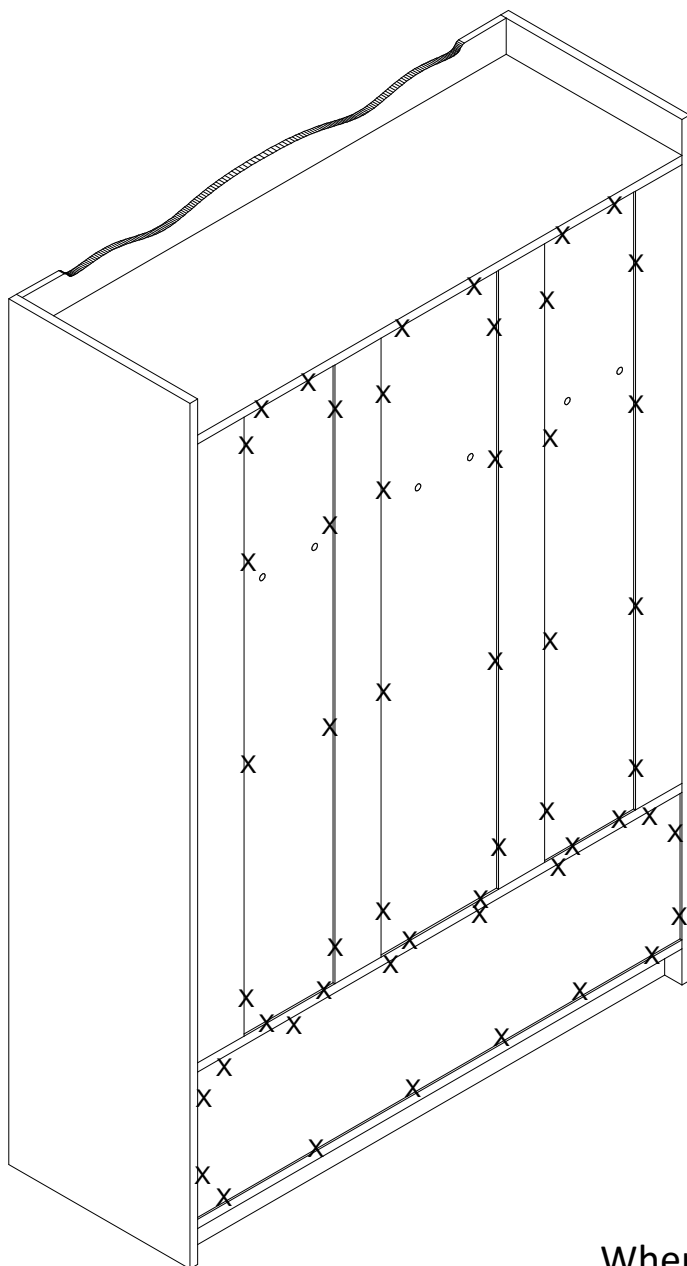

When installation is over , use Back plastic and 3,5x20 screw for safety back panels.  
Fix to singed "X" points.

