


Assembly instructions

Base without storage

[90 x 190]

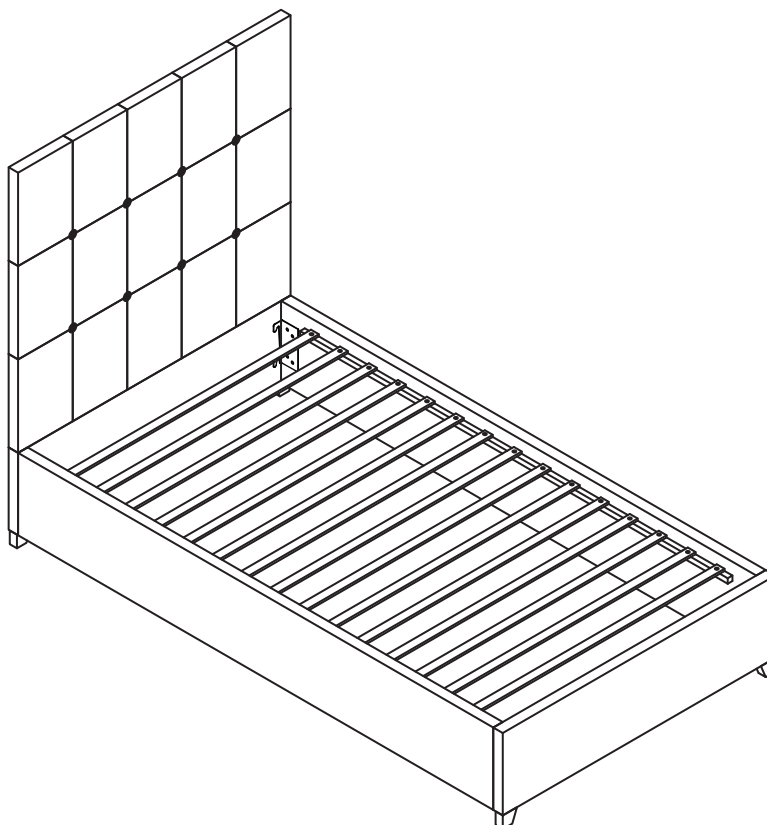


IMPORTANT


1. PLEASE CHECK THAT ALL PARTS ARE PRESENT BEFORE YOU START THE ASSEMBLY OF YOUR FURNITURE.
2. FOR THE PROTECTION OF YOUR FURNITURE, PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE TO PREVENT ANY DAMAGE.
3. PLEASE PERIODICALLY CHECK ALL FITTINGS AND RE-TIGHTEN AS NECESSARY.

PART LIST


(1) Headboard x 1pc

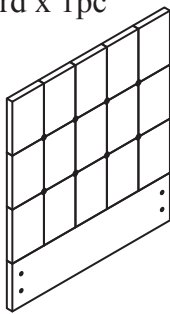


(2) Footboard x 1pc

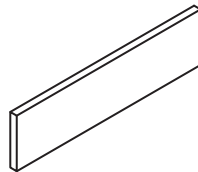


(3) Side Rail x 2pcs

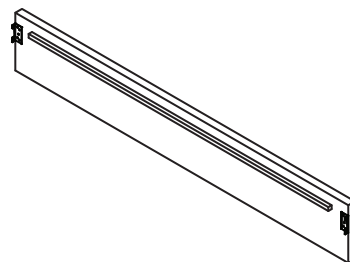

(4) Legs x 4pcs



(5) Slats x 1pc

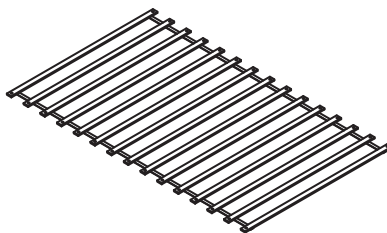

HARDWARE LIST

(A) Bolt M8 x 30mm x 8pcs



(B) Bolt M8 x 50mm x 4pcs



(C) Spring Washer x 8pcs



(D) Flat Washer x 12pcs




(E) Allen Key M5 x 1pc




(F) Bolt M4 x 25mm x 30pcs



STEP 1

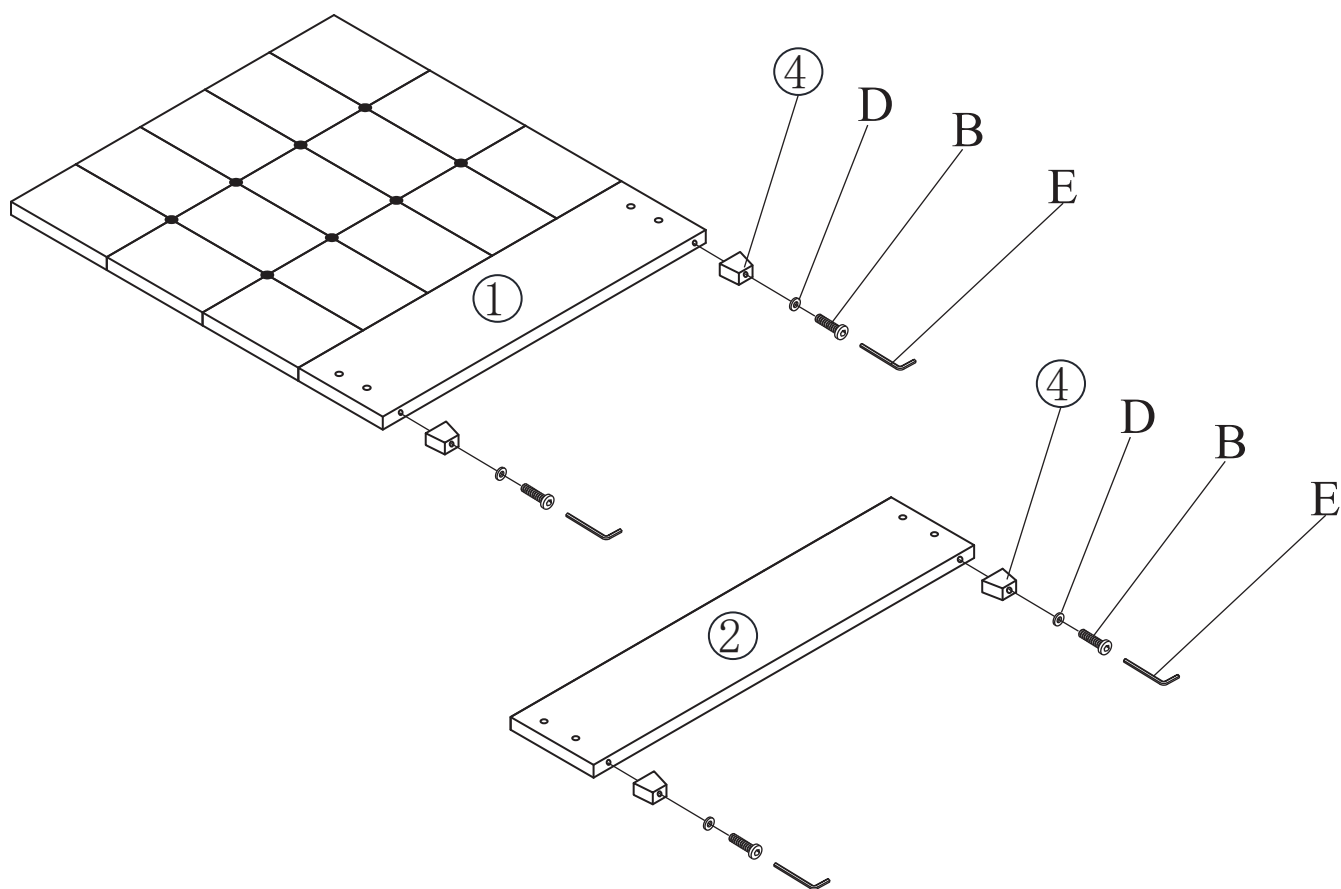


STEP 2

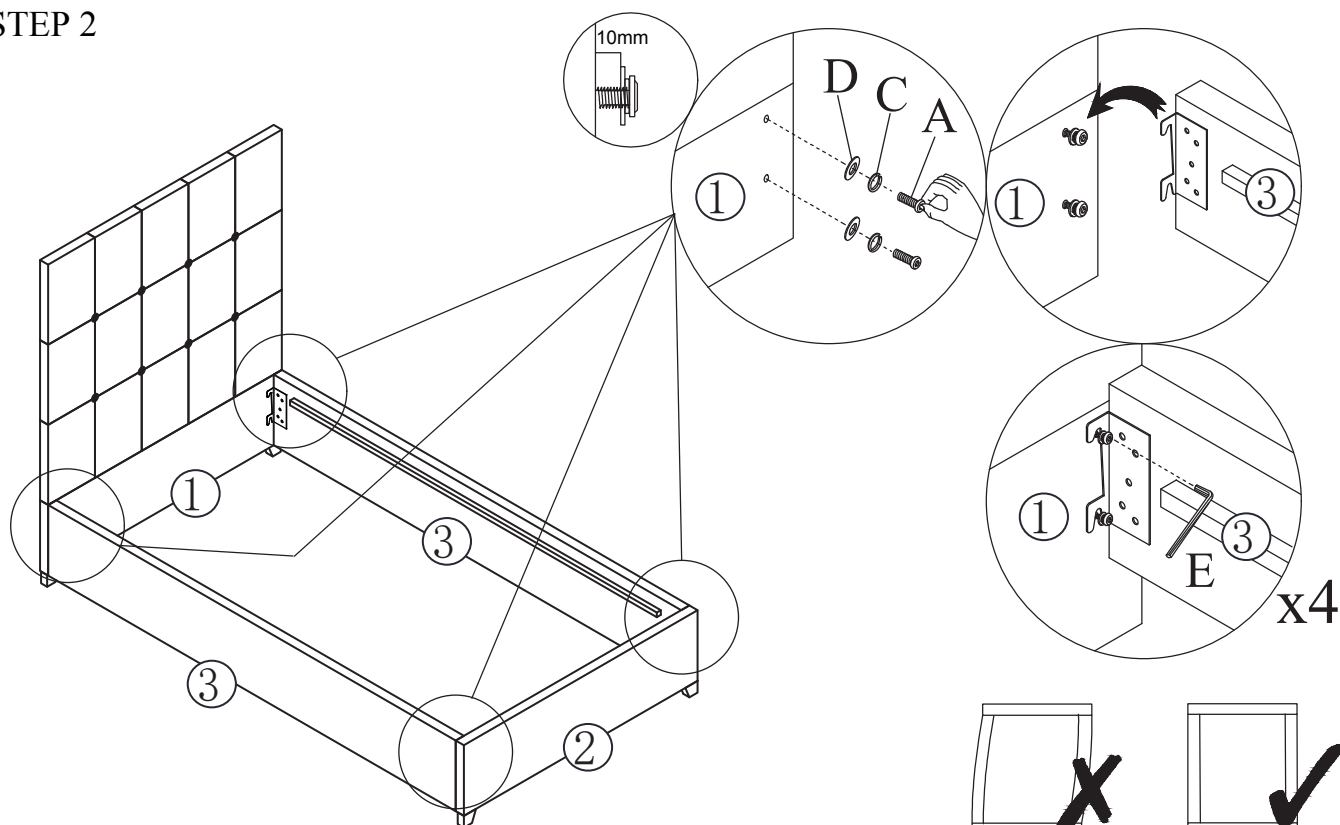

! Ensure bed frame is square

STEP 3

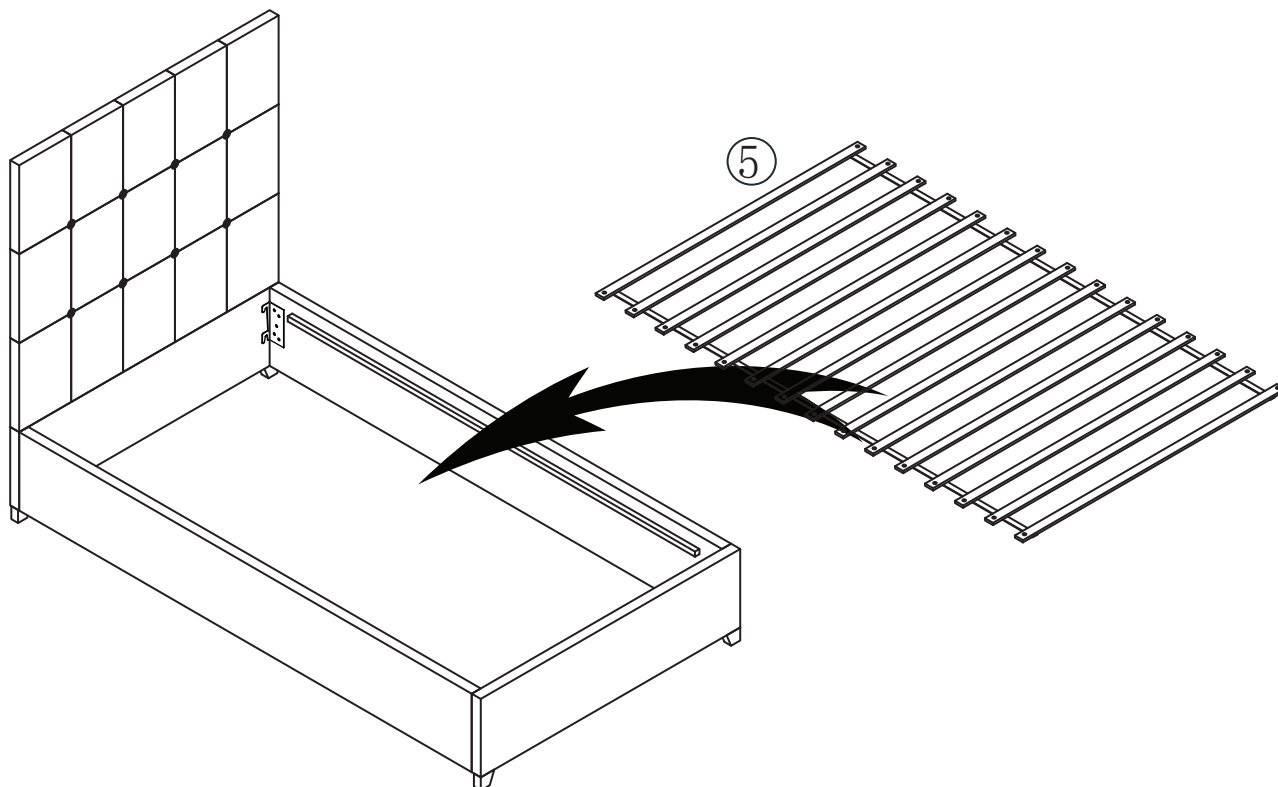

STEP 4

