


# Assembly instructions

## Noam bed with under bed

[90 x 190]

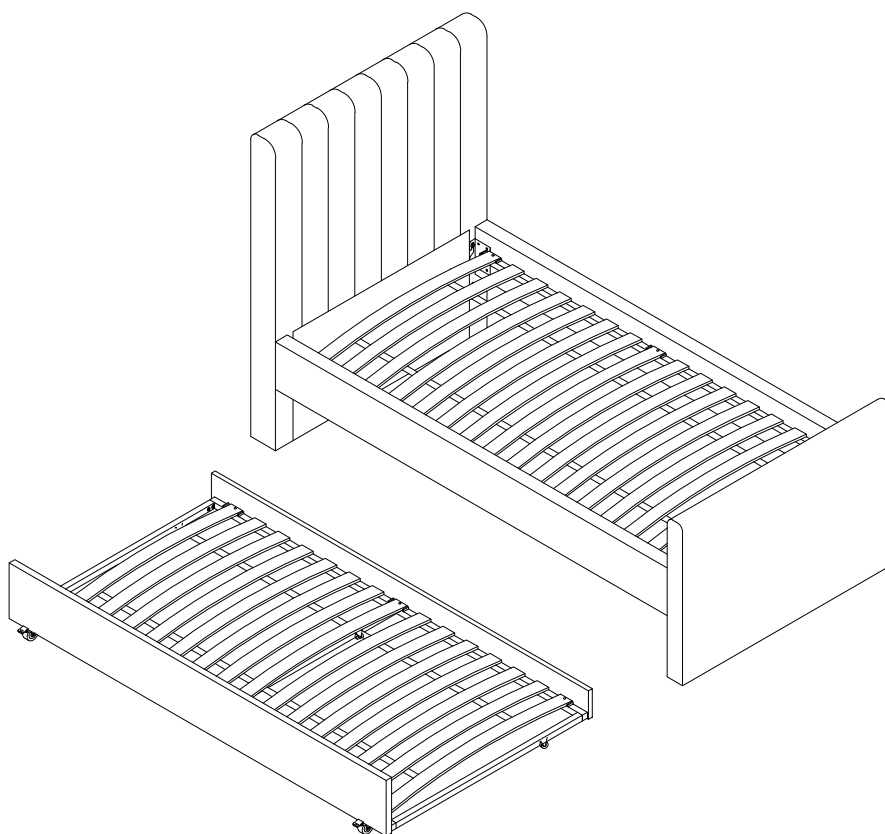


### IMPORTANT


- 1.PLEASE CHECK THAT ALL PARTS ARE PRESENT BEFORE YOU START THE ASSEMBLY OF YOUR FURNITURE.
- 2.FOR THE PROTECTION OF YOUR FURNITURE,PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE TO PREVENT ANY DAMAGE.
- 3.PLEASE PERIODICALLY CHECK ALL FITTINGS AND RE-TIGHTEN AS NECESSARY.

## PART LIST


(1) Headboard x 1pc

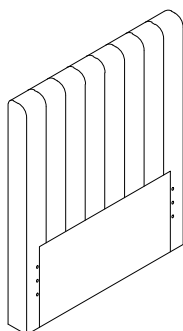


(2) Footboard x 1pc

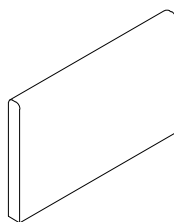


(3) Slats x 2pcs

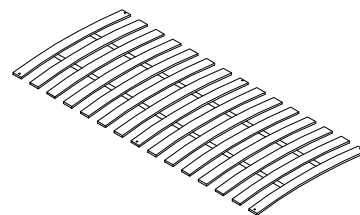


(4) Side Rail x 2pcs

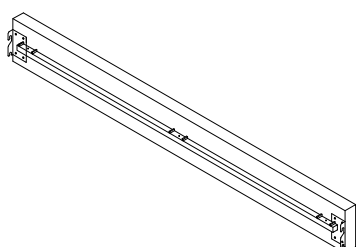


(5) x 1pc

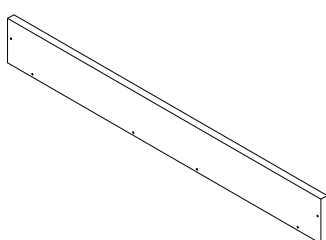


(6) x 1pc

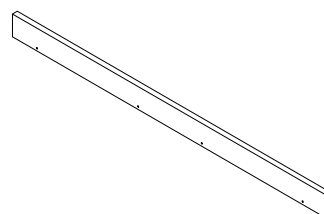

(7) x 1pc

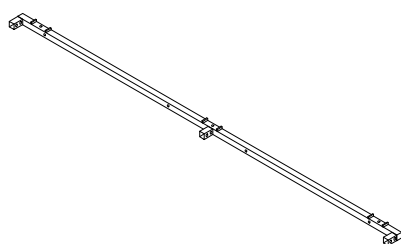


(8) x 1pc

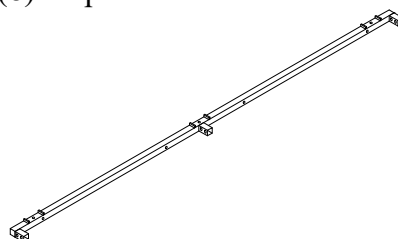


(9) x 2pcs




(10) x 1pc

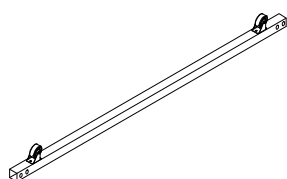

(11) x 1pc

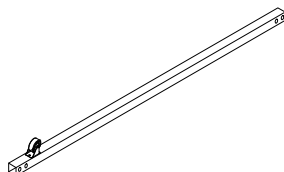

(12) x 1pc

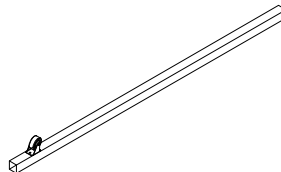


(13) x 2pcs



## HARDWARE LIST

(A) Bolt M8 x 20mm  
x 16pcs



(B) Slat Pin x 12pcs




(C) Spring Washer  
x 32pcs




(D) Flat Washer x 32pcs



(E) Allen Key M5 x 1pc




(F) Bolt M8 x 45mm  
x 8pcs




(G) Spanner x 1pc




(H) Bolt M8 x 30mm  
x 8pcs




## STEP 1

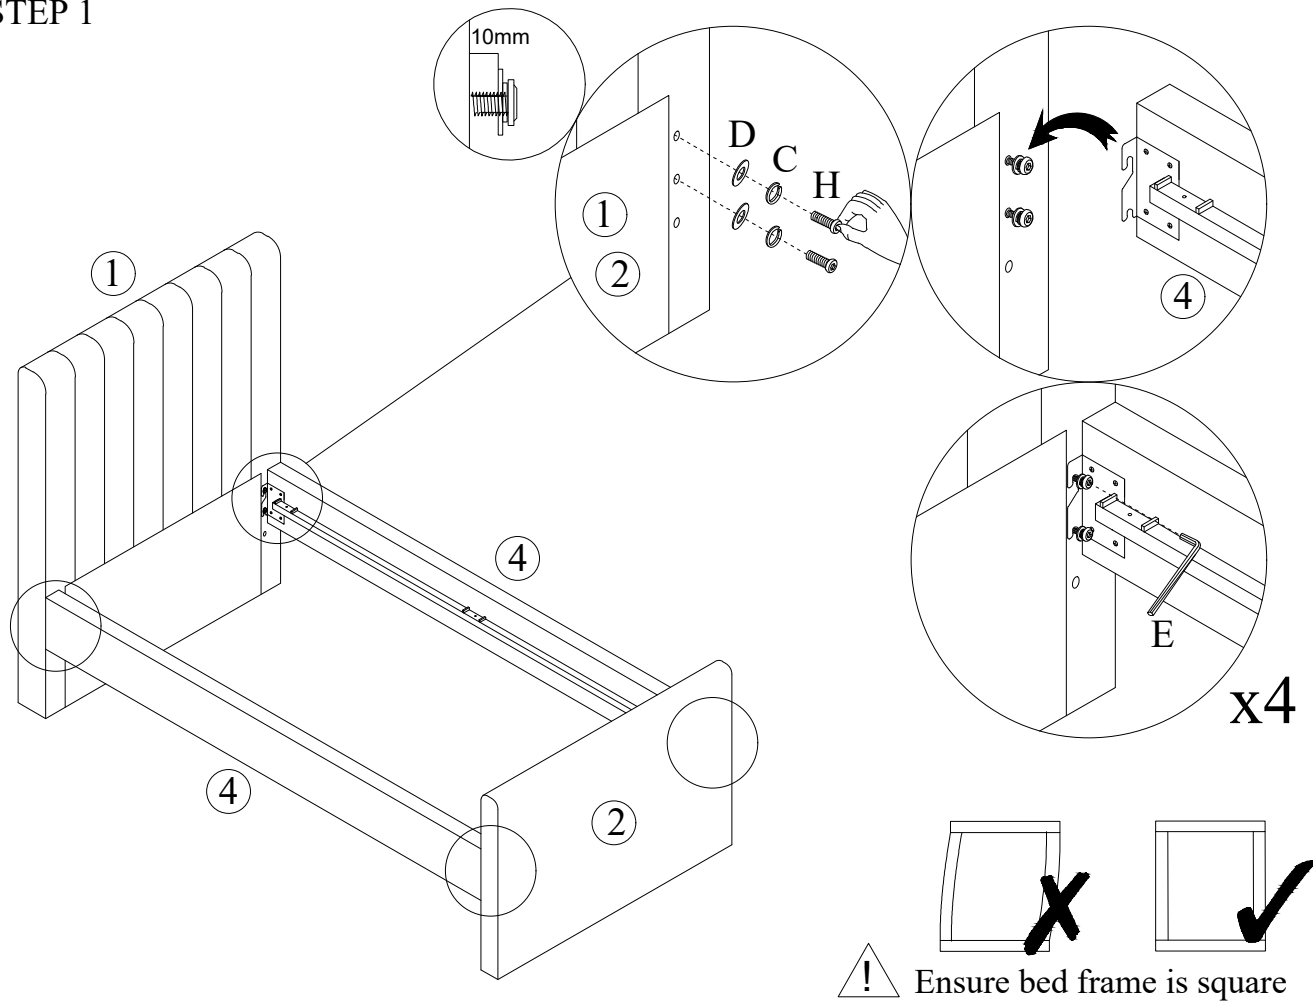


## STEP 2

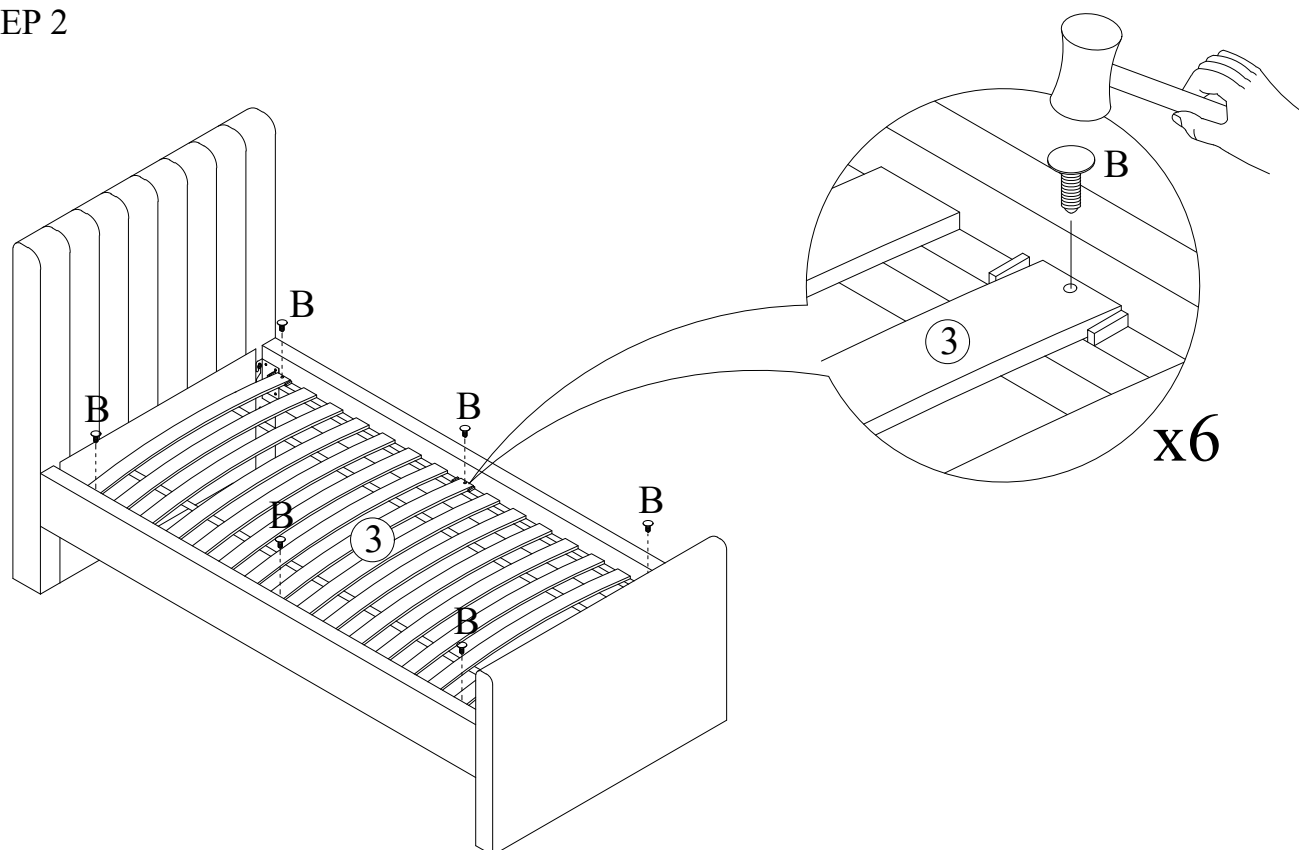


### STEP 3

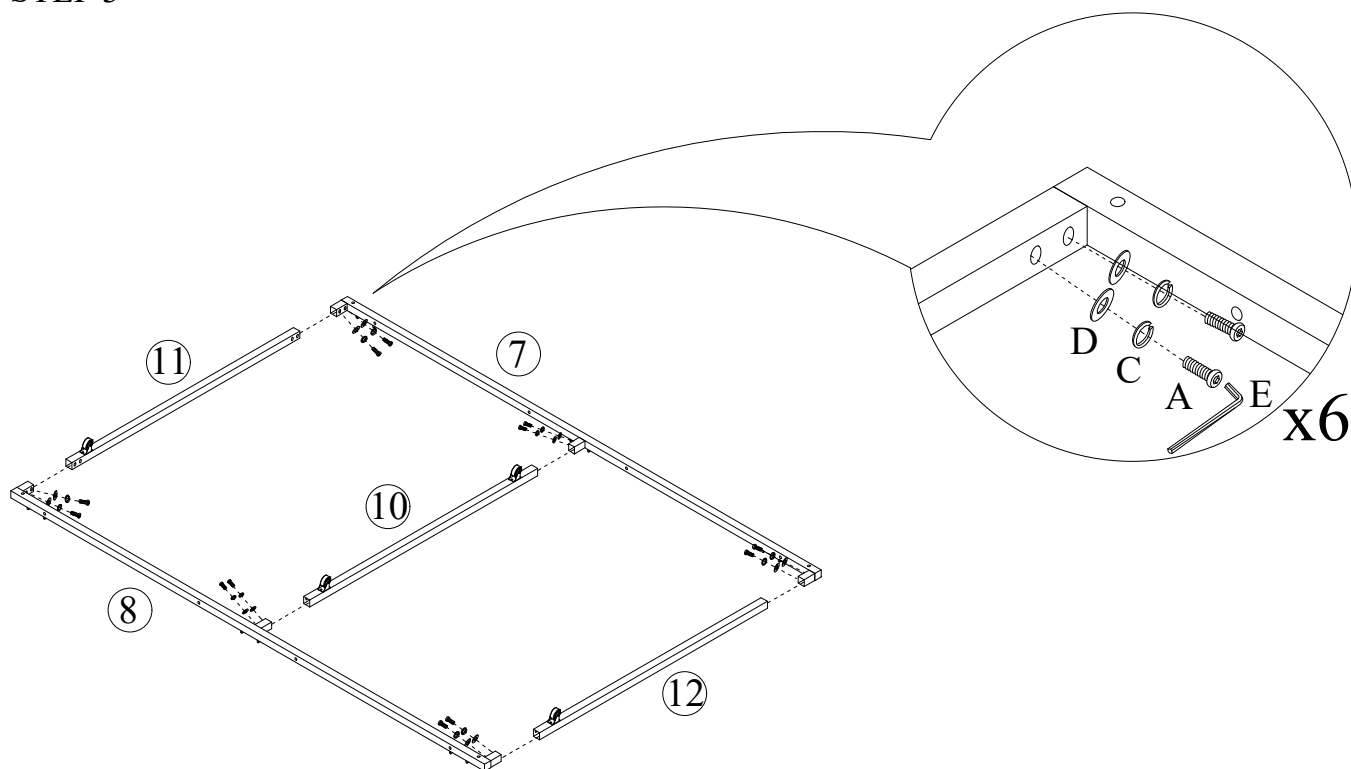


### STEP 4

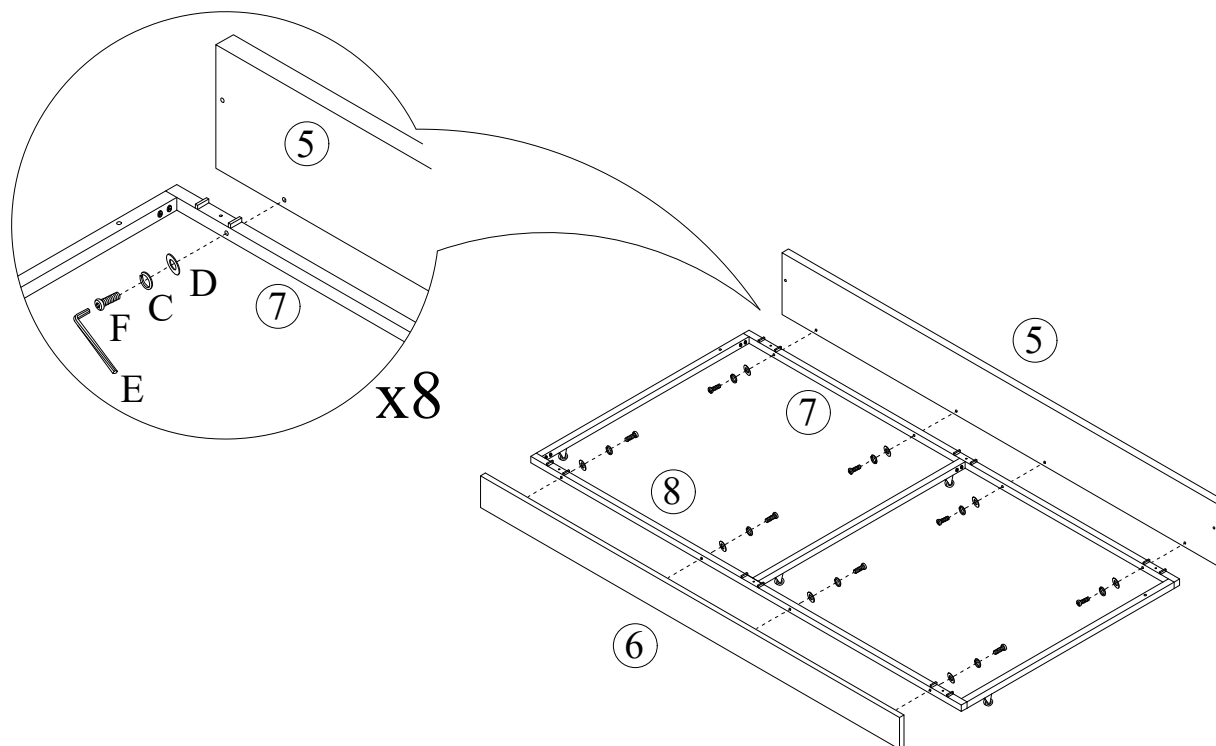


# STEP 5

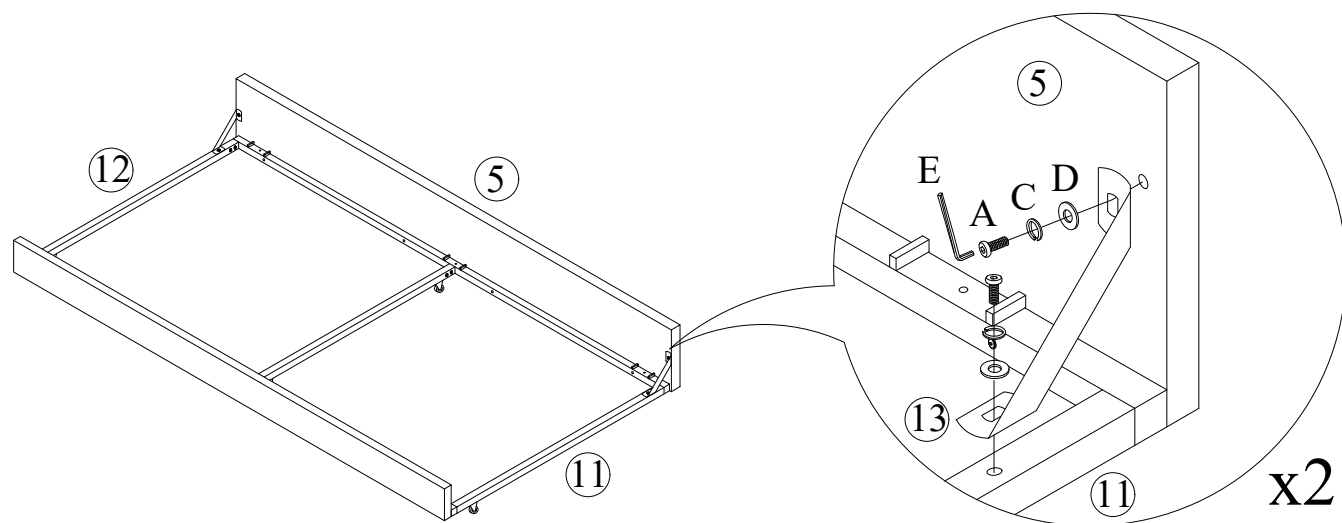

# STEP 6

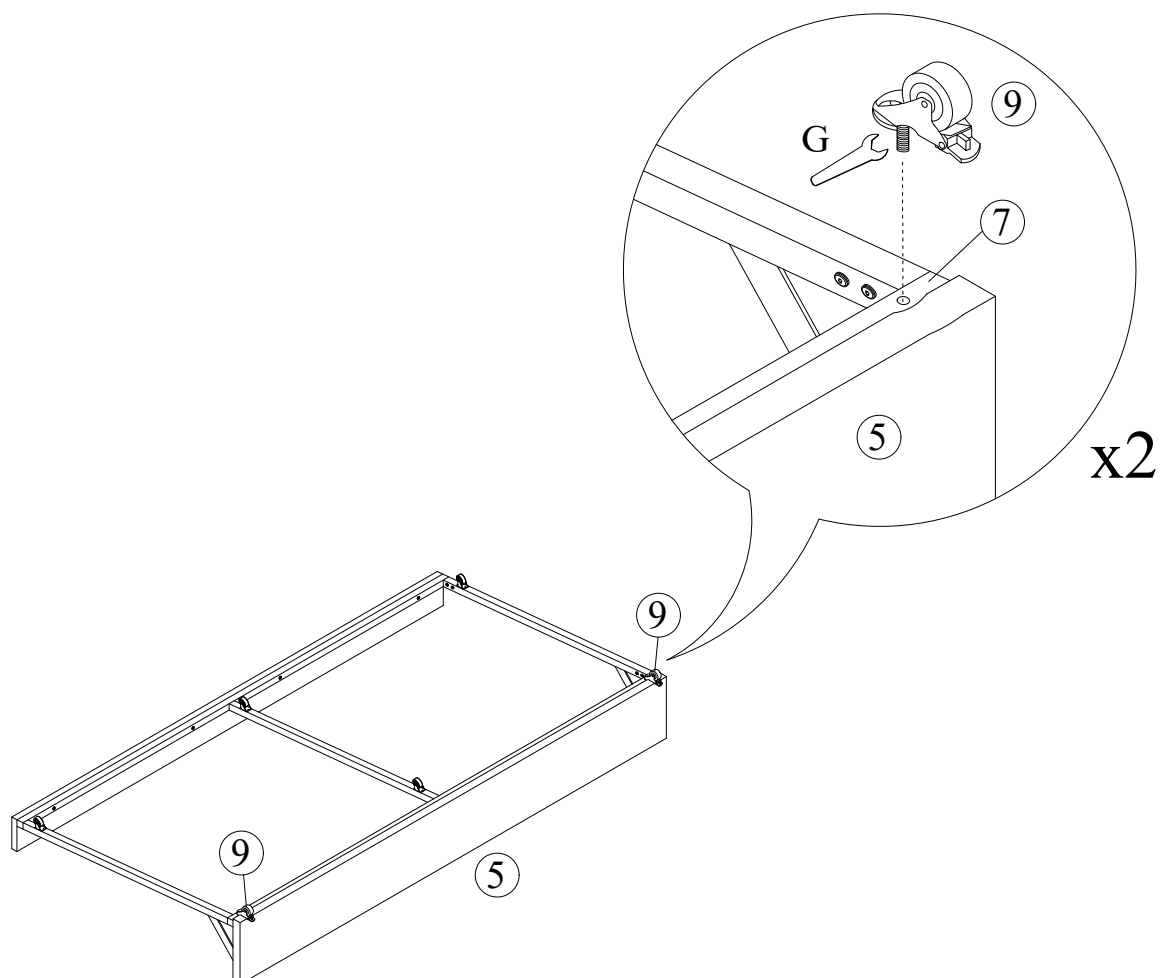

## STEP 7

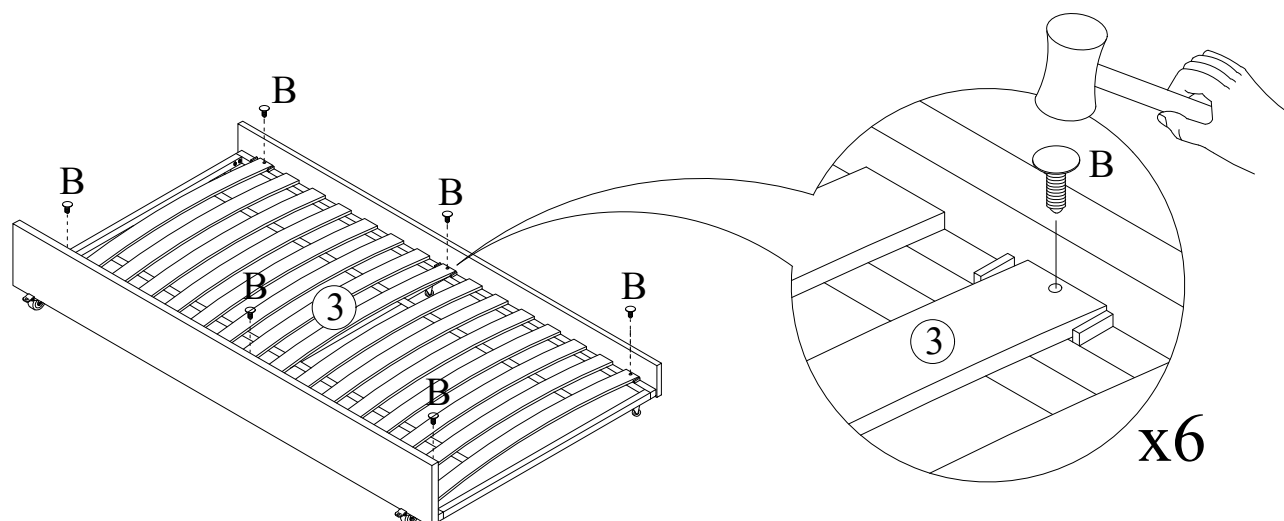

## STEP 8

