
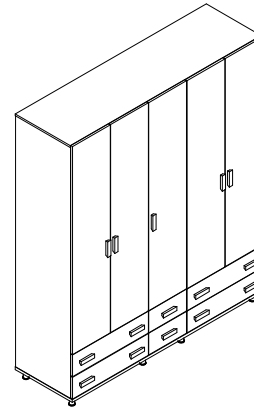


OFFIR 5 KAPAKLI DOLAP MONTAJ TALIMATI
OFFIR 5 DOORS WARDROBE INSTALLATION INSTRUCTIONS

PARCA LISTESİ - PIECE LIST

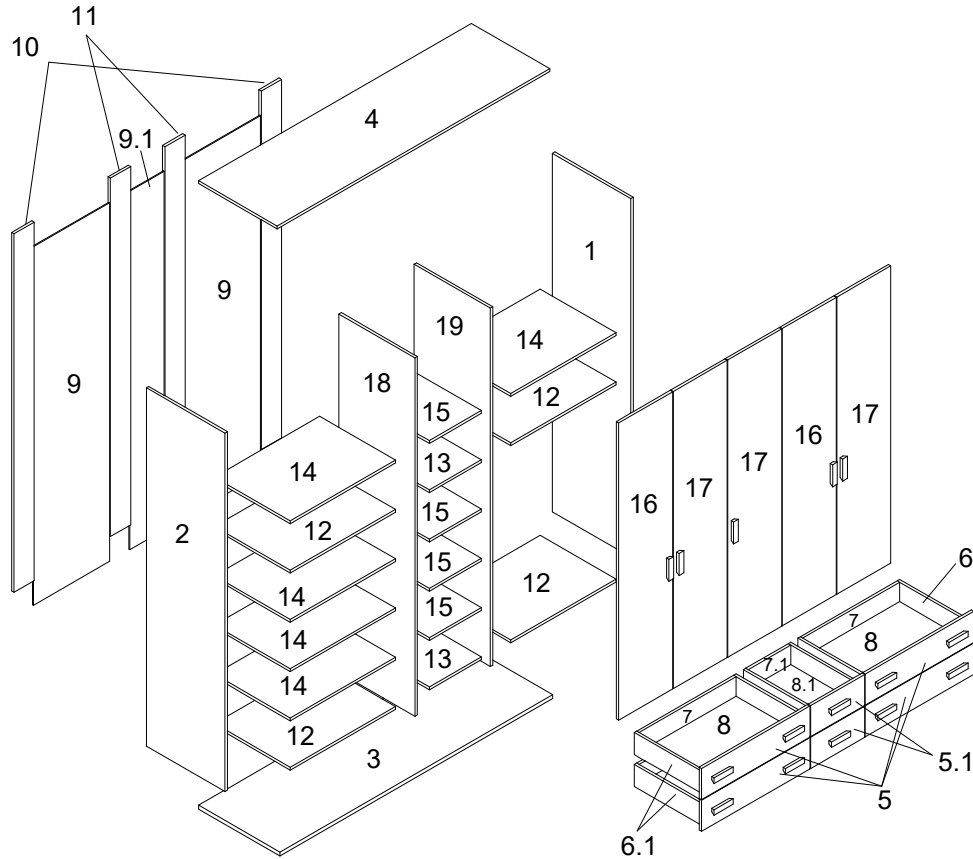

1





Modul Name



OFFIR 5 DOORS WARDROBE

AKSESUAR LISTESİ - ACCESSORIES LIST

A		B		C		D		E	3,5x20	F		G	
96-Pcs		80-Pcs		40-Pcs		96-Pcs		188-Pcs		6-Set		5-Pcs	
H	3,5x30	I		J		K		L		M		N	
5-Pcs		24-Pcs		12-Pcs		8-Pcs		20-Pcs		15-Pcs		24-Pcs	
O		P		R		S		T	4x22	U			
8-Pcs		36-Pcs		1-Pc		2-Pcs		30-Pcs		8-Pcs			


EKSIK PARÇA VE AKSESUAR DURUMUNDA MONTAJ TALIMATINDA BELİRTİLEN KODU VE ADI İLE İSTEYİNİZ
IF YOU ARE MISSING PARTS AND ACCESSORIES WANTED CODE AND NAME OF THE SPECIFIED IN THE INSTALLATION INSTRUCTIONS

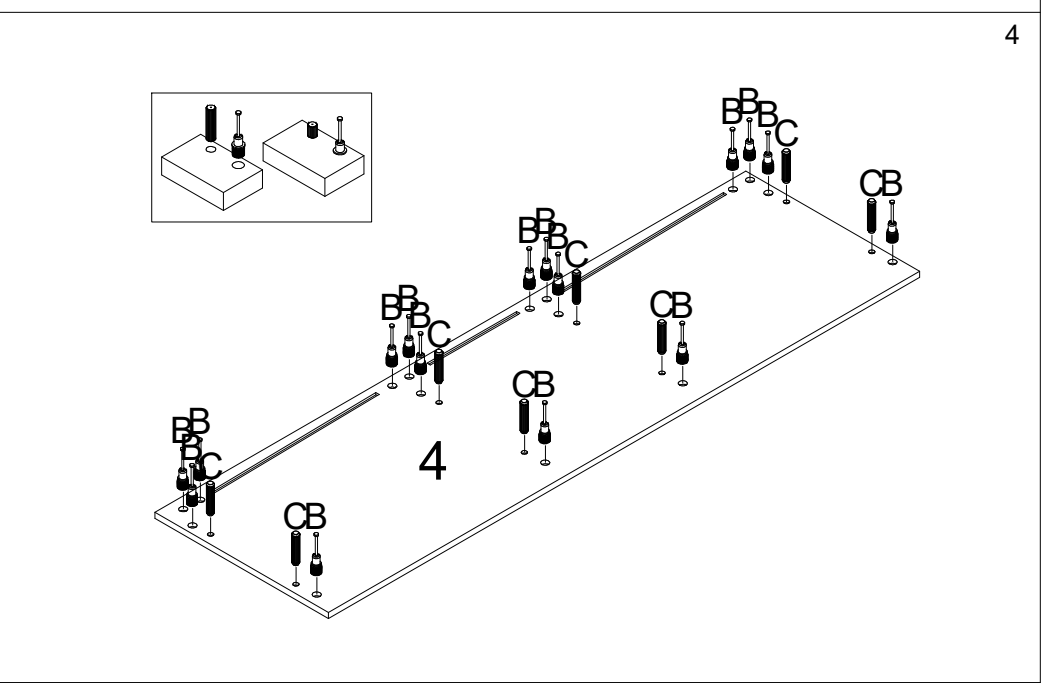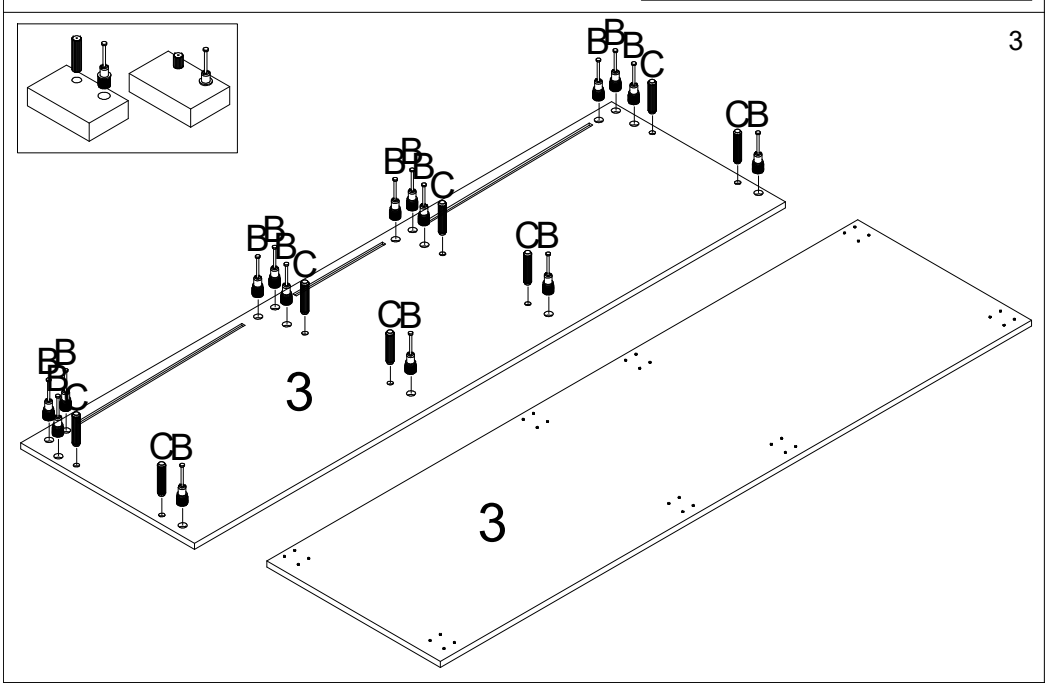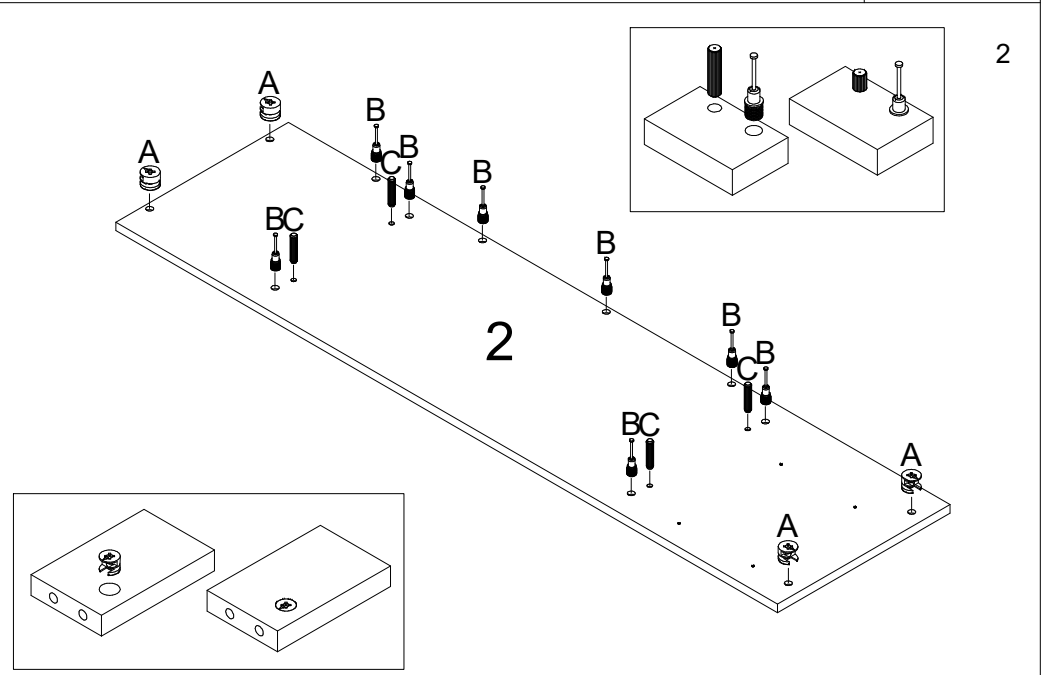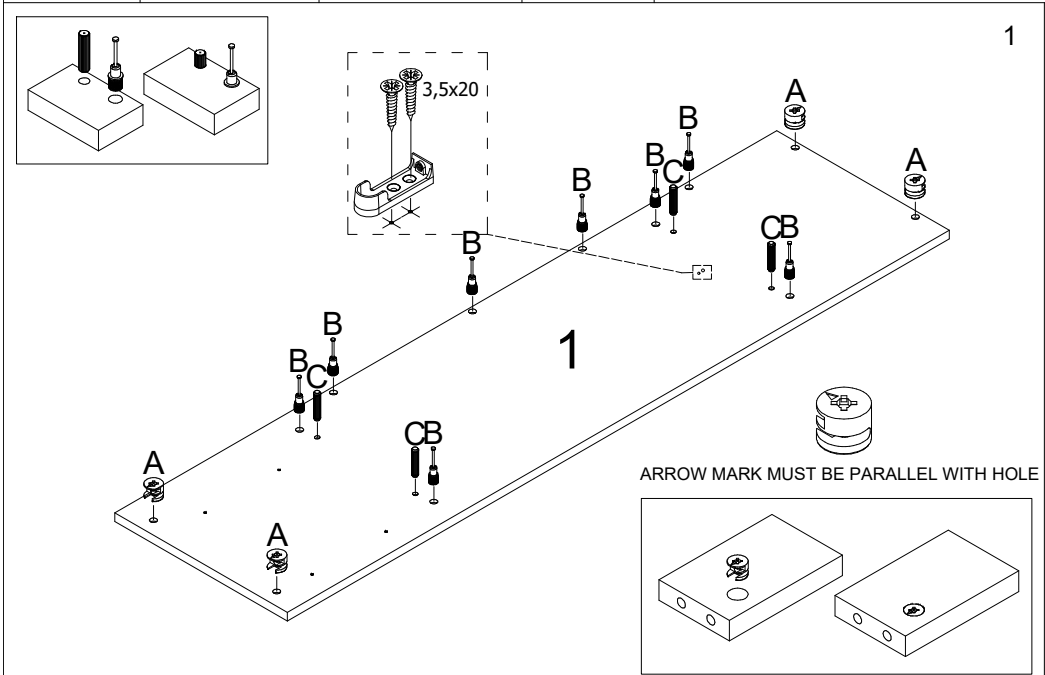




3

5




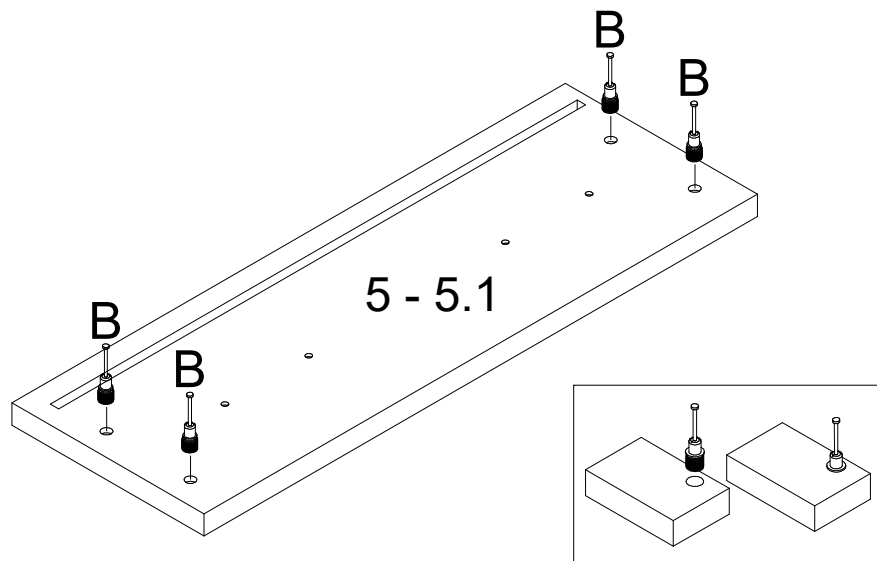




ARROW MARK MUST BE PARALLEL WITH HOLE

6

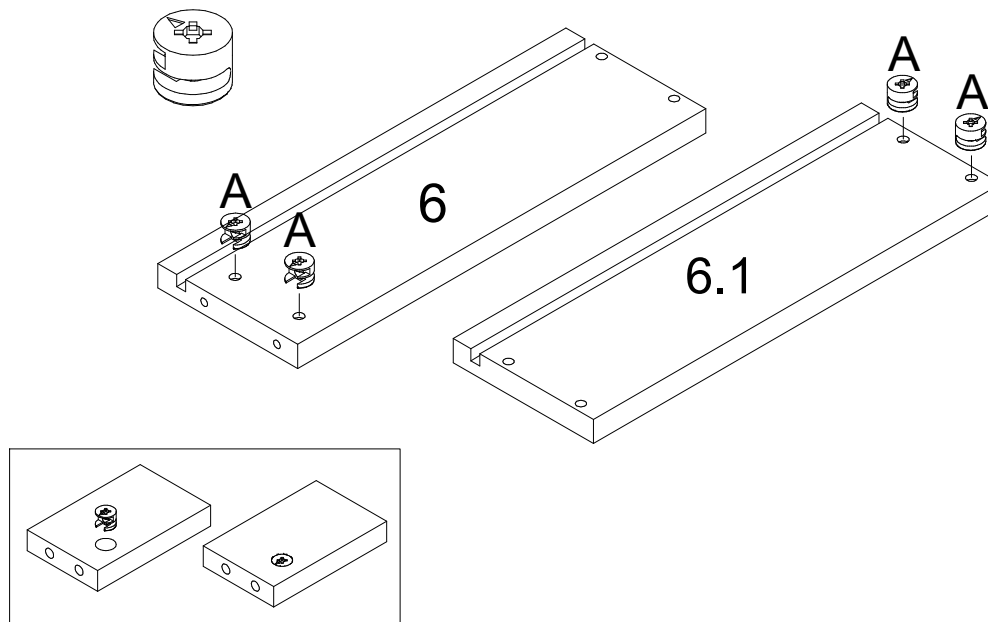


7

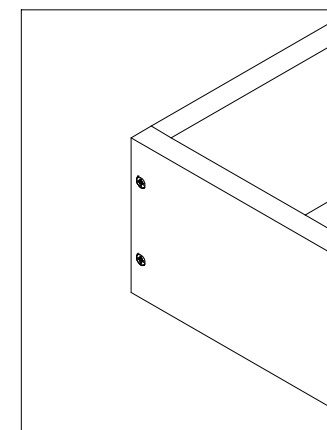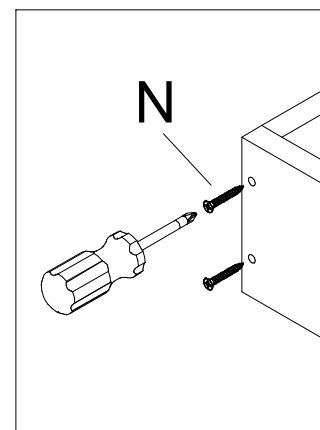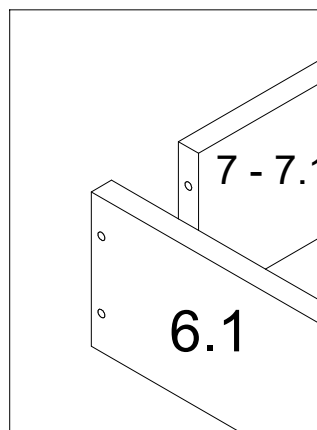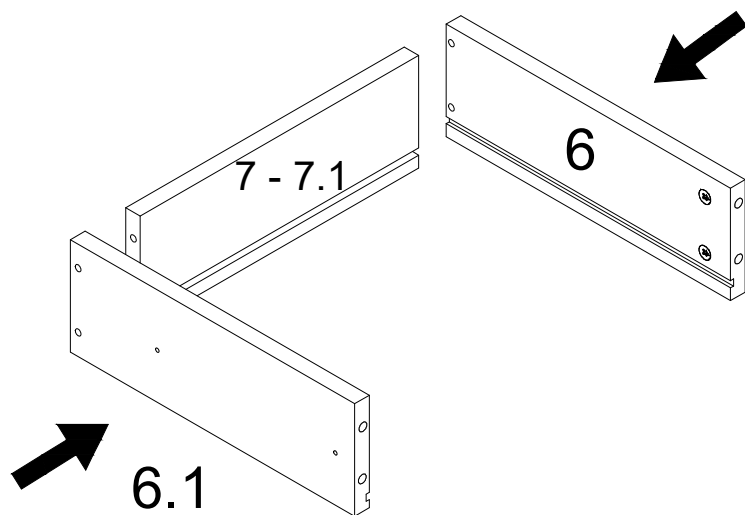




4



8

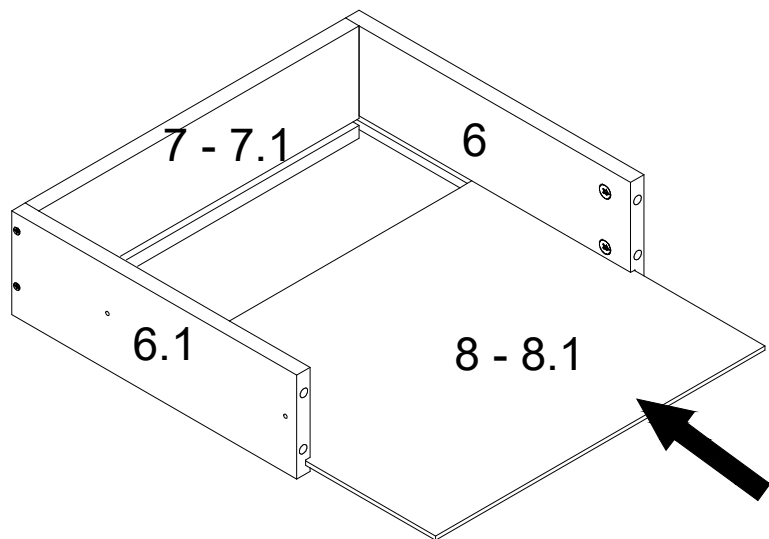


9



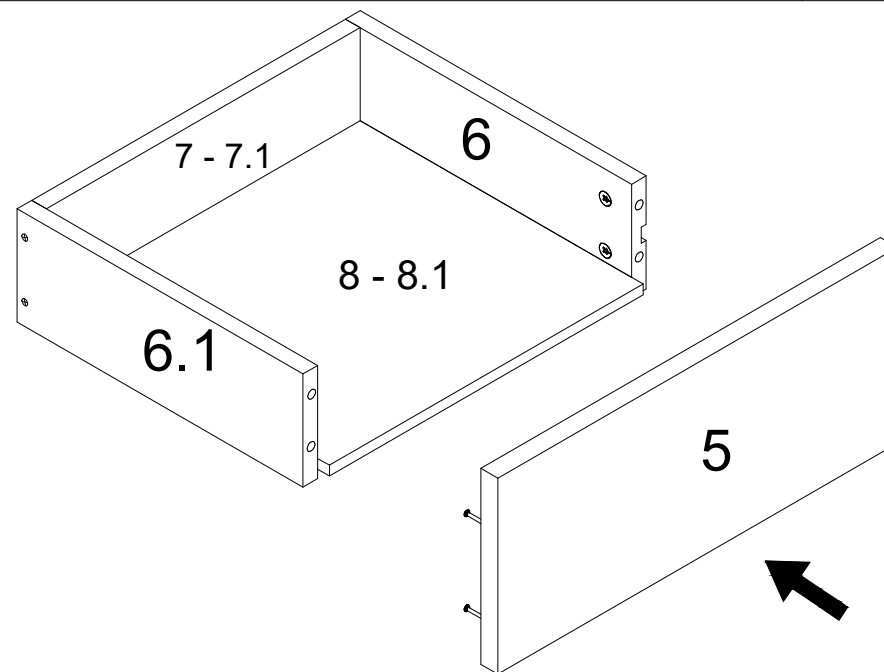


10

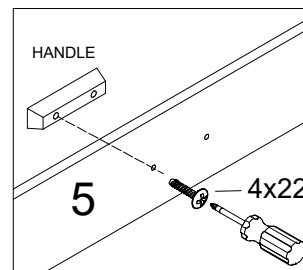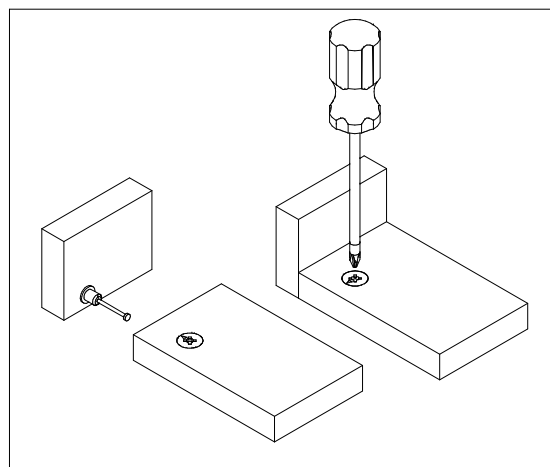


11

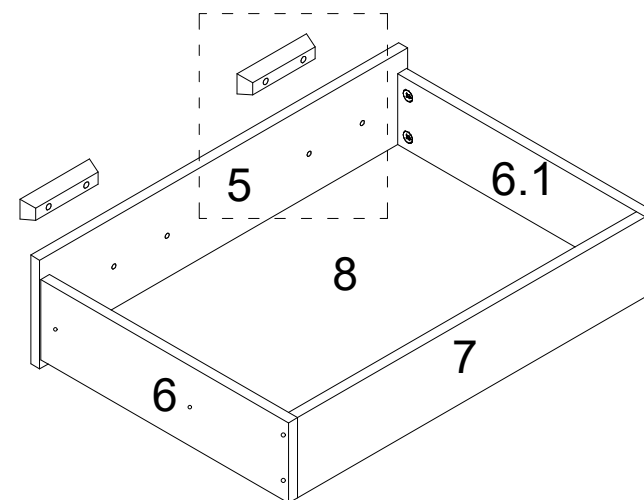




5

BACK-LEFT AND RIGHT SUPPORT

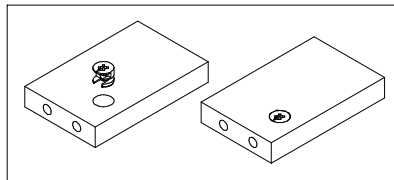

12

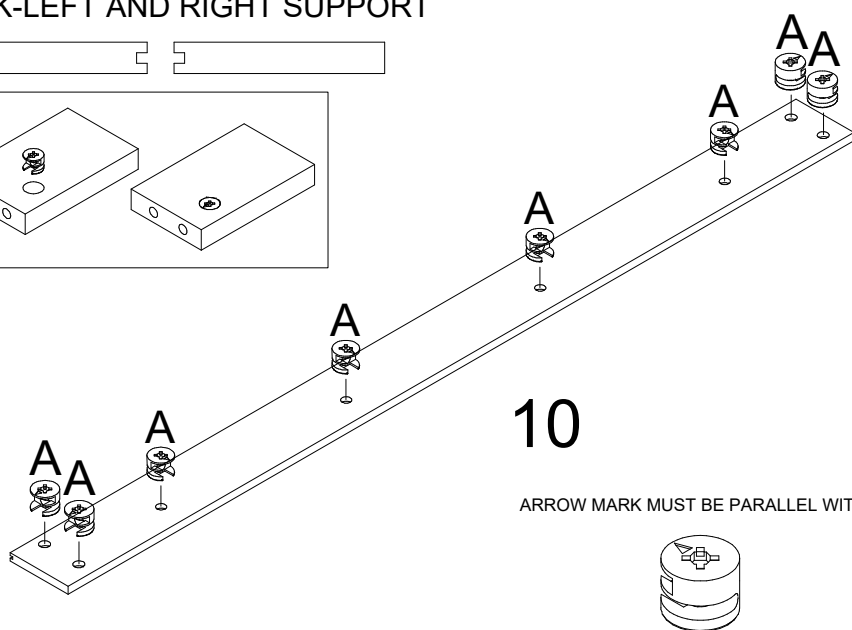



10

ARROW MARK MUST BE PARALLEL WITH HOLE

BACK-MIDDLE SUPPORT



ARROW MARK MUST BE PARALLEL WITH HOLE

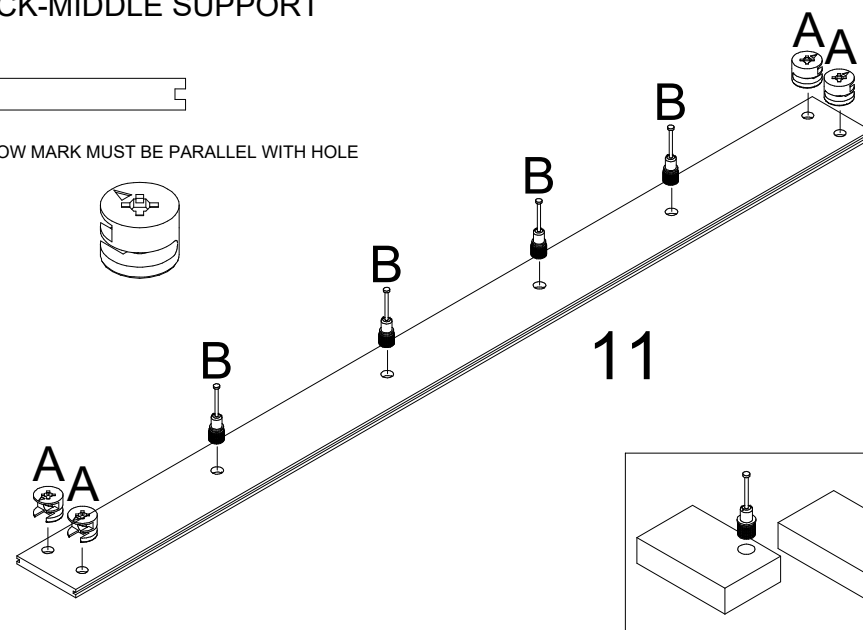


11

13

ARROW MARK MUST BE PARALLEL WITH HOLE


14

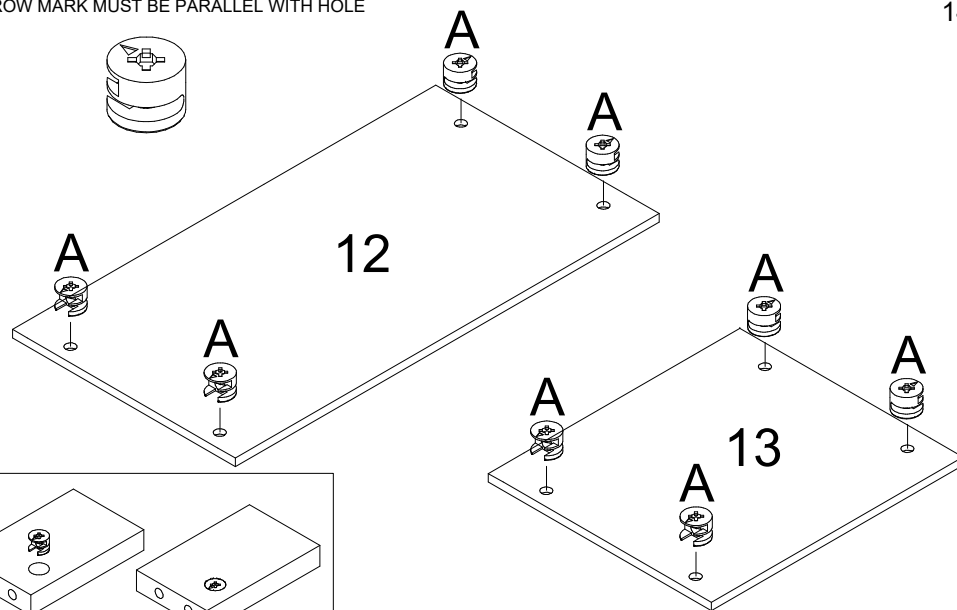



12

13

15

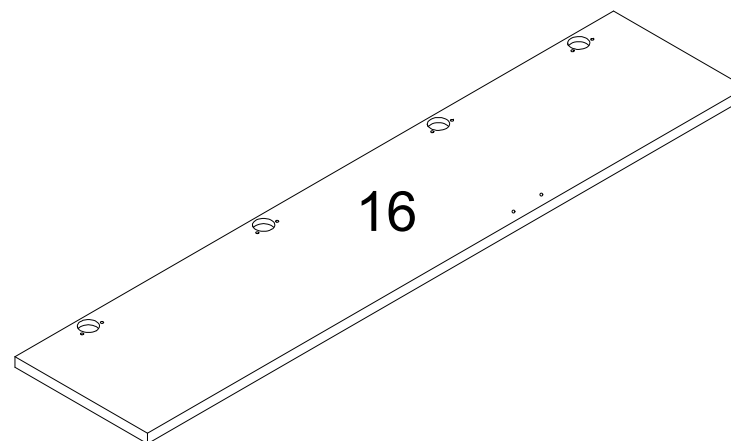


16





6

16

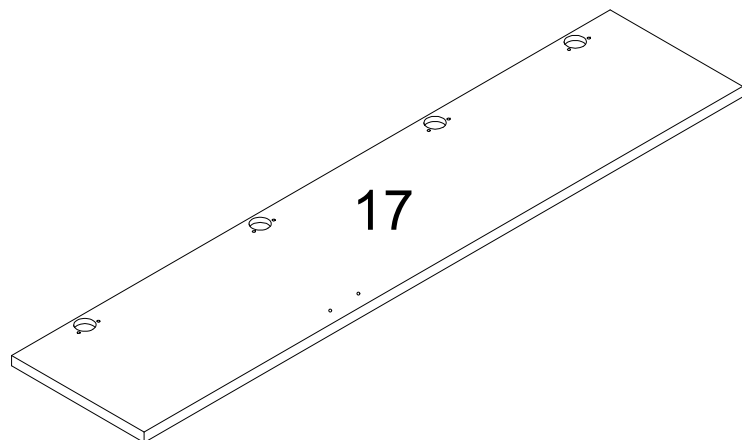


17

LEFT SIDE

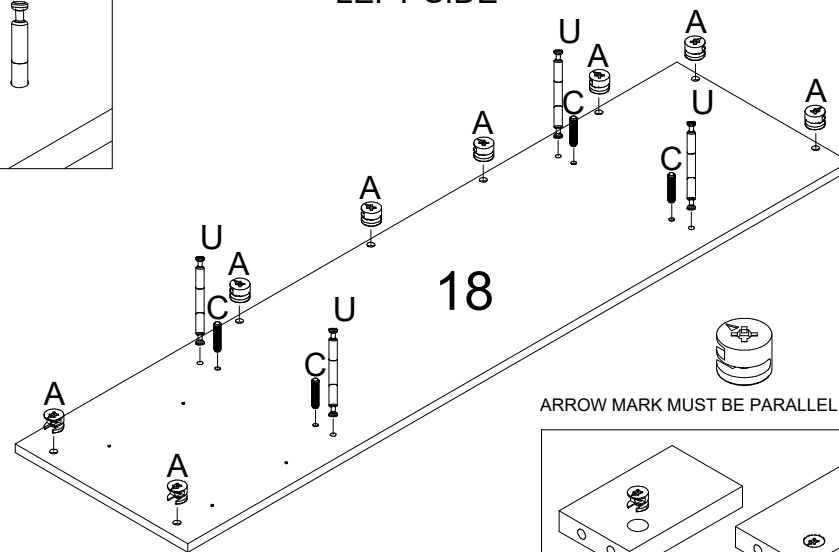
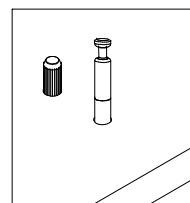


ARROW MARK MUST BE PARALLEL WITH HOLE

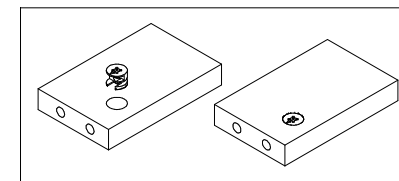




18




RIGHT SIDE

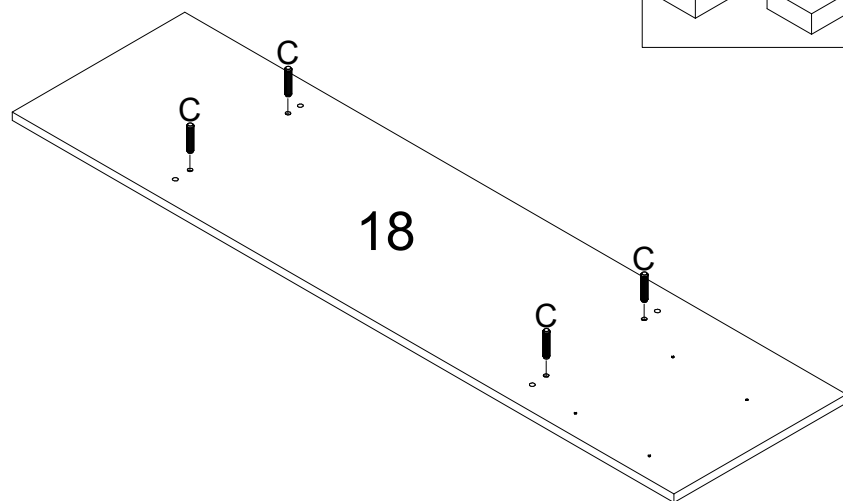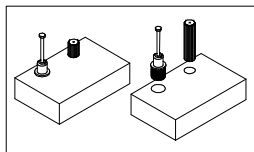

19

RIGHT SIDE

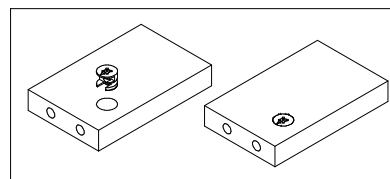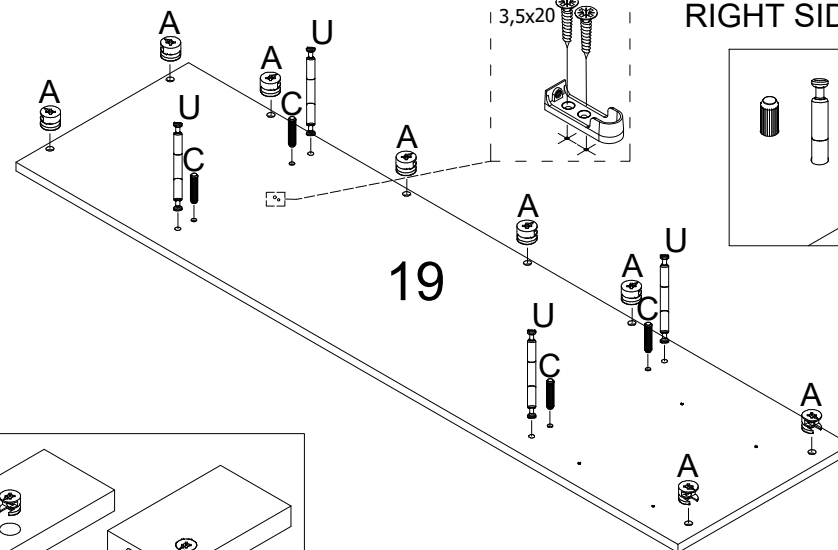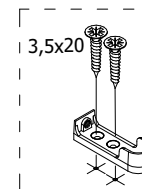





7

LEFT SIDE



20

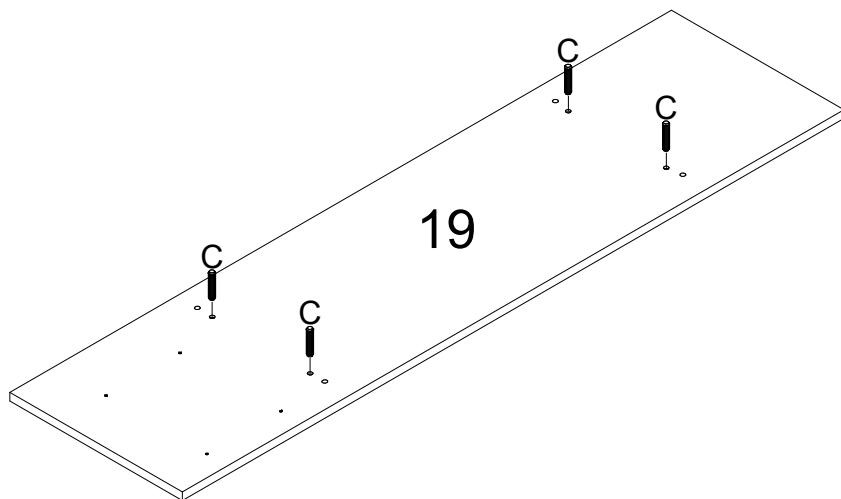



21


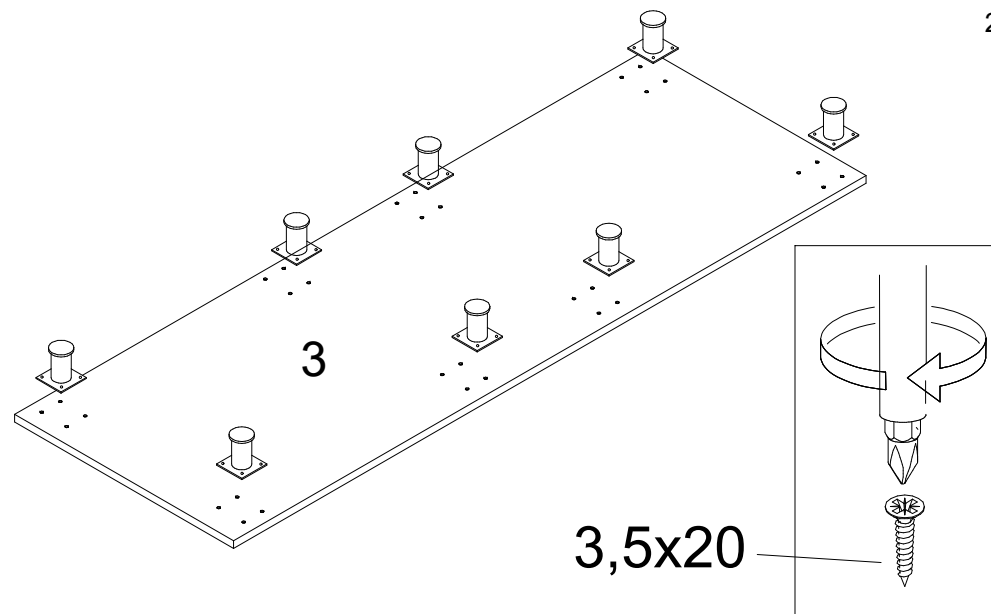


22

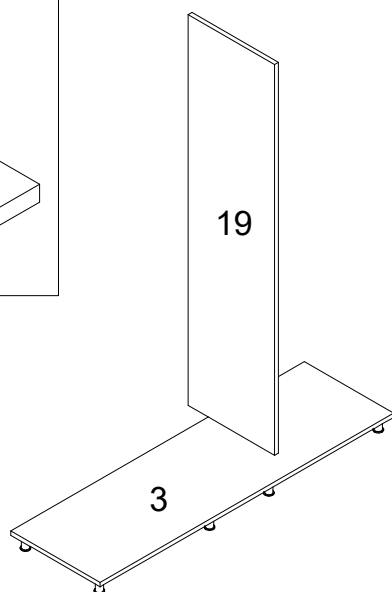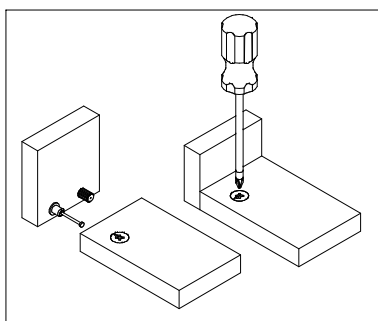


23

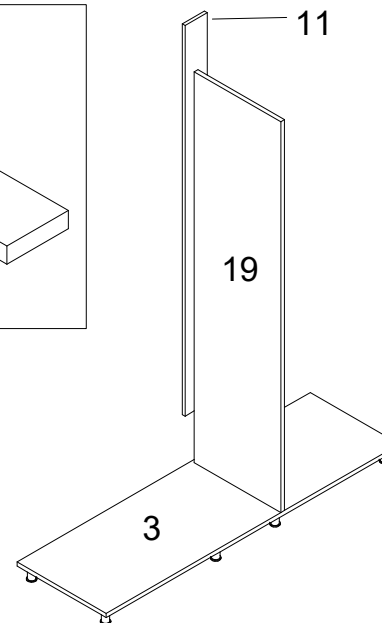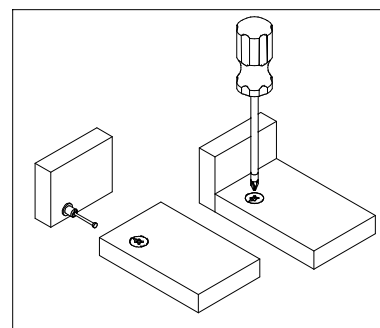





8



24

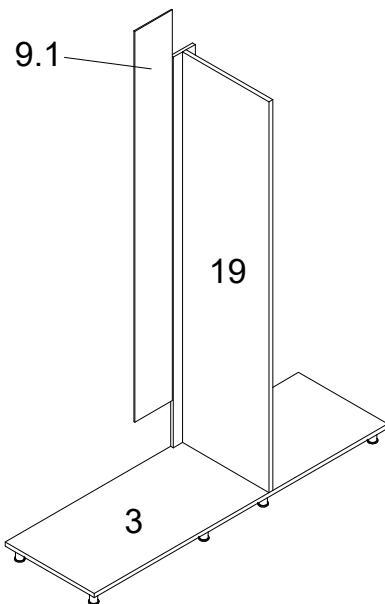



25

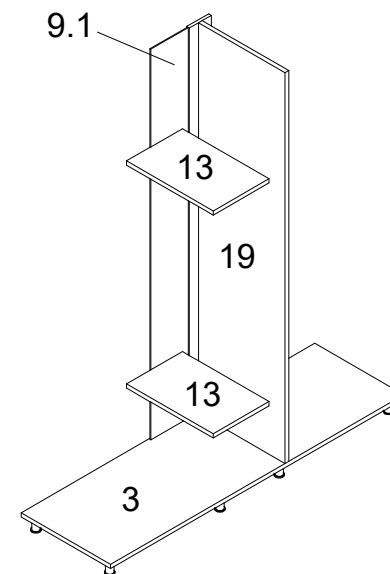
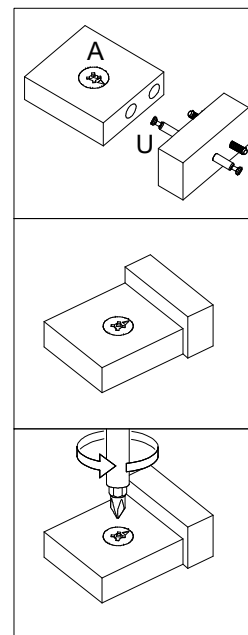


26

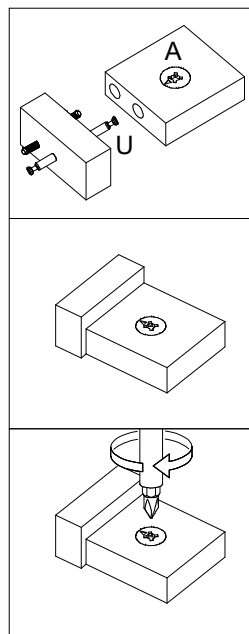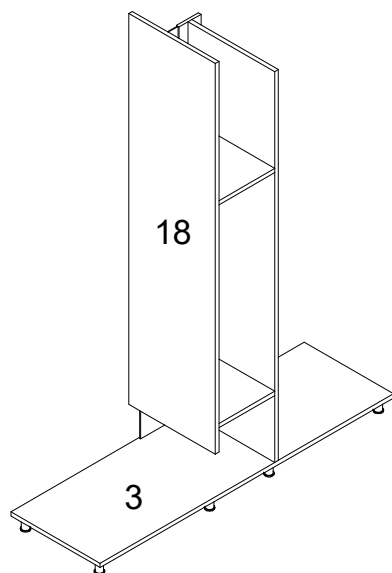


27

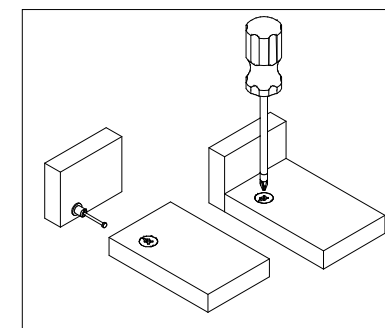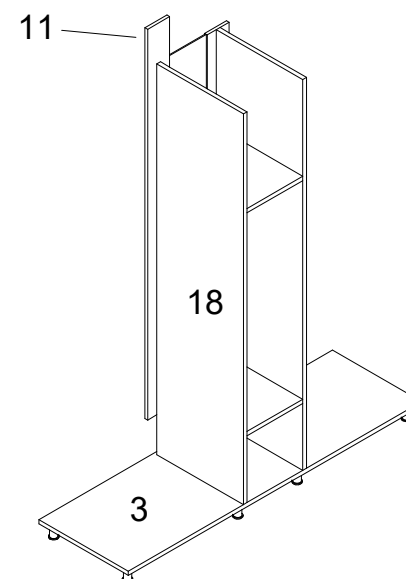






9

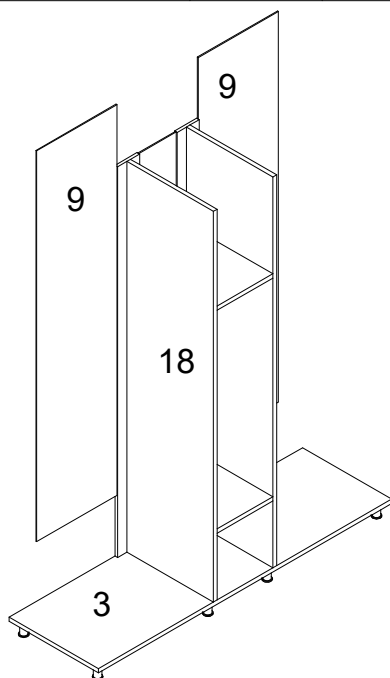



28

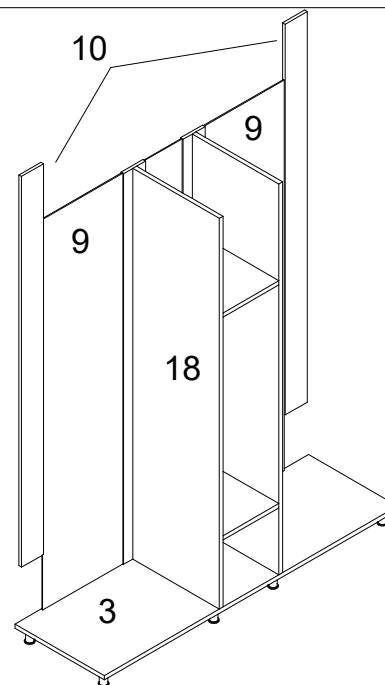


29

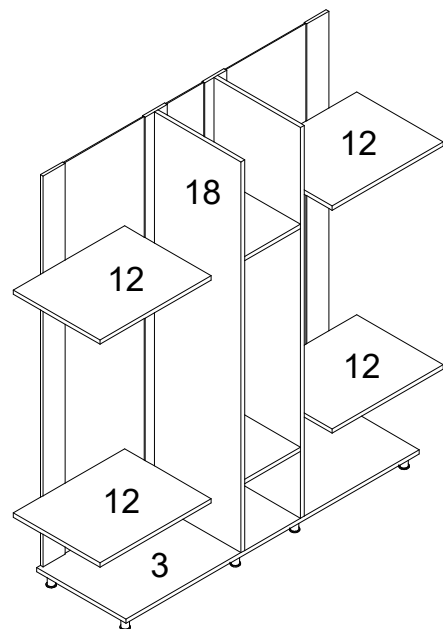
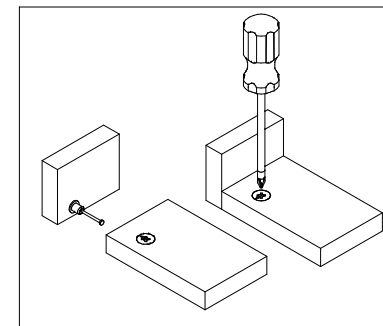


30

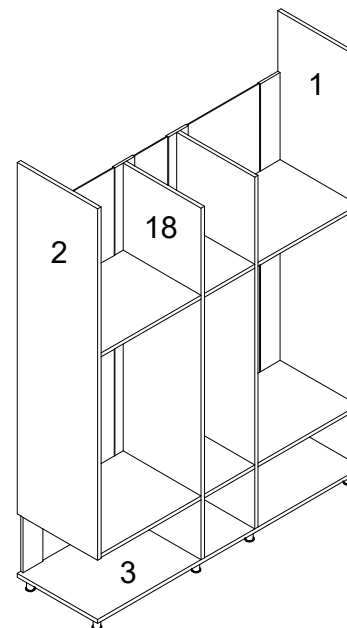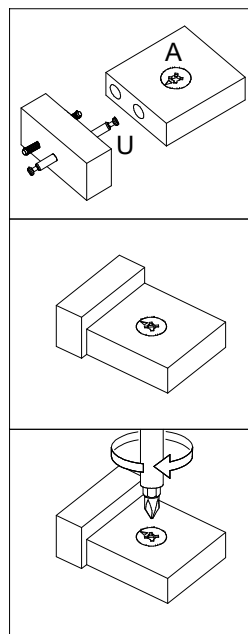



31

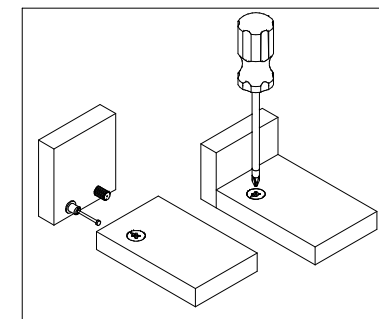





10


32

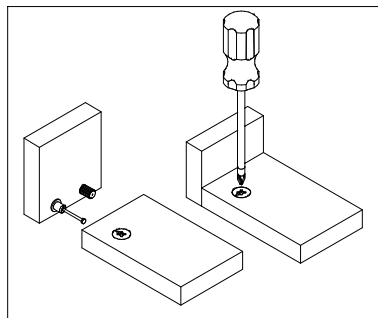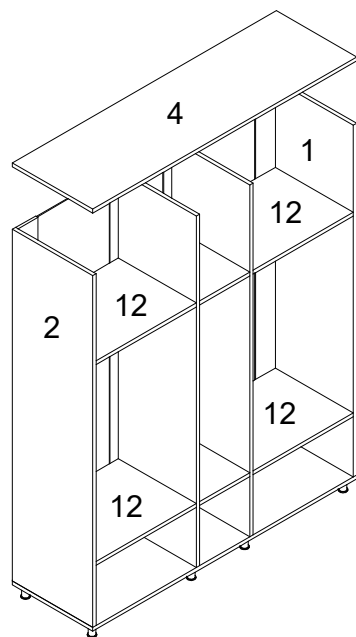



33




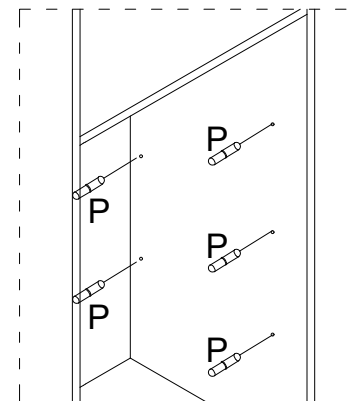
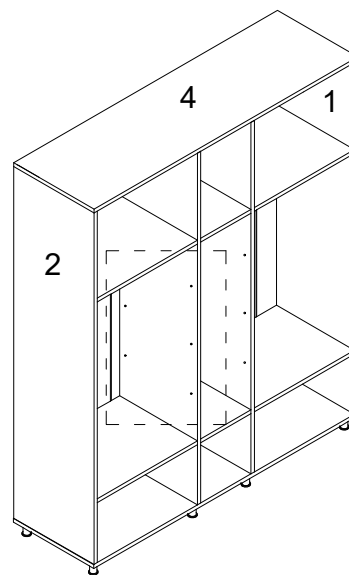


34

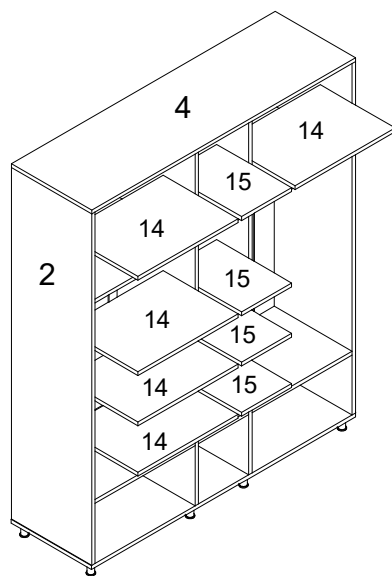






35

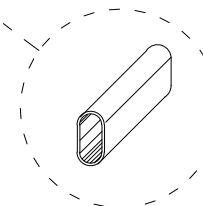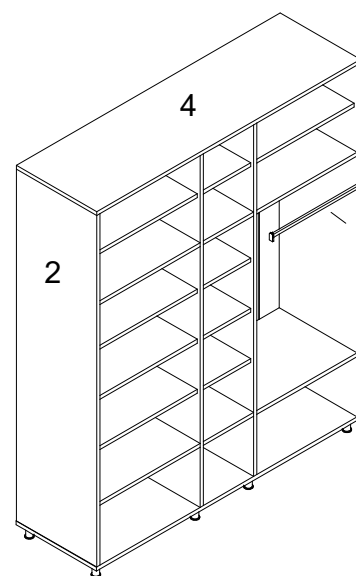

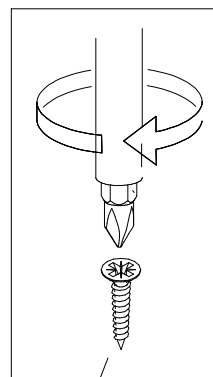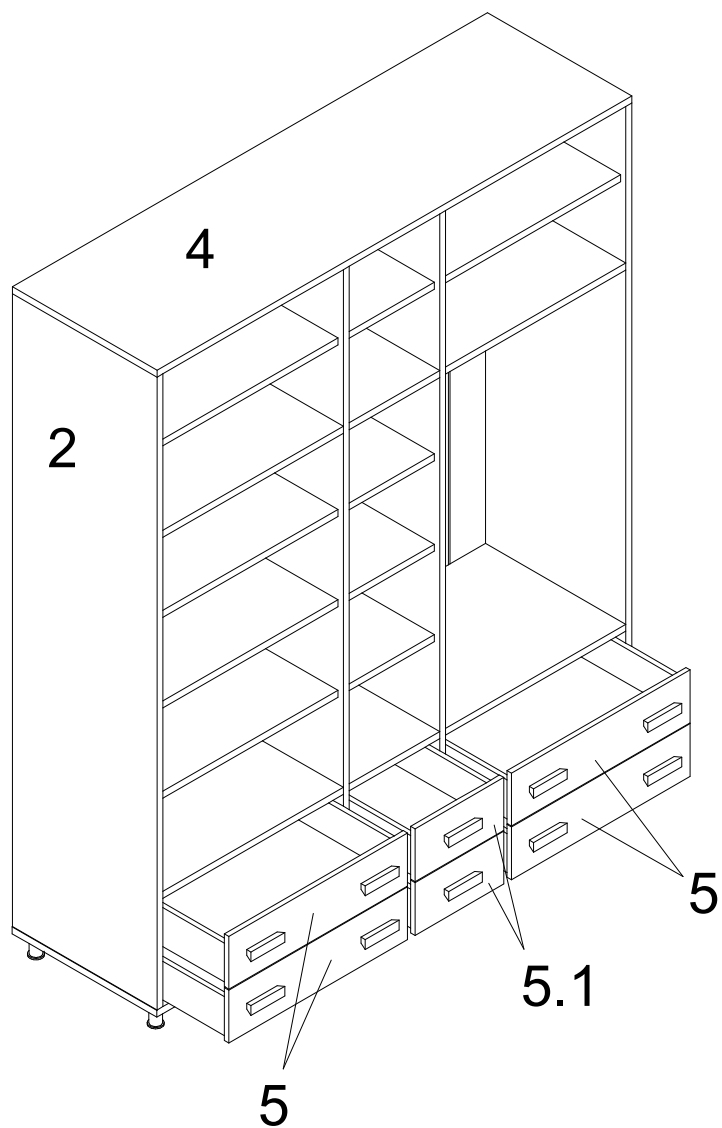


3,5x20

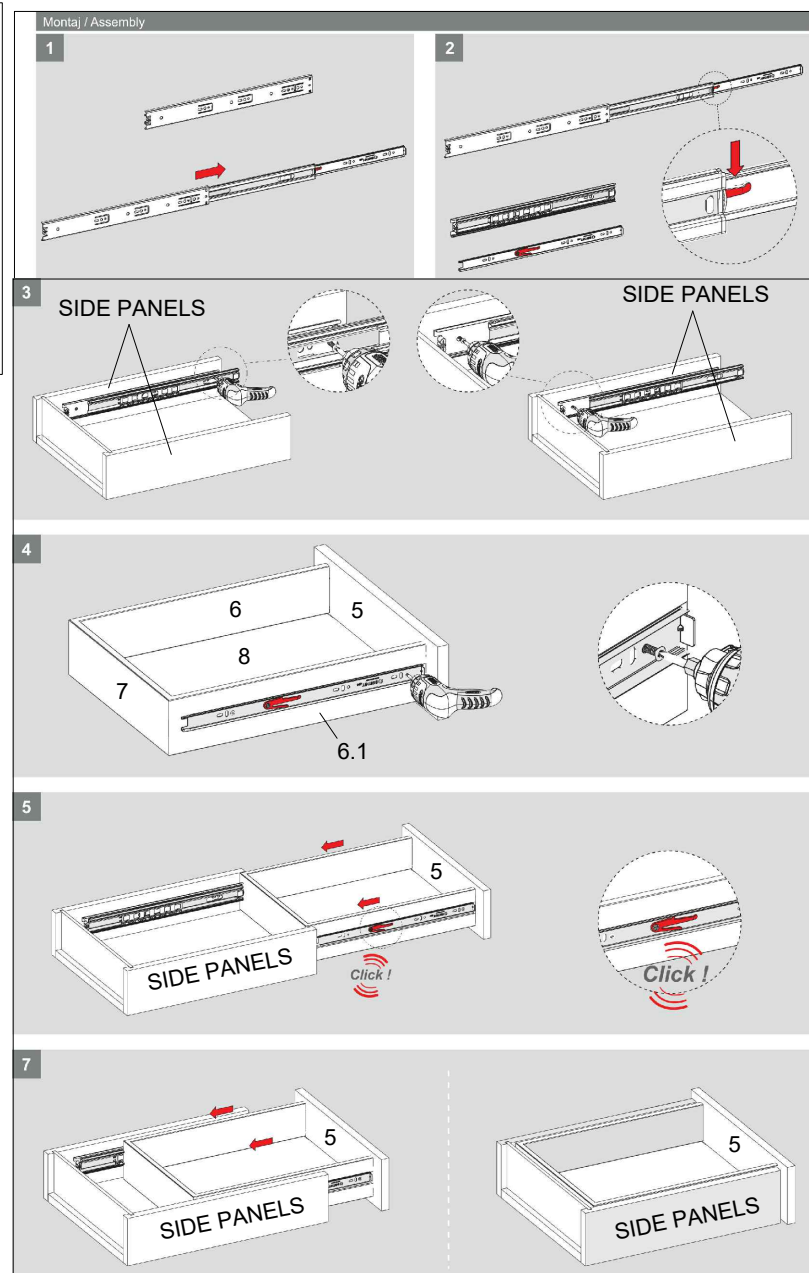


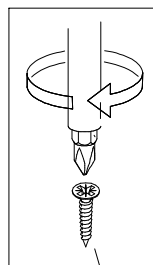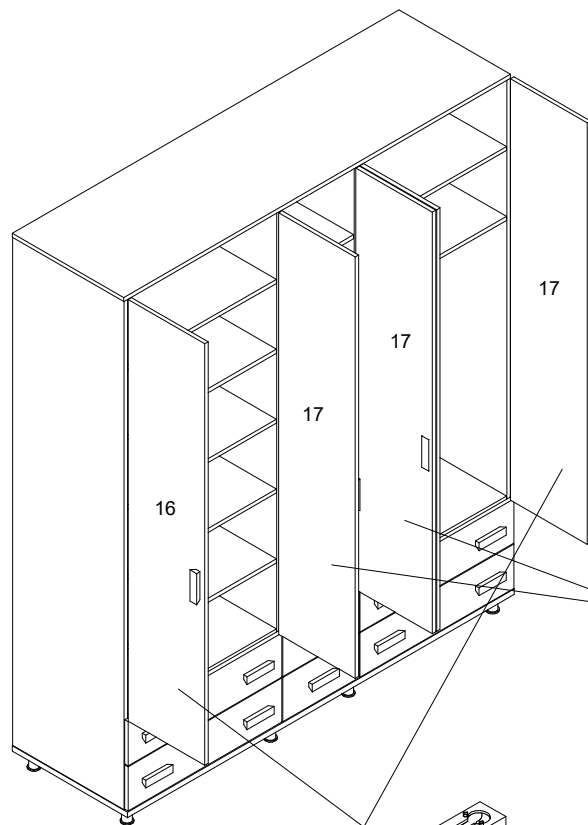


3,5x20

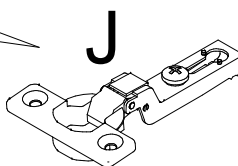

K

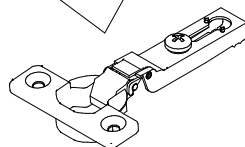










USE STRAIGHT HINGE FOR THIS DOORS. THIS HINGES ARE STRAIGHT THAN OTHERS.

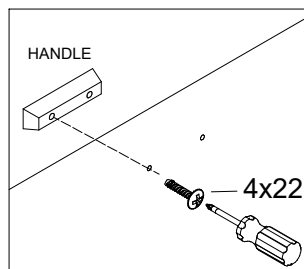

HANDLE

4x22

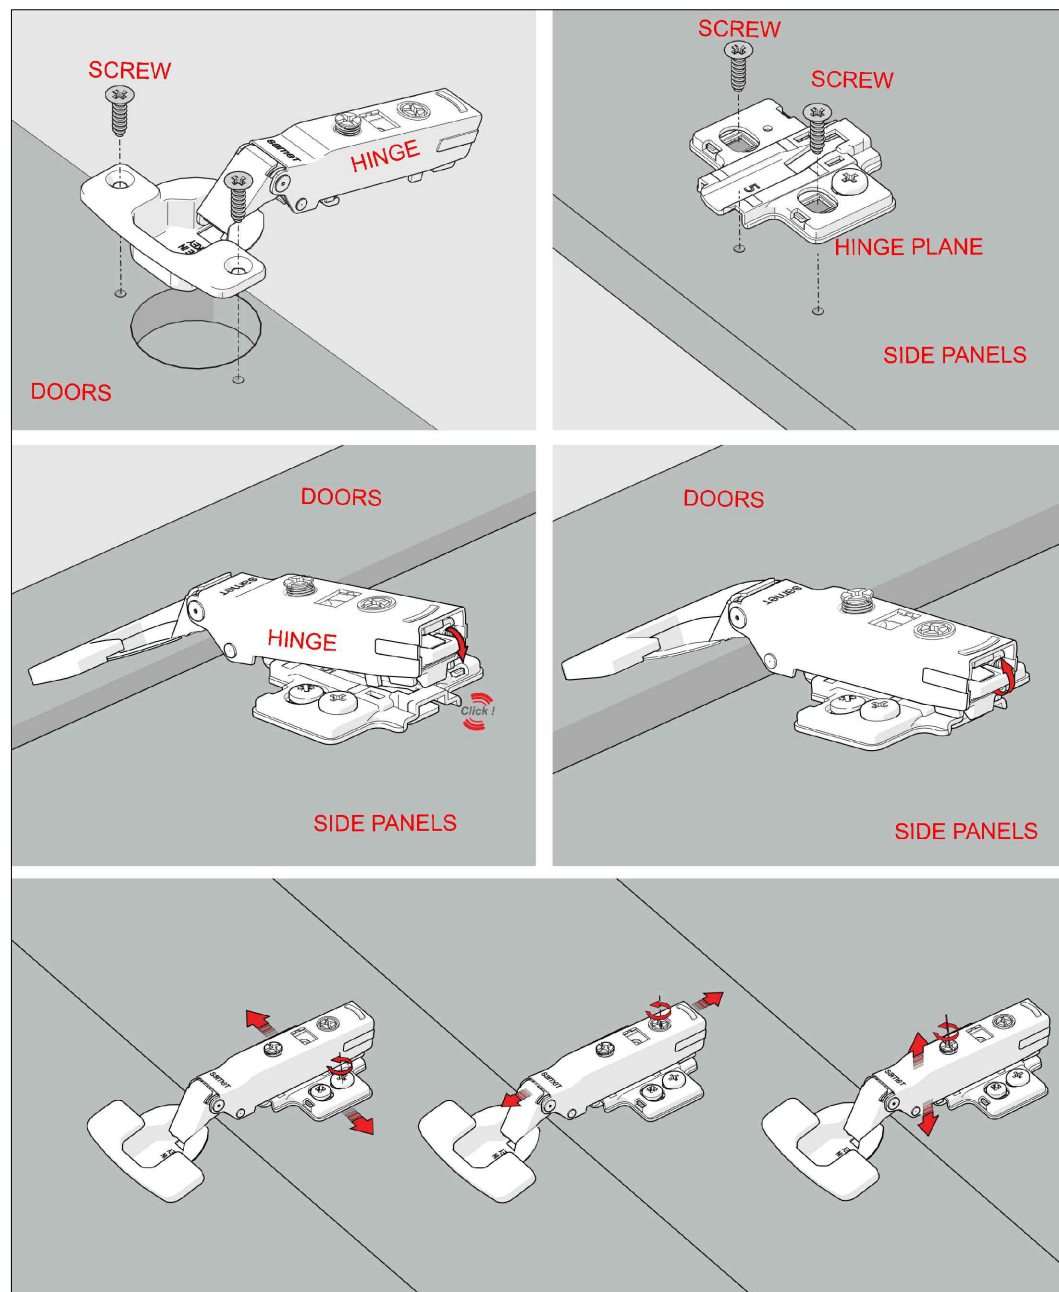

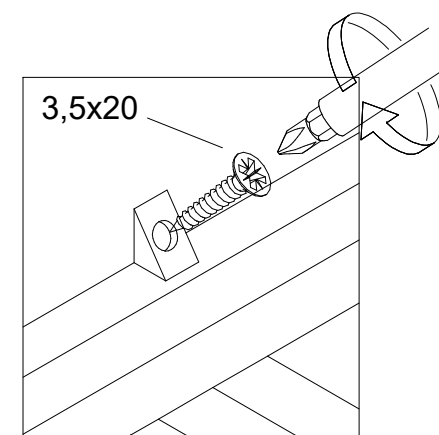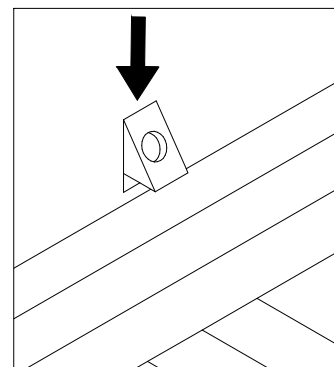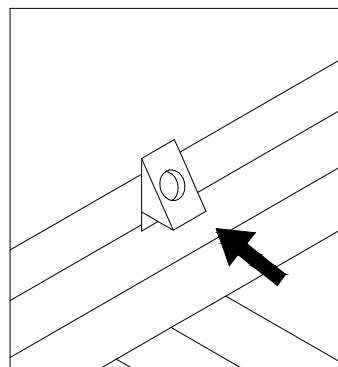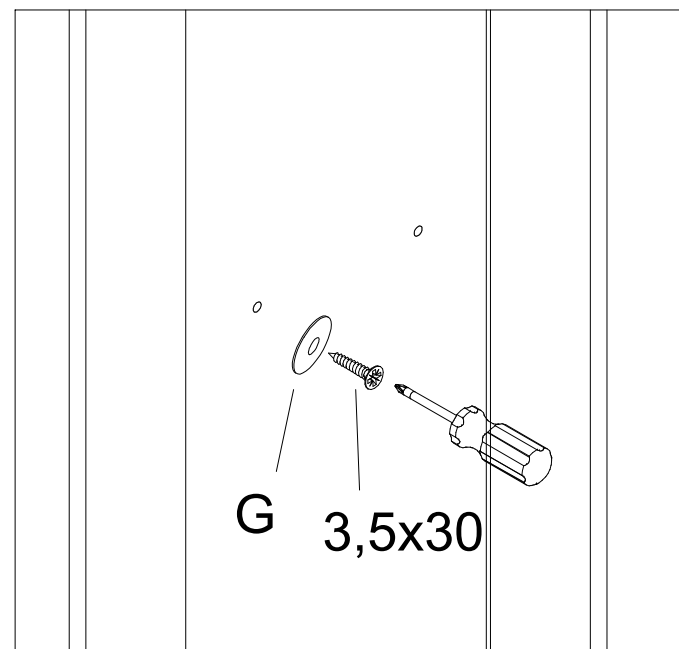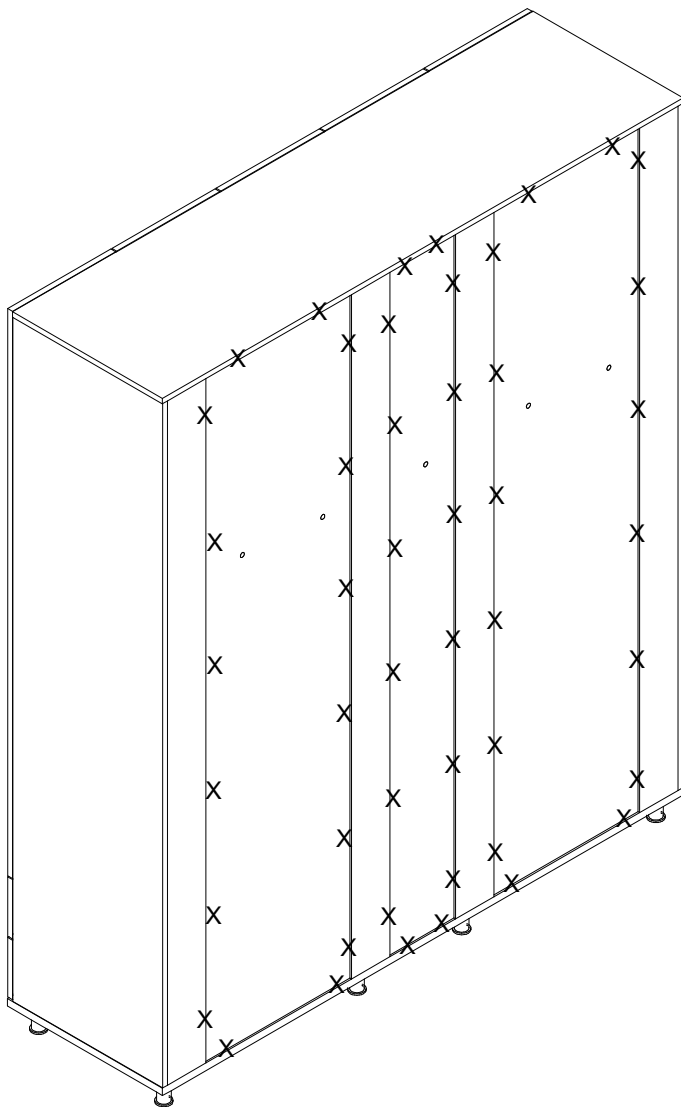

When installation is over , use Back plastic and 3,5x20 screw for safety back panels.
Fix to singed "X" points.

