


Assembly instructions

Base without storage

[120 x 190]

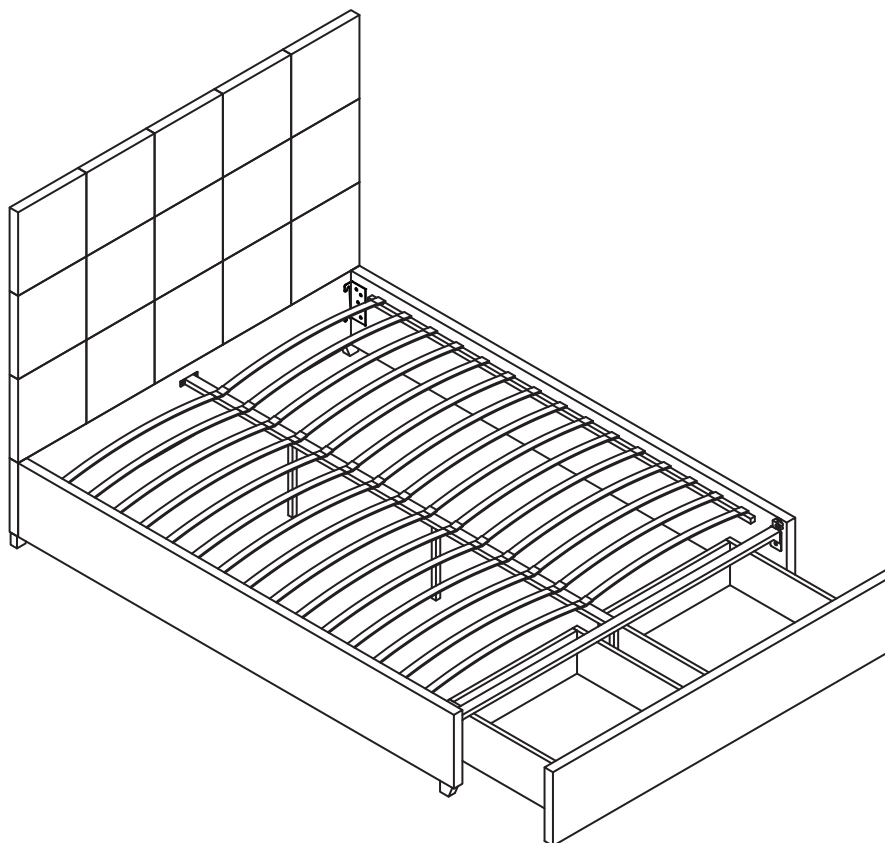


IMPORTANT


1. PLEASE CHECK THAT ALL PARTS ARE PRESENT BEFORE YOU START THE ASSEMBLY OF YOUR FURNITURE.
2. FOR THE PROTECTION OF YOUR FURNITURE, PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE TO PREVENT ANY DAMAGE.
3. PLEASE PERIODICALLY CHECK ALL FITTINGS AND RE-TIGHTEN AS NECESSARY.

PART LIST


(1) Headboard x 1pc

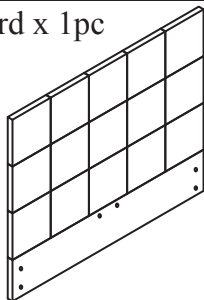


(2) Footboard x 1pc

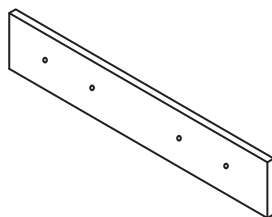


(3) Side Rail (Left) x 1pc

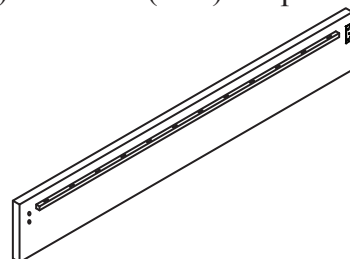


(4) Side Rail (Right) x 1pc

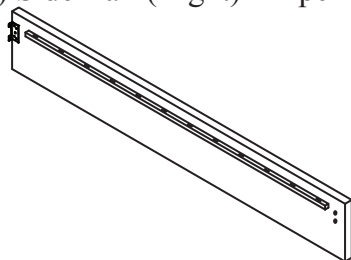


(5) Legs x 4pcs



(6) Centre Support Bar x 1pc

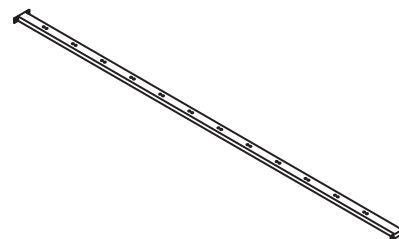


(7) Centre Support Bar Legs
x 3pcs




(8) Slat centre cap x 15pcs




(9) Slat brim cap x 30pcs




(10) Slat x 30pcs

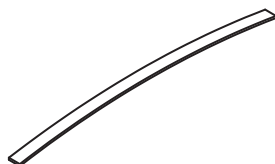


(11) Supporting bar x 1pc

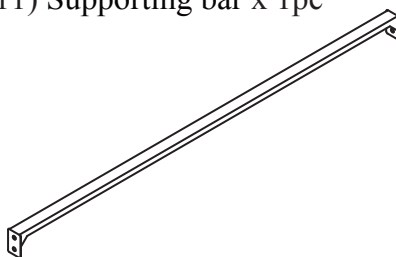


(12) Front board x 2pcs

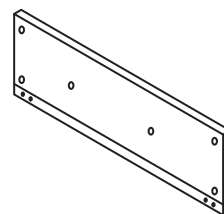


(13) Side board x 4pcs

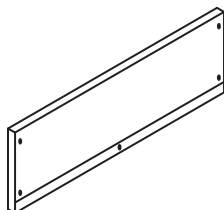


(14) Back board x 2pcs

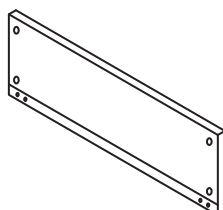

(15) Bottom board x 2pcs

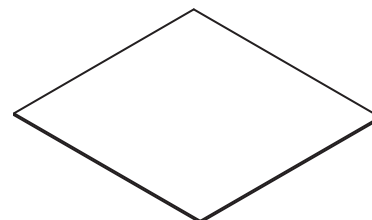

(16) Bottom strip x 2pcs

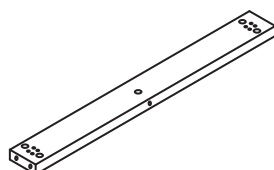

HARDWARE LIST


(A) Bolt M8 x 30mm x 16pcs



(B) Bolt M8 x 35mm x 4pcs



(C) Bolt M8 x 50mm x 4pcs




(D) Nut M8 x 4pcs



(E) Spring Washer x 8pcs



(F) Flat Washer x 16pcs




(G) Allen Key M5 x 1pc




(H) Spanner x 1pc



(I) Bolt M8 x 20mm x 2pcs




(J) Bolt M4 x 55mm x 68pcs



(K) Screw cap x 68pcs



(L) Bolt M3.5 x 15mm x 32pcs




(M) Wheel x 8pcs



(N) Felt pad x 4pcs




(O) Bead buckle x 2pcs




(P) Bolt x 2pcs




(Q) Bolt M7 x 20mm x 8pcs




STEP 1

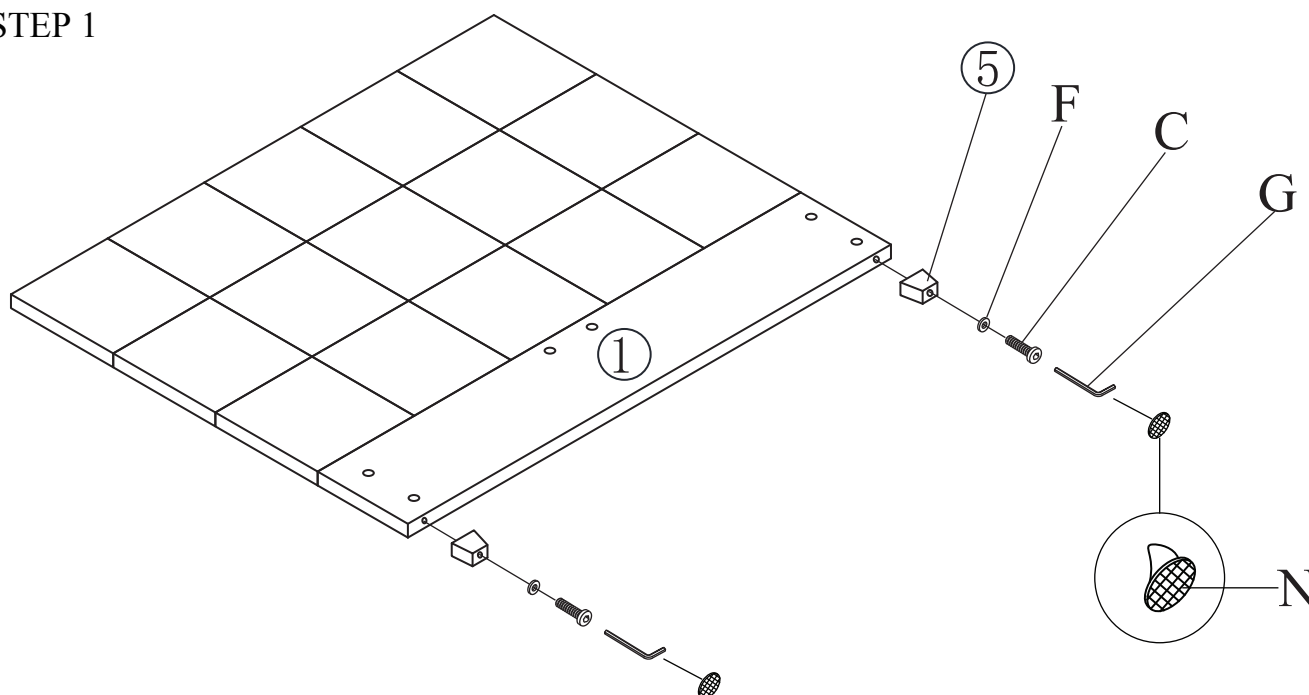


STEP 2

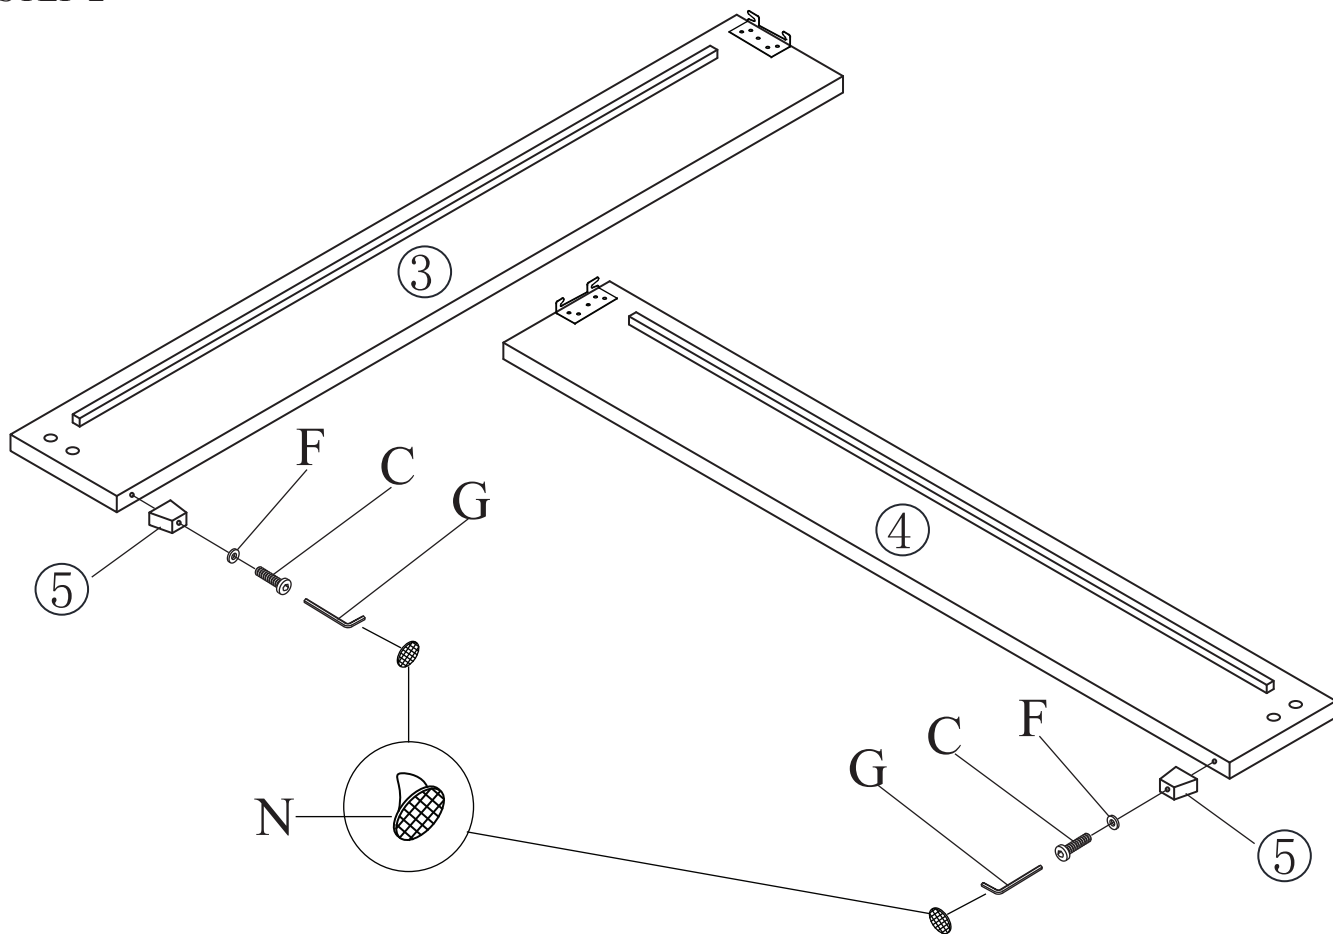


STEP 3

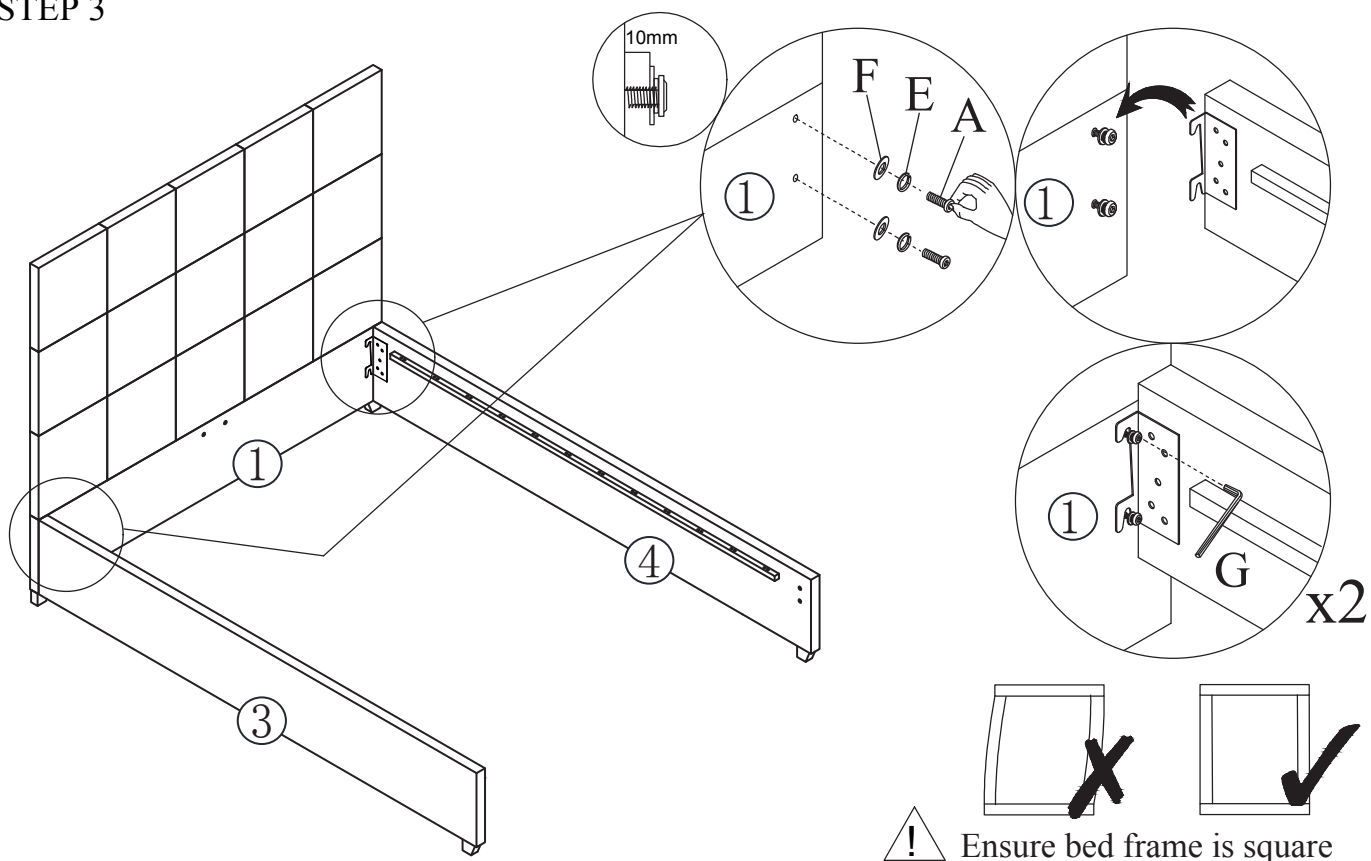


STEP 4

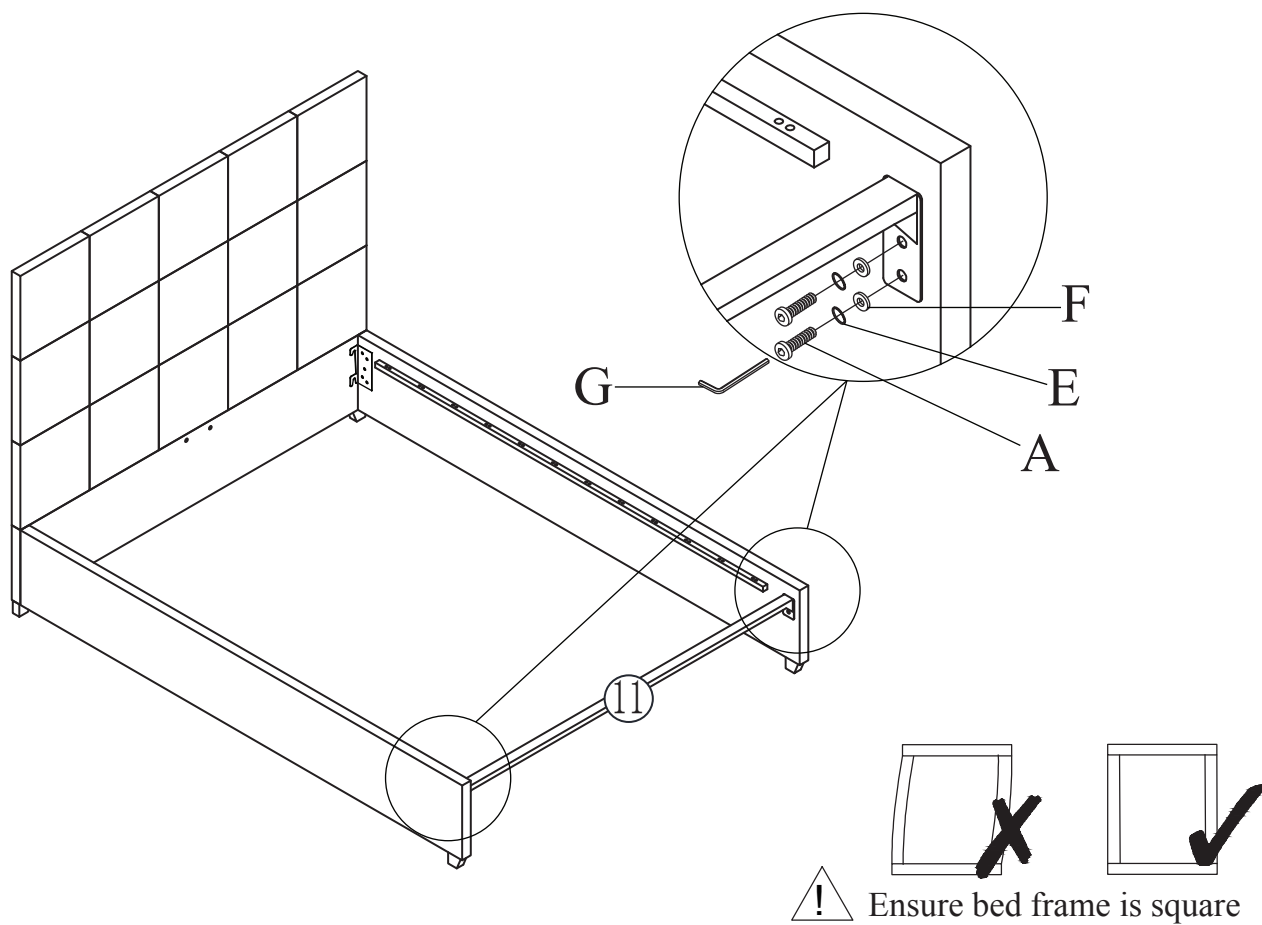


STEP 5

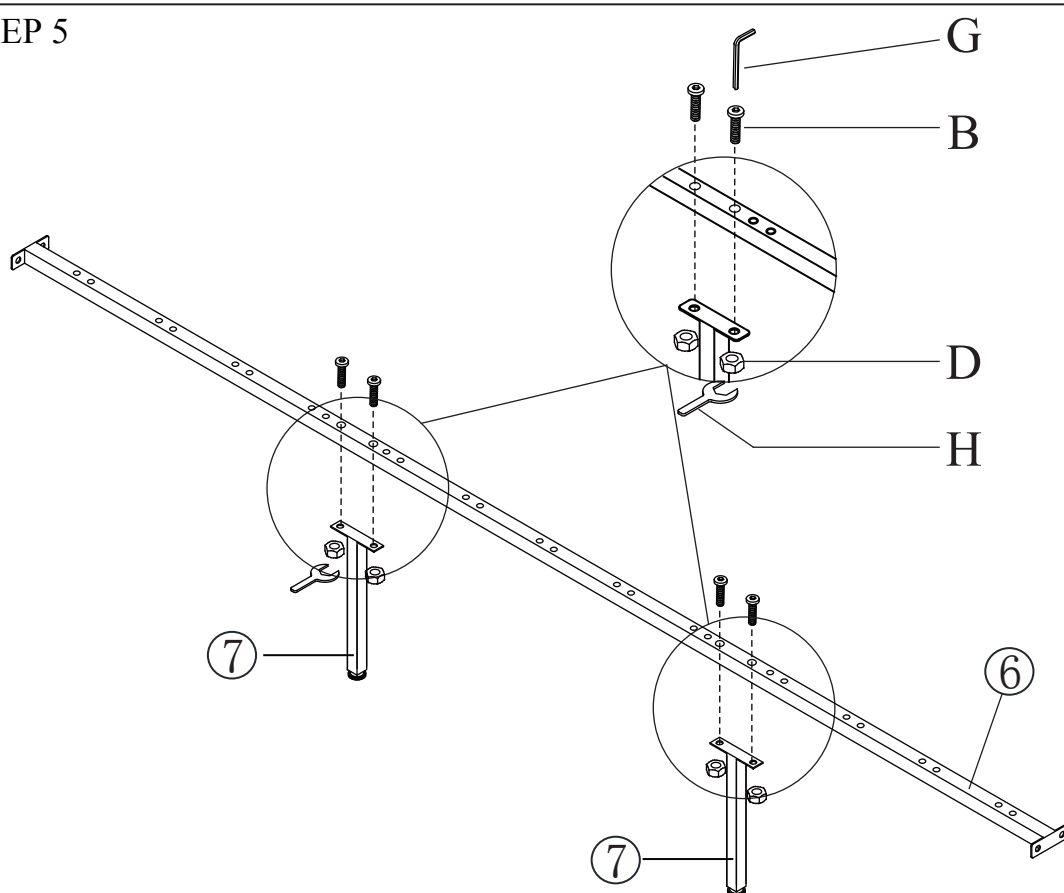


STEP 6

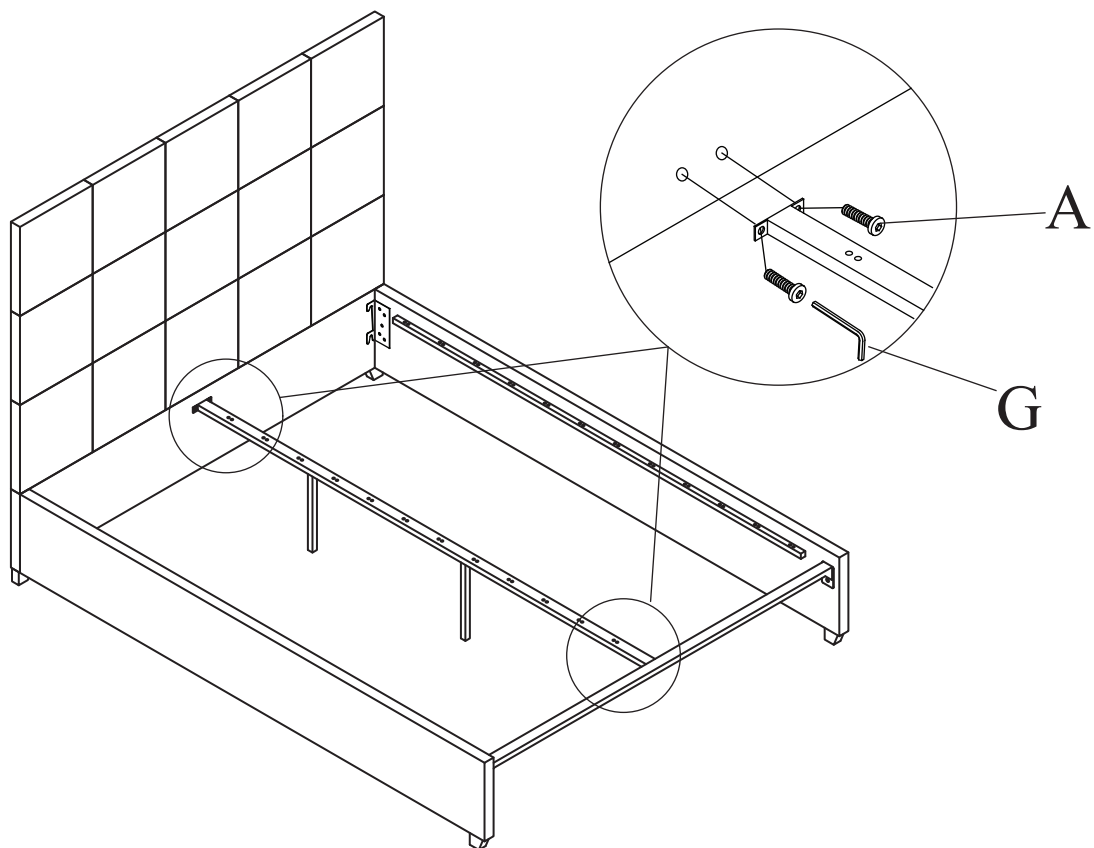


STEP 7

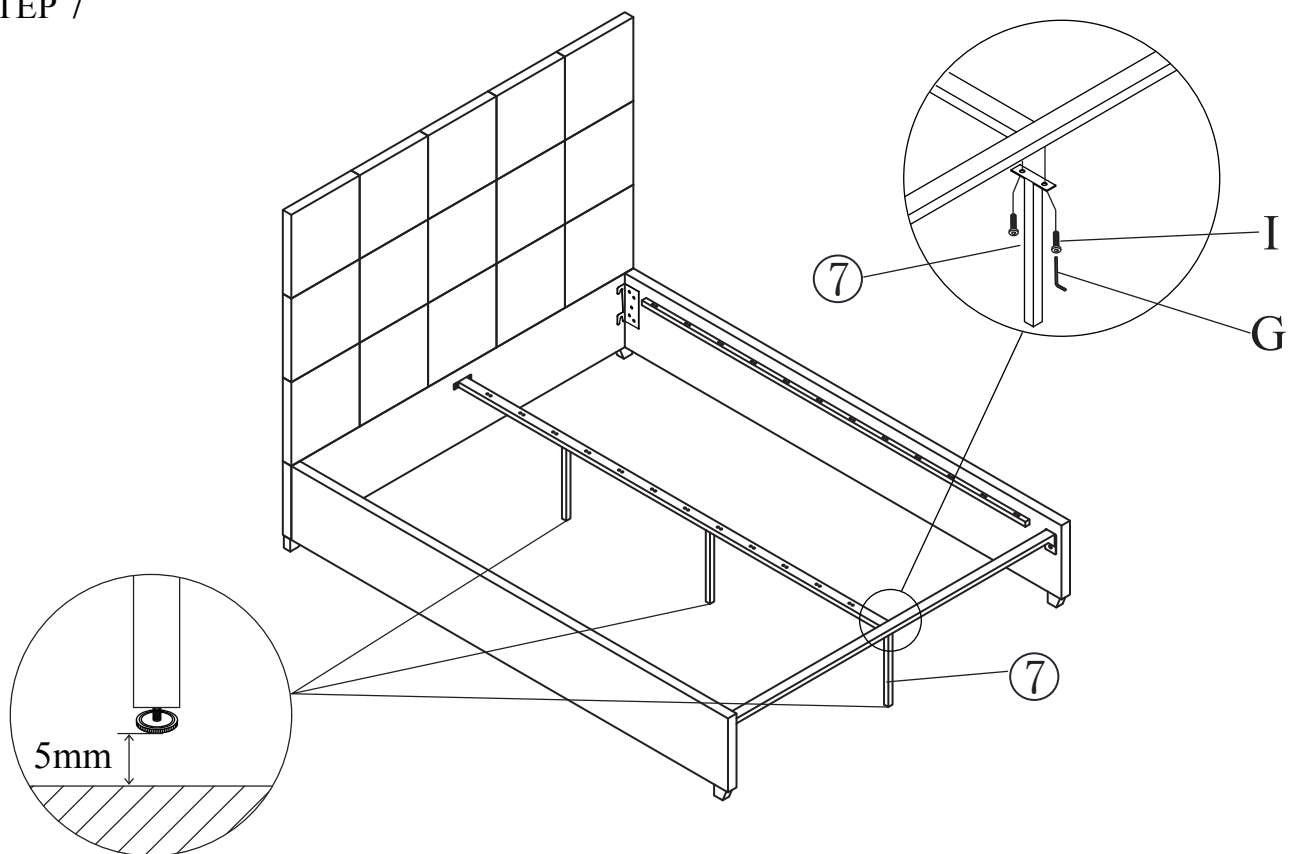

STEP 8

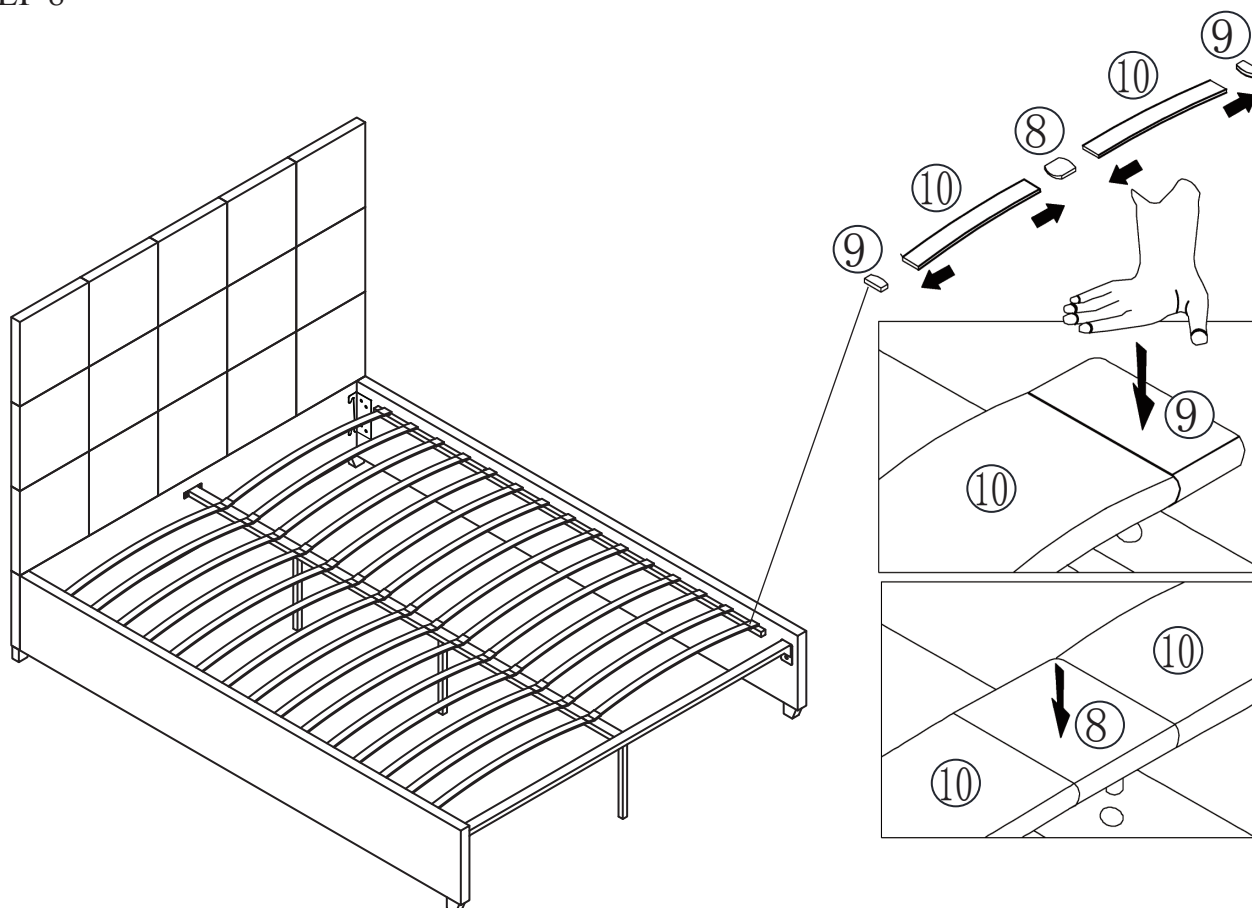


STEP 9

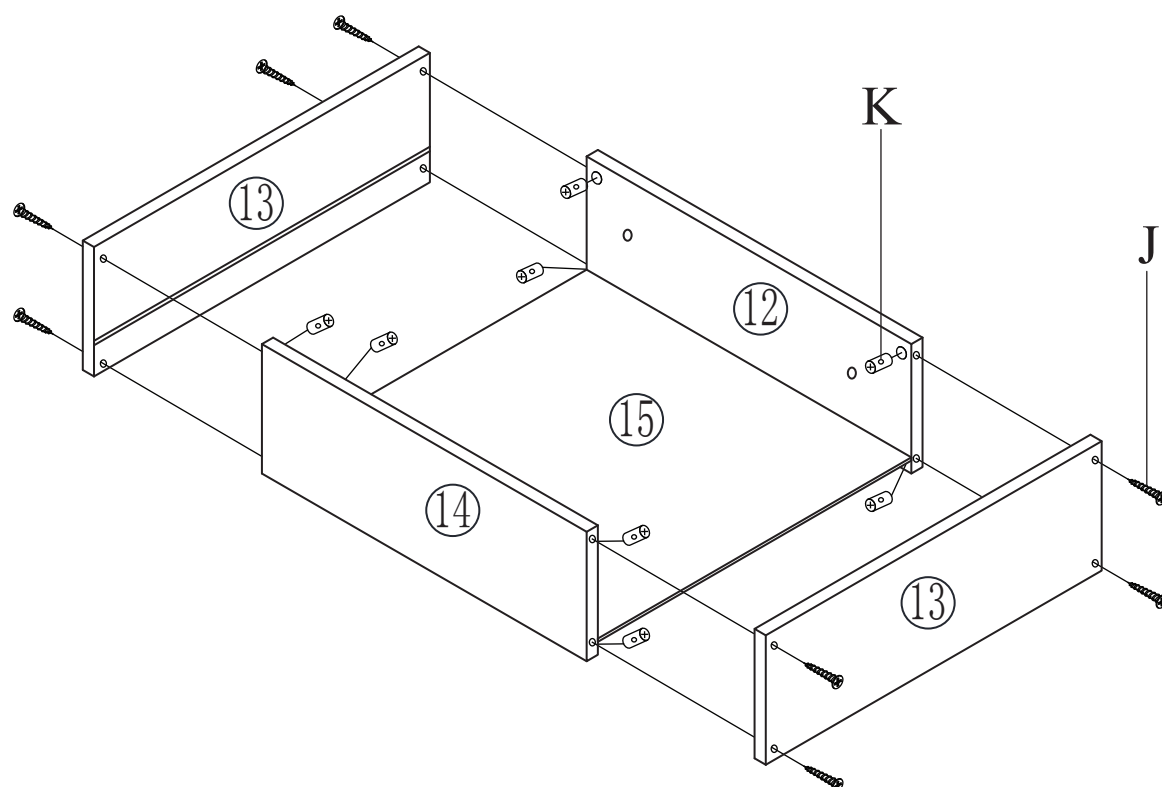


X2

STEP 10

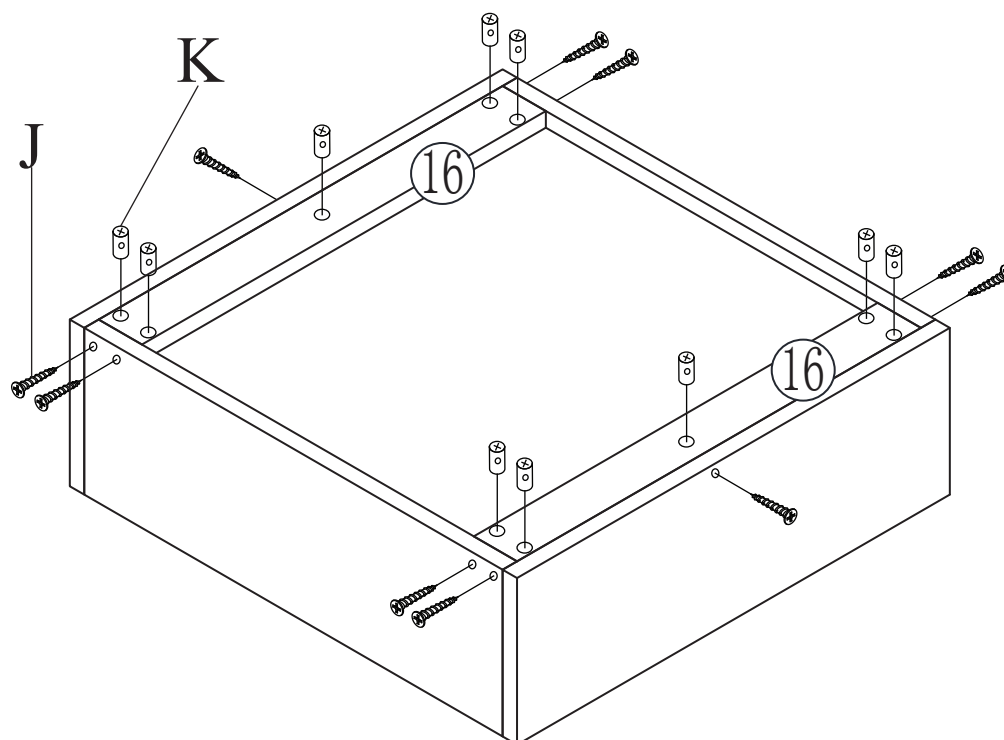


X2

STEP 11

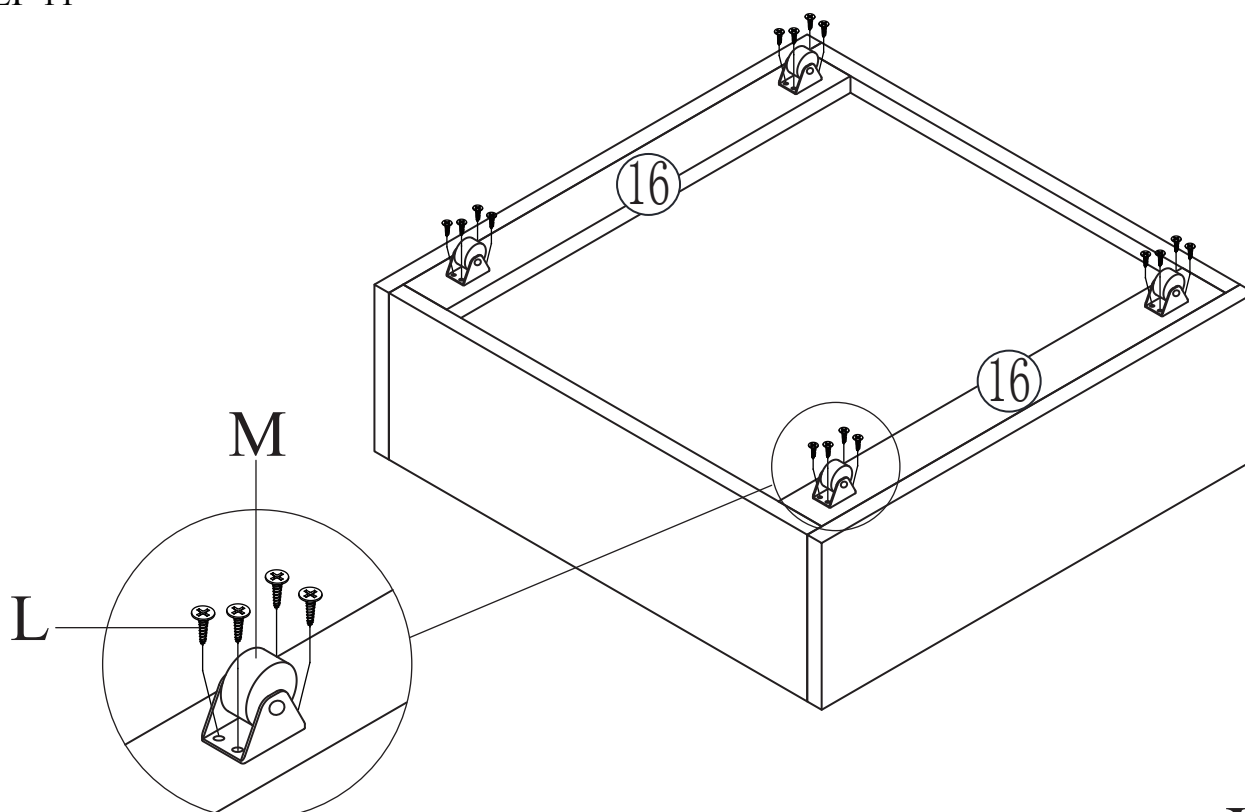


X2

STEP 12

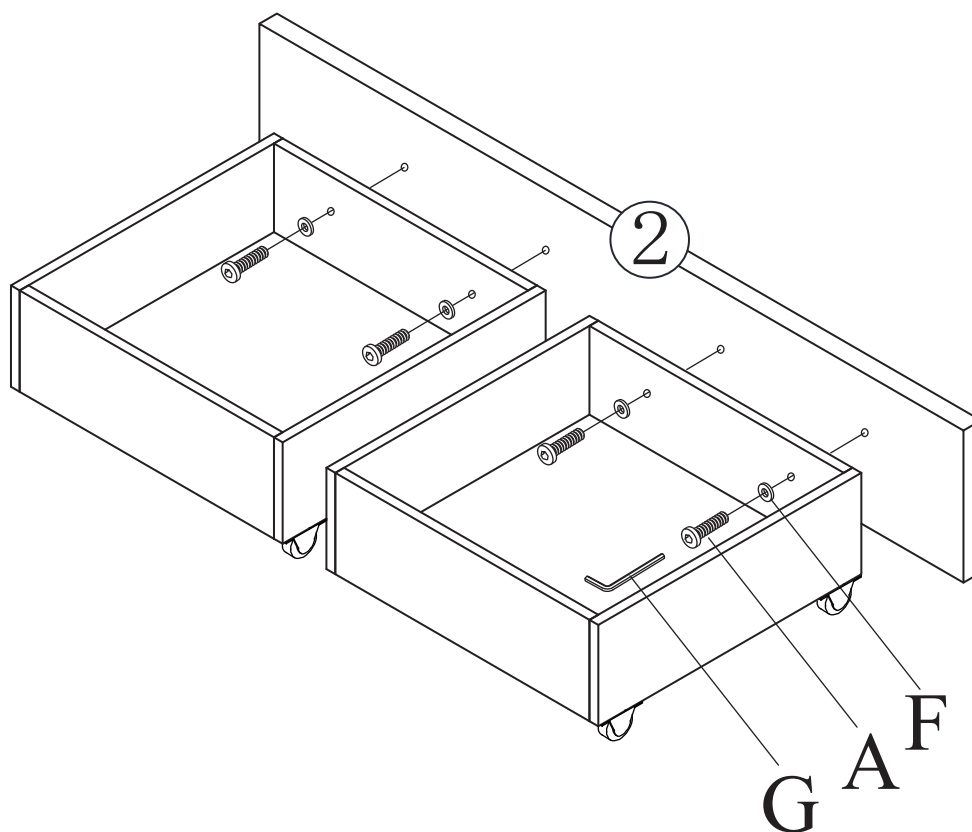

STEP 13

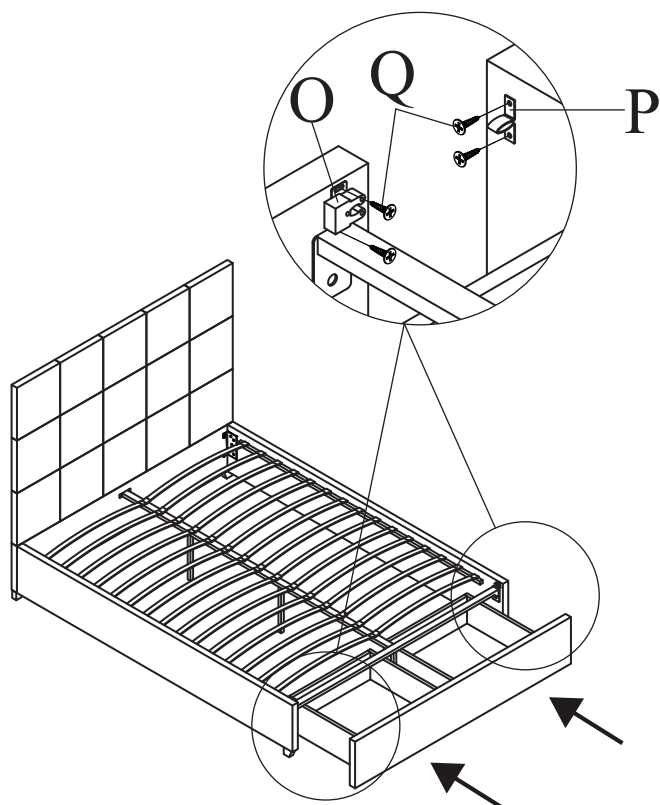

STEP 14

