



2

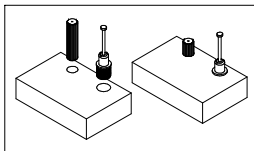


1


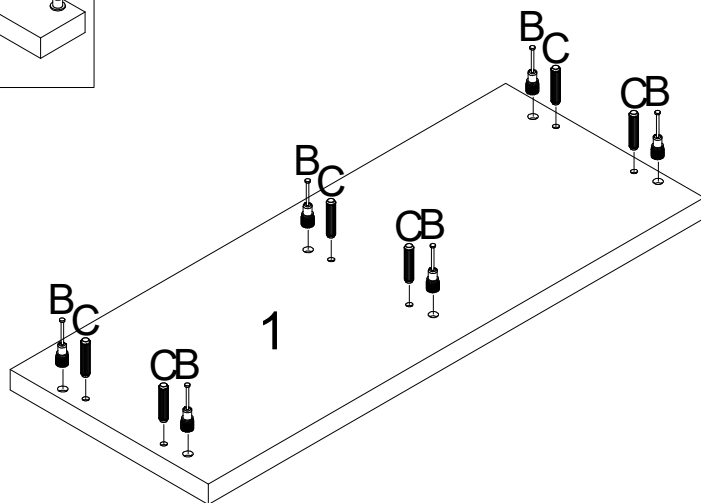


ARROW MARK MUST BE PARALLEL WITH HOLE



2




2-3



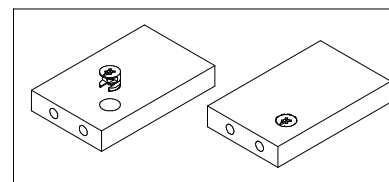
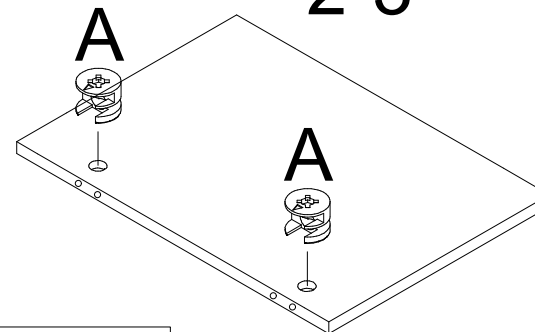


3

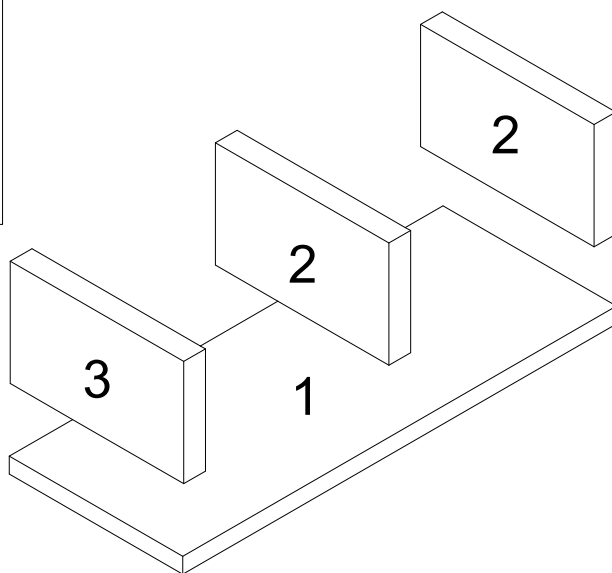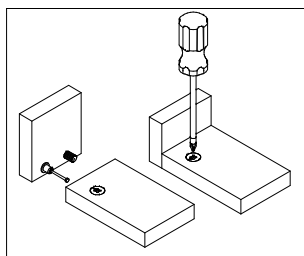



4

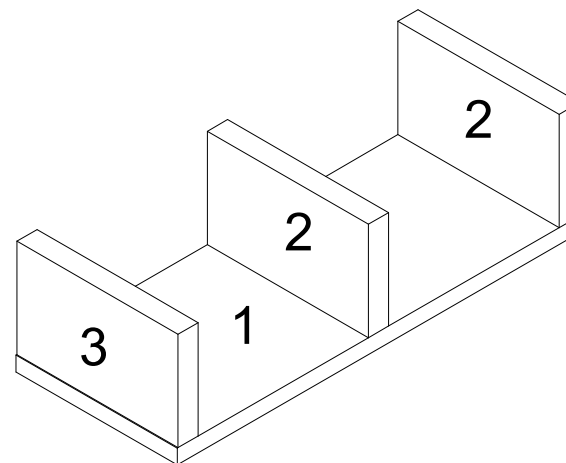







3

5

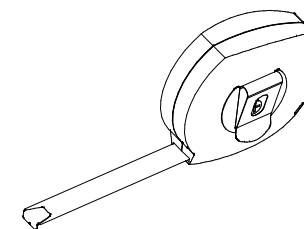
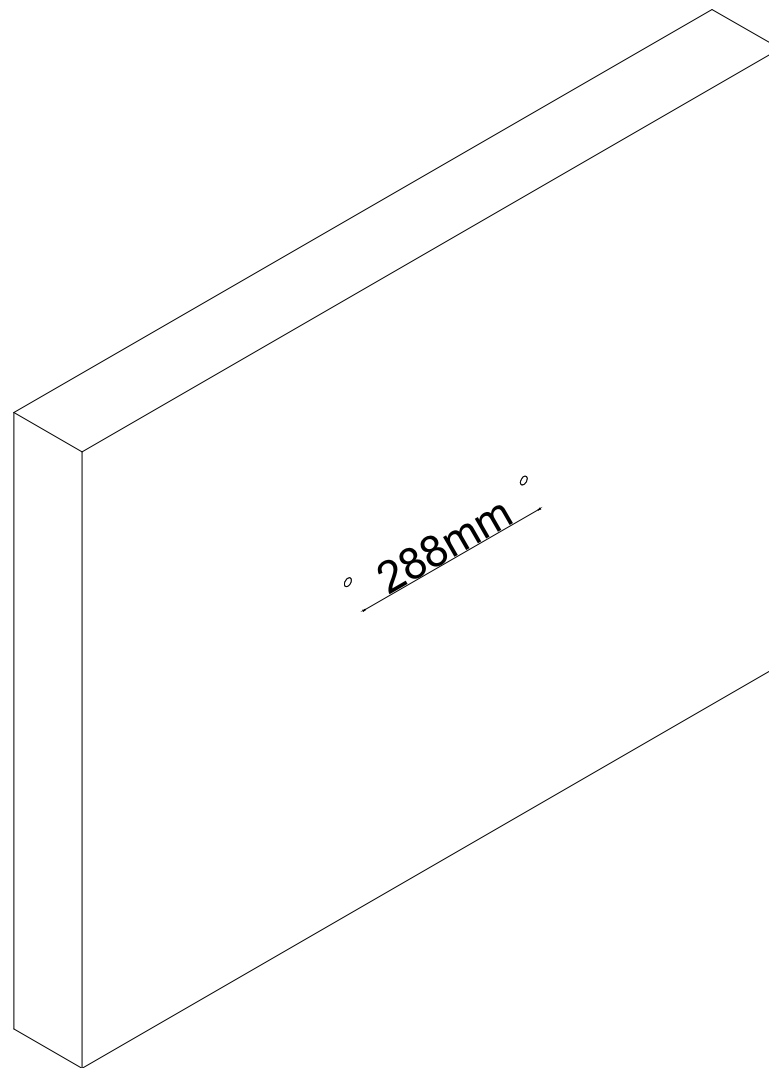


MARK THE WALL WITH THE PENS OF THESE DIMENSIONS





4

6



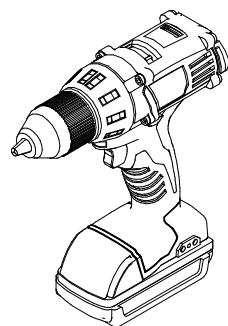
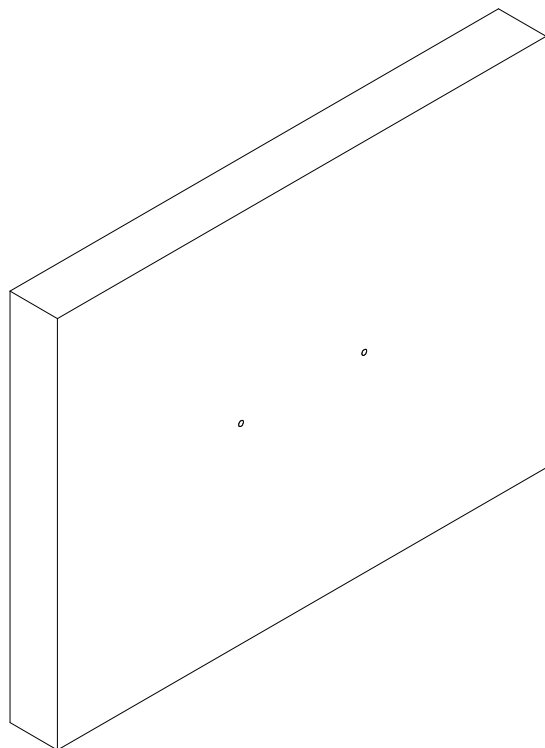


Use drill for make hole to this singed points.

7

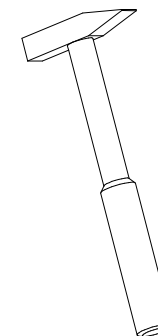
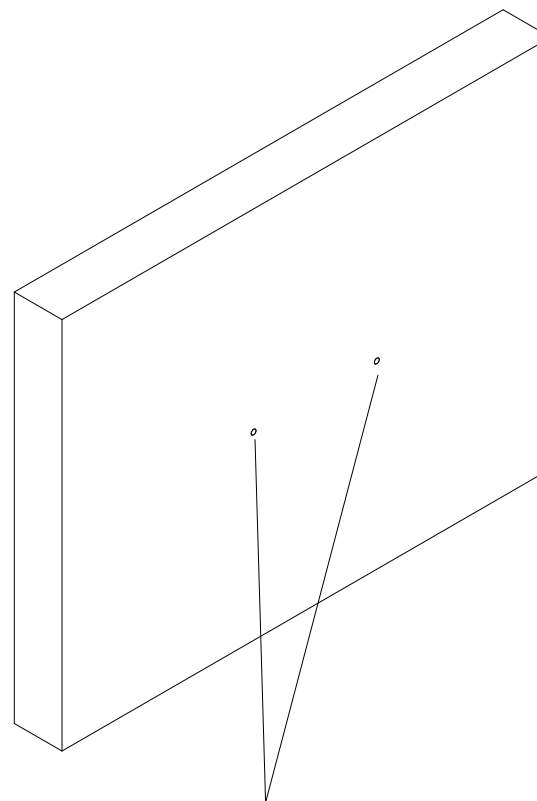


Push " G " to this holes and fix with plastic hammer.





5


8



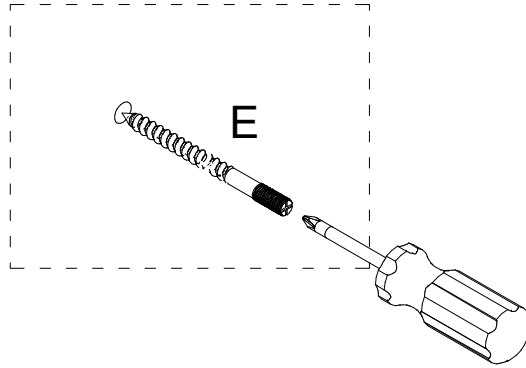
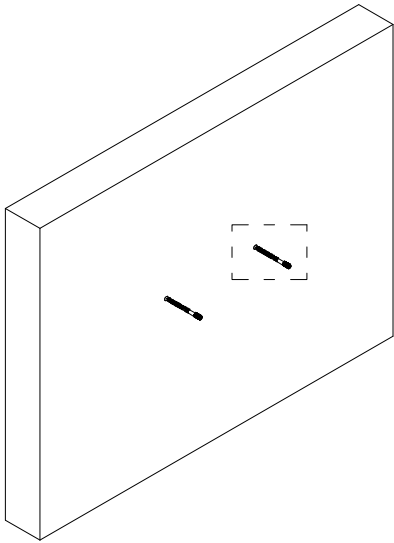


9

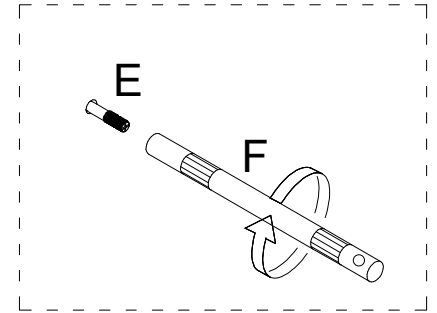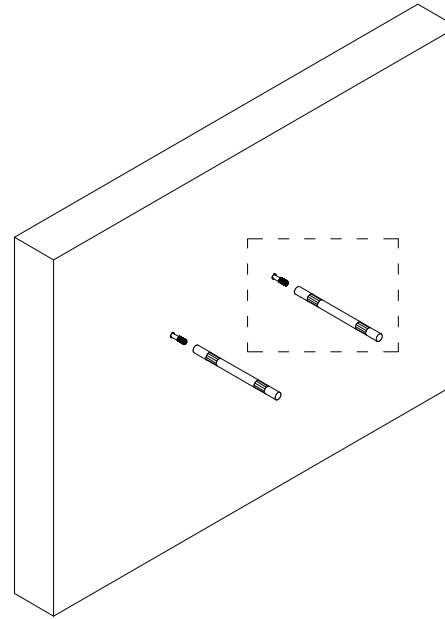



10

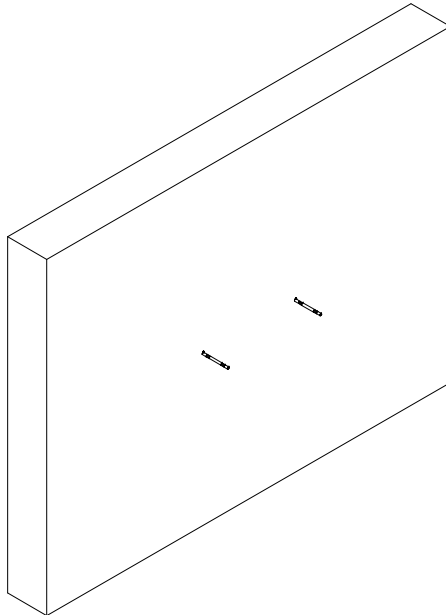



6

11

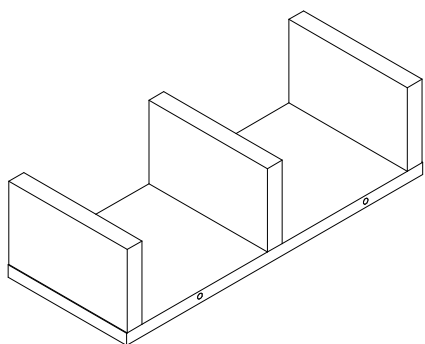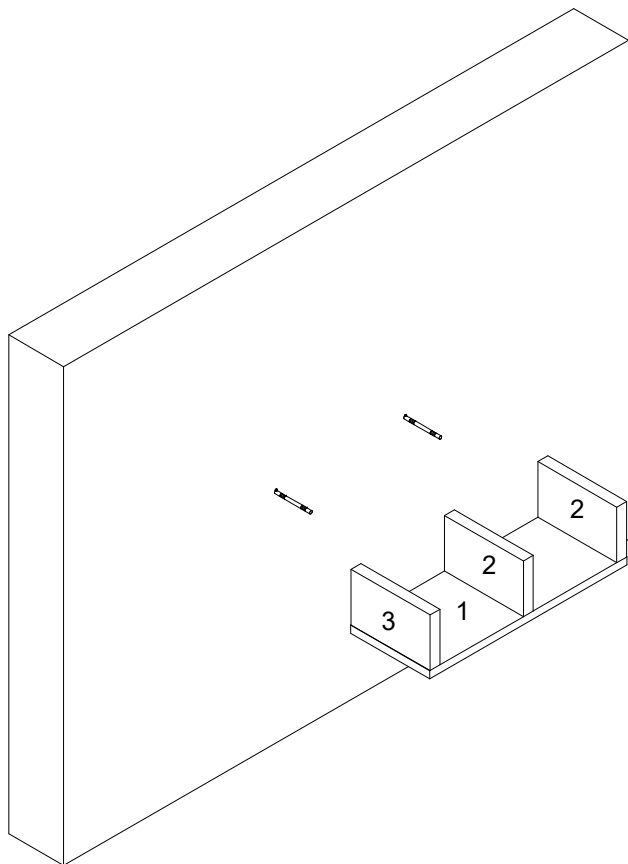

BACK SIDE OF SHELVES

12

