


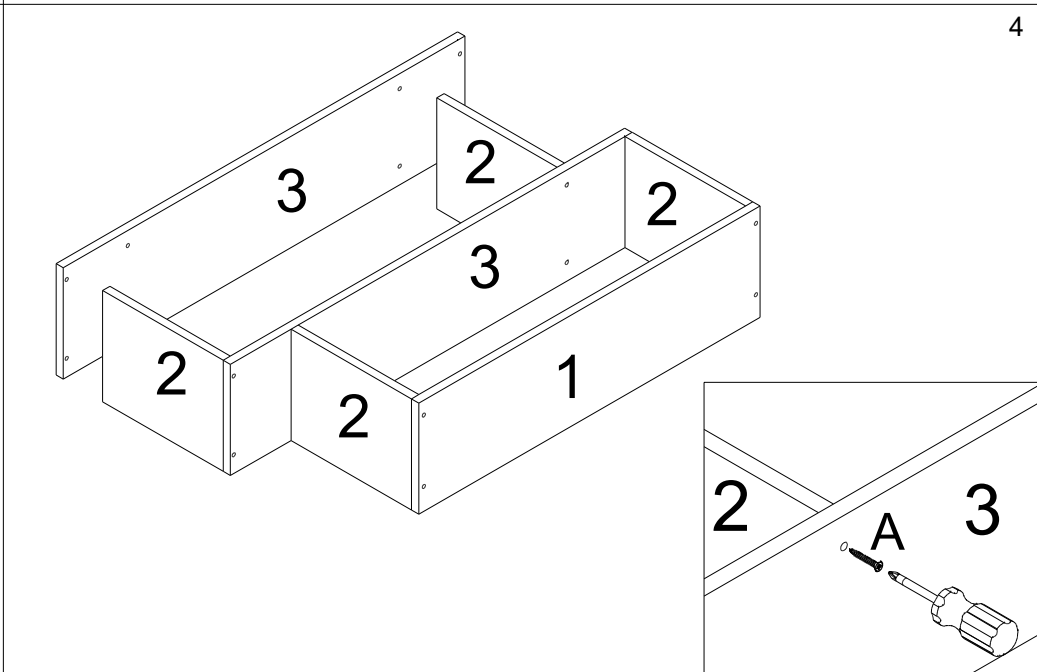
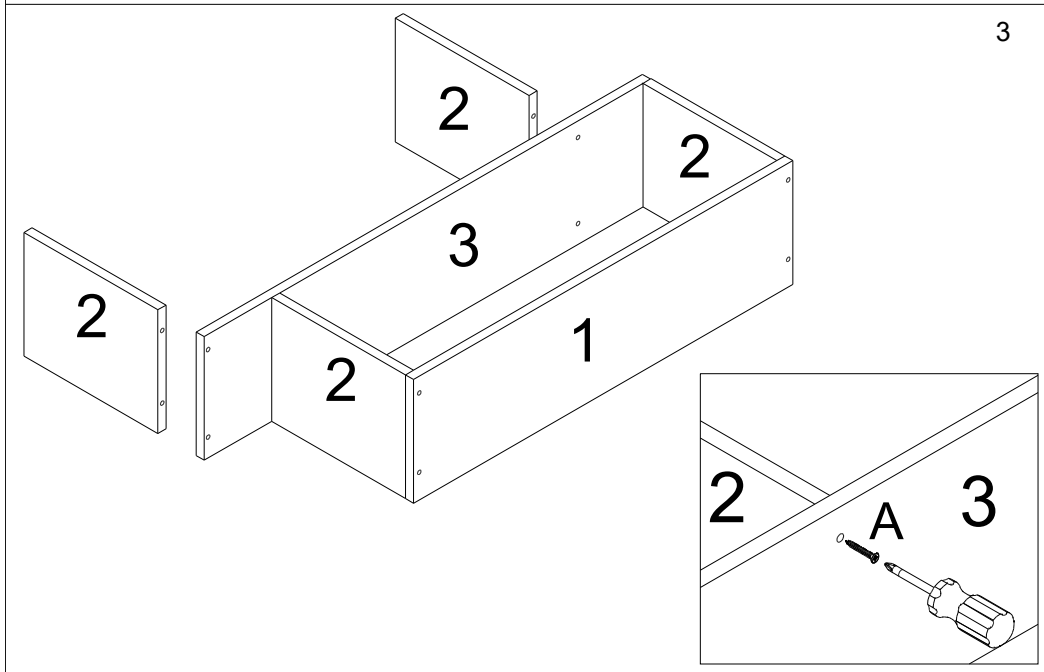
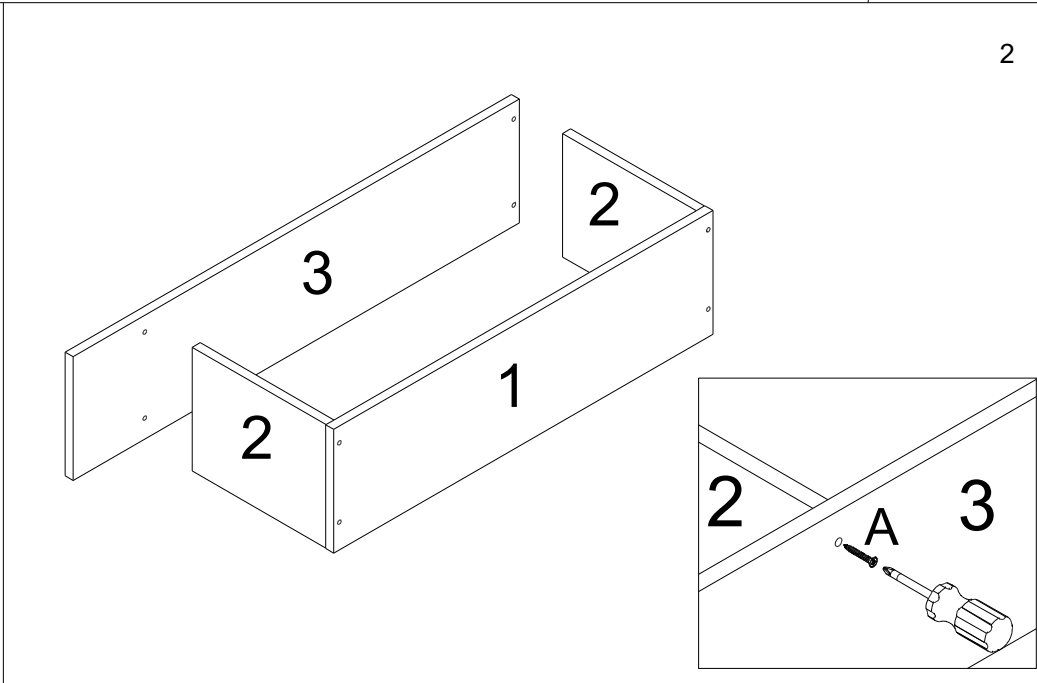
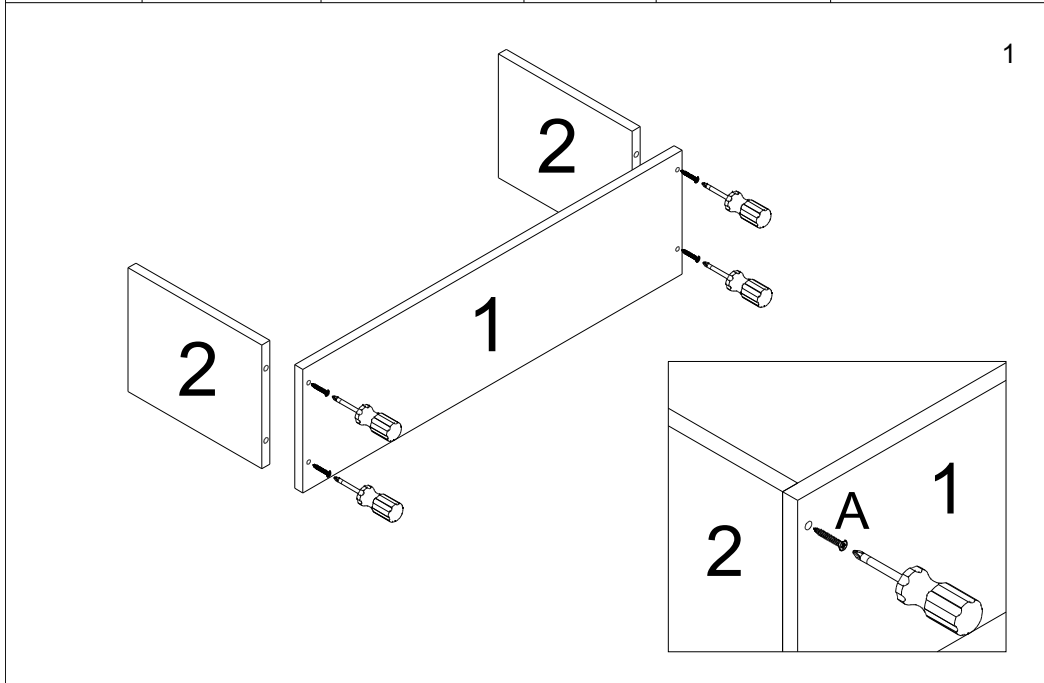







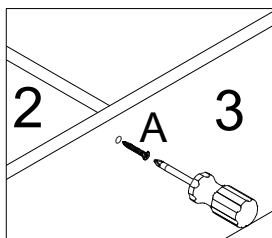


3



5

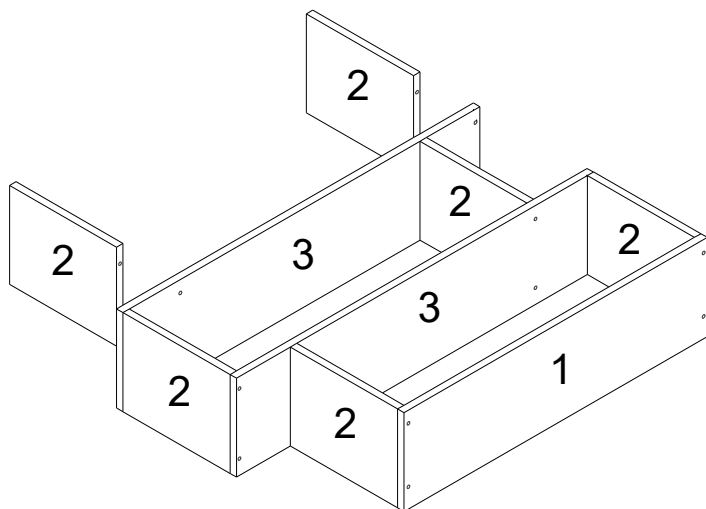



6


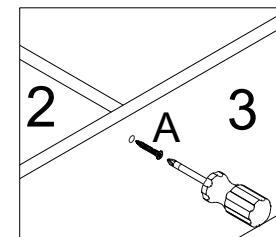
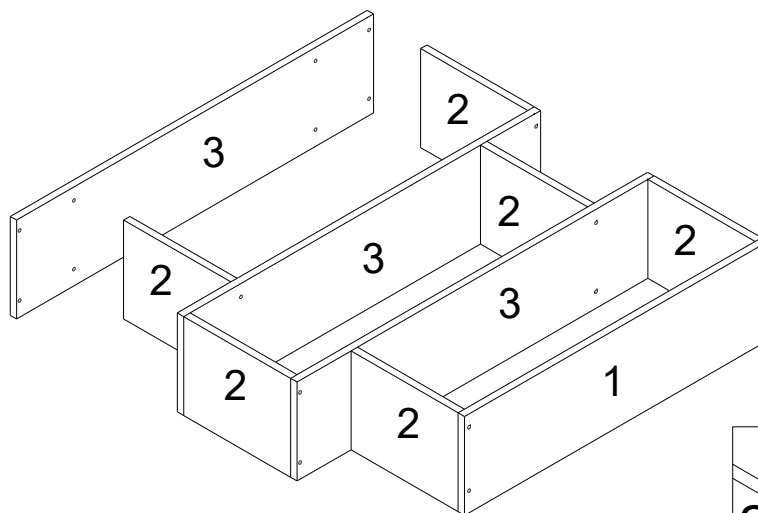


7

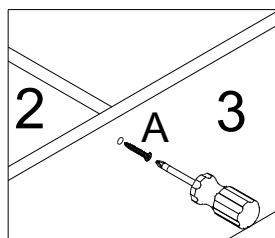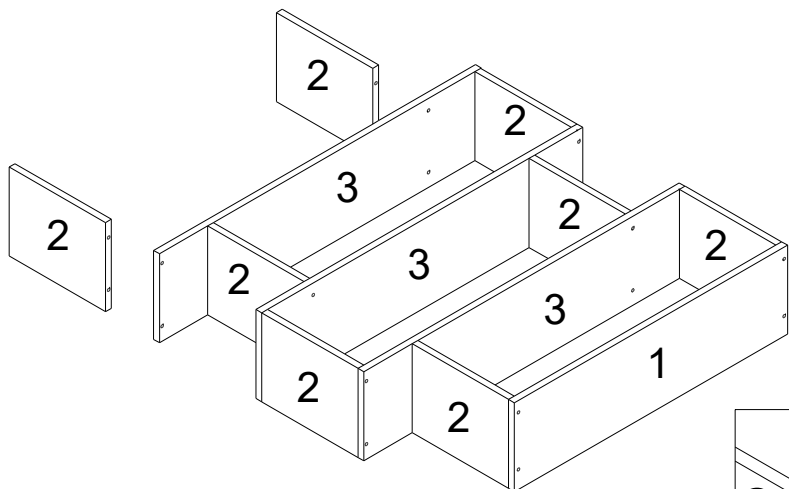



8

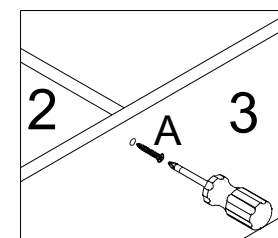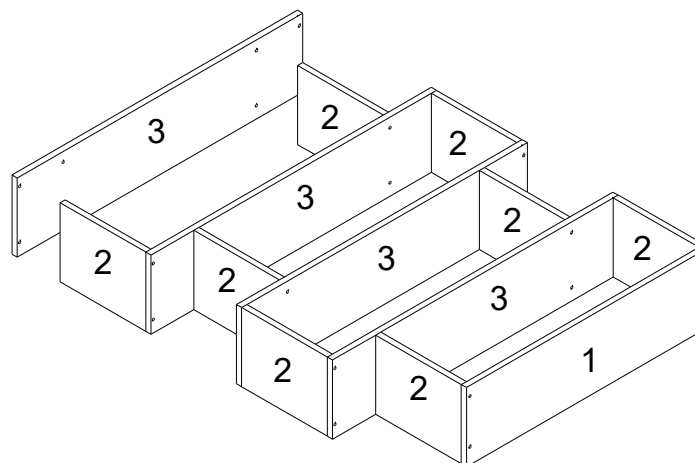





4


9

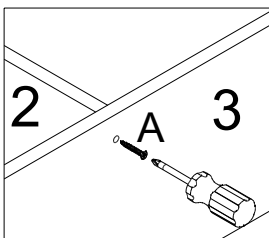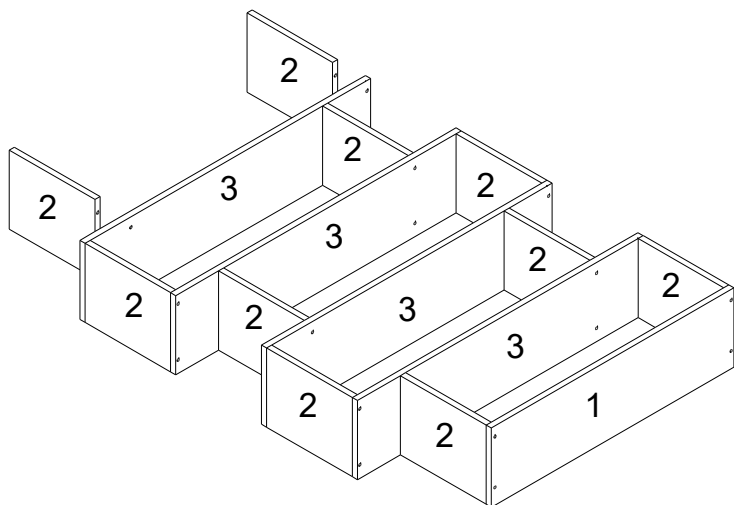



10



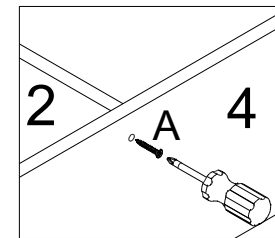
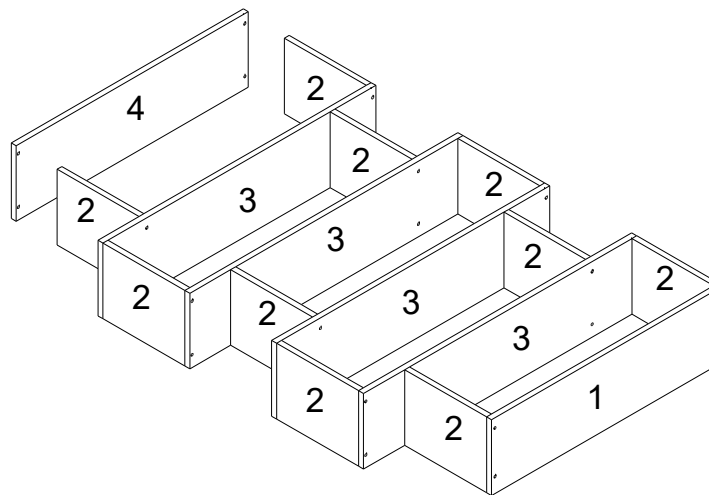


11

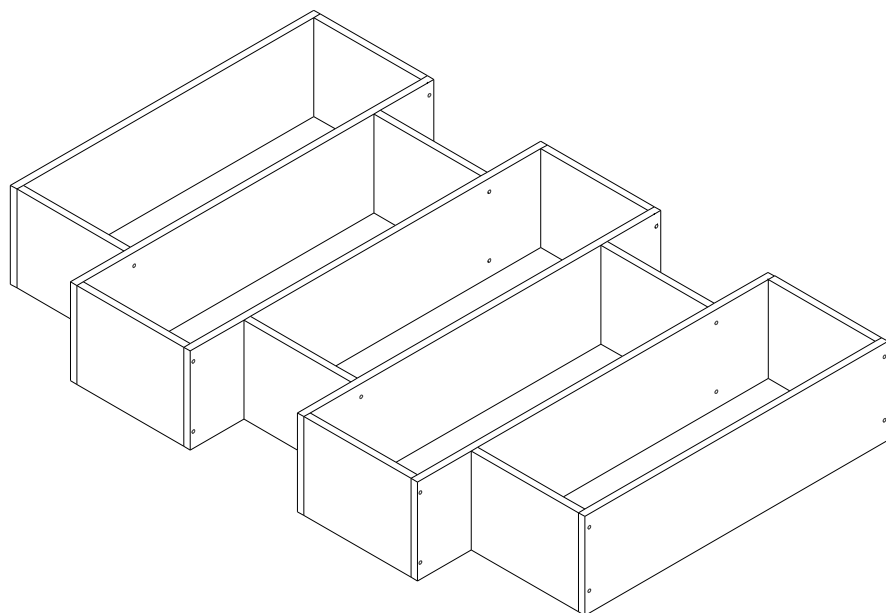

12

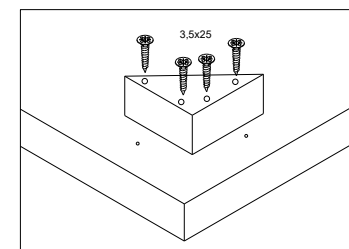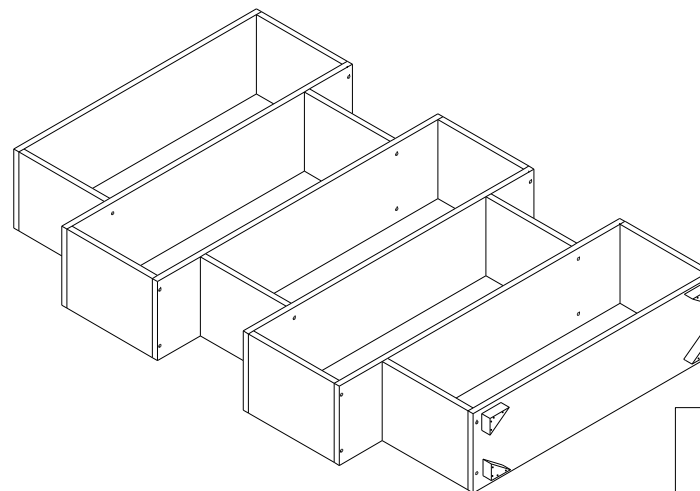








5

13



אזהרה!
חובה לקבע את הכוננית לקיר.

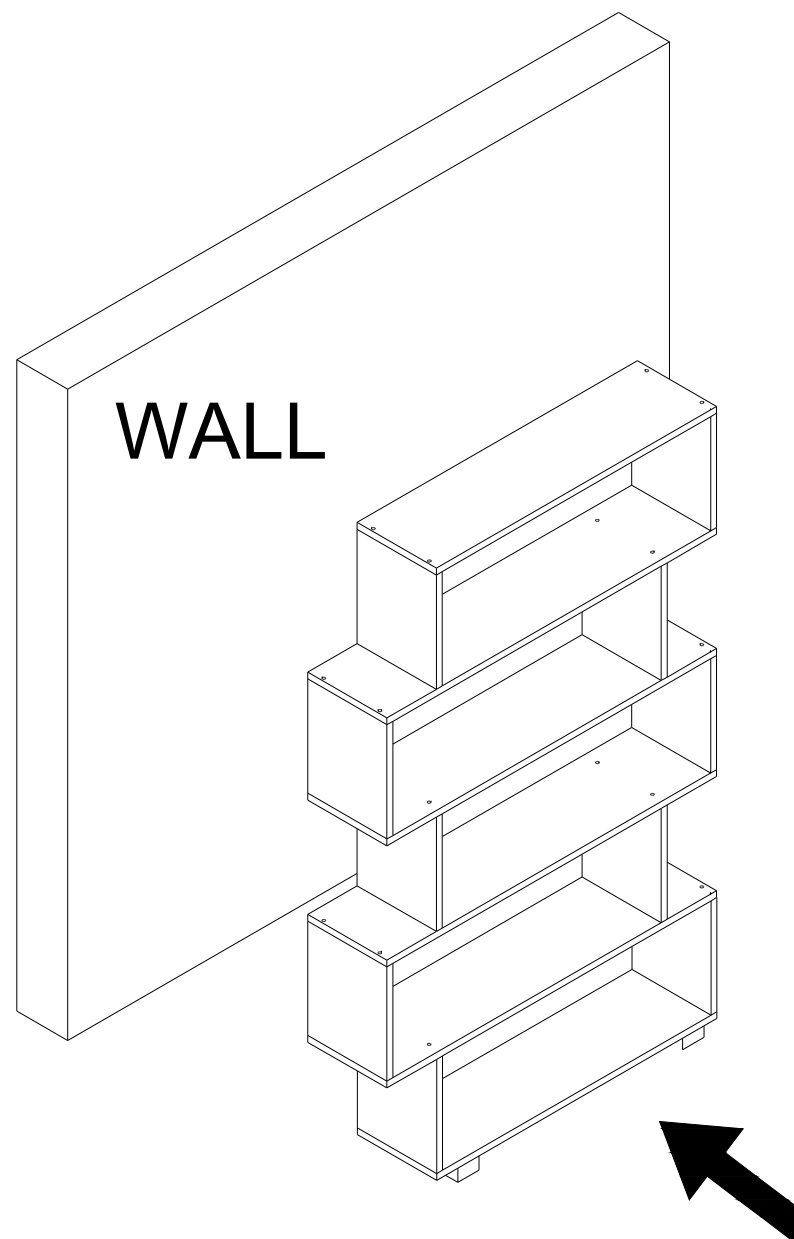









6



14

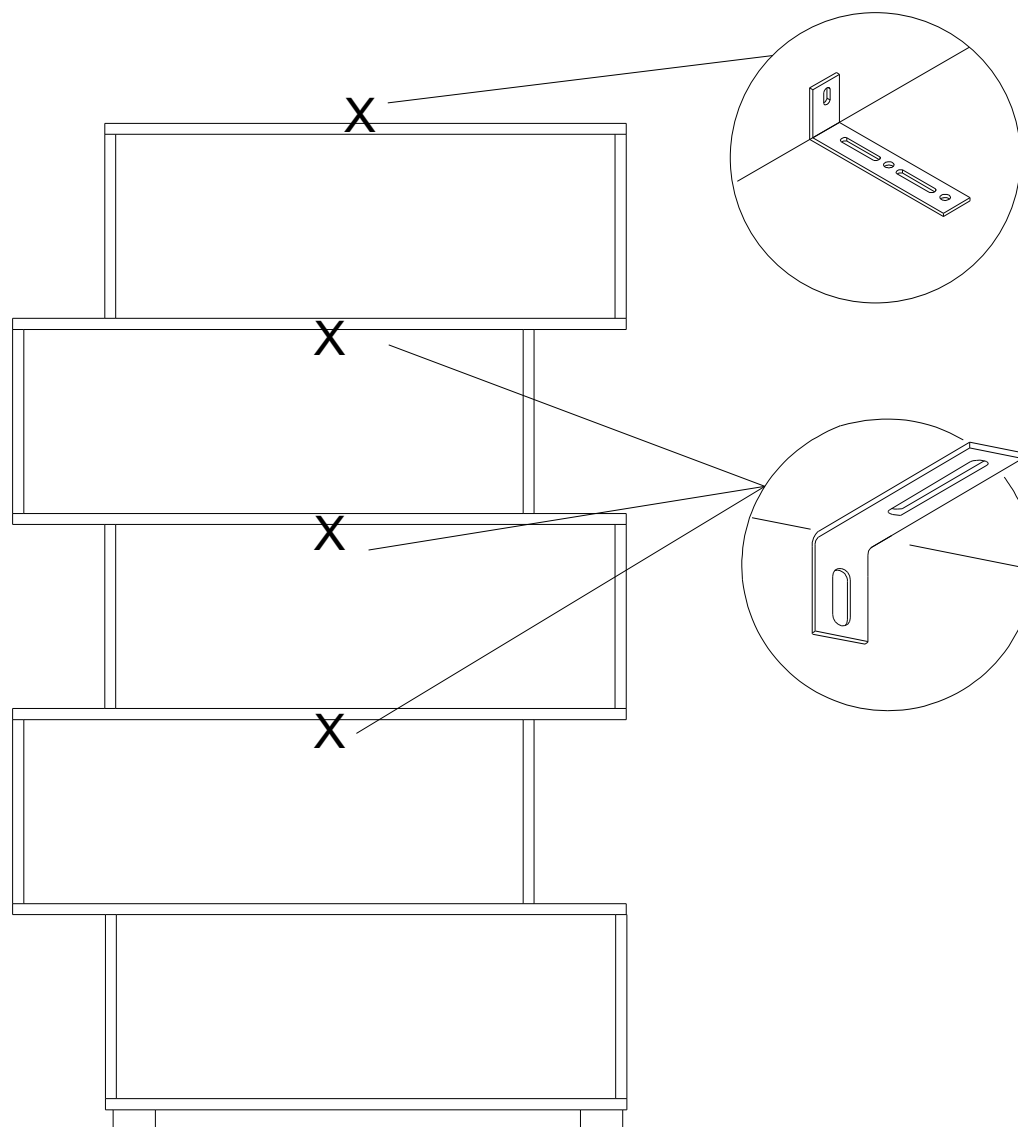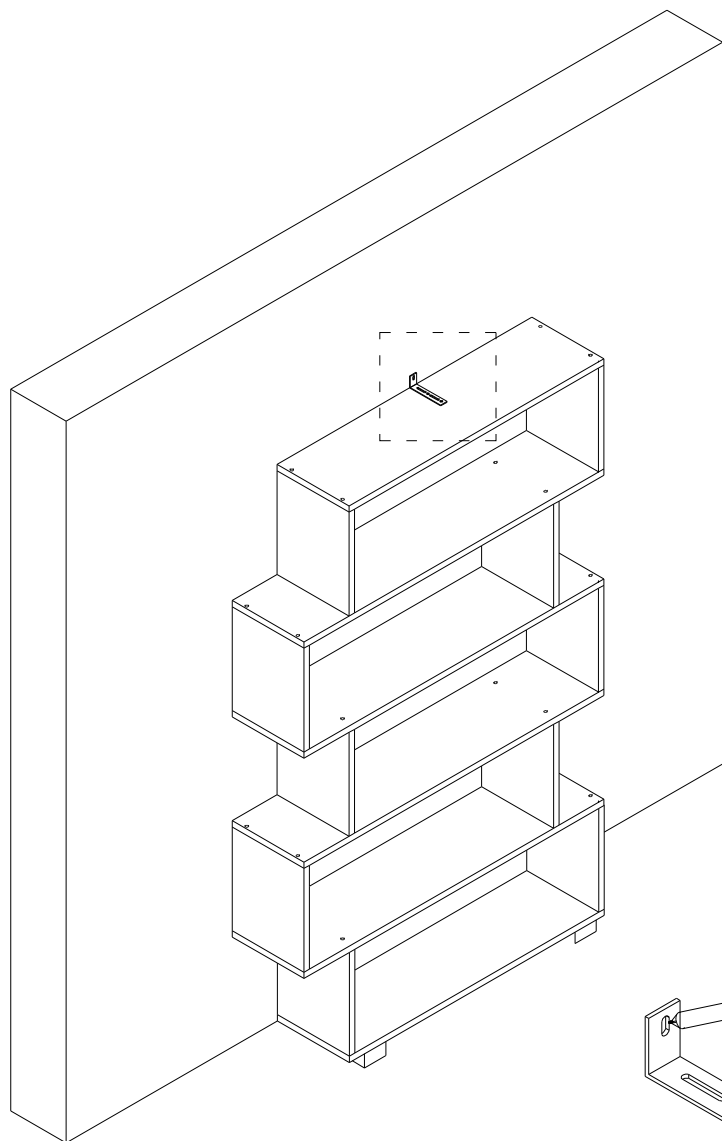





Align the metal with back panel and draw a line on the wall with a pencil.

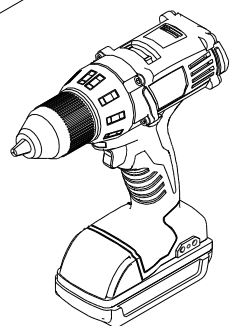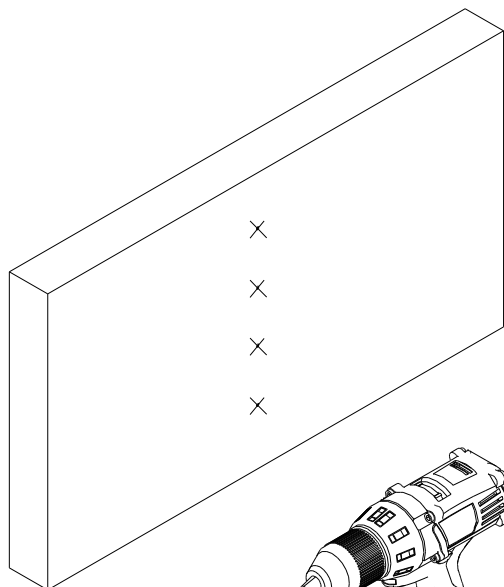


Use drill
for make
hole to this
singed
points.

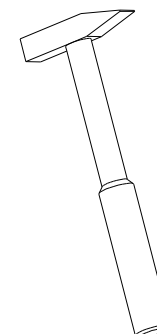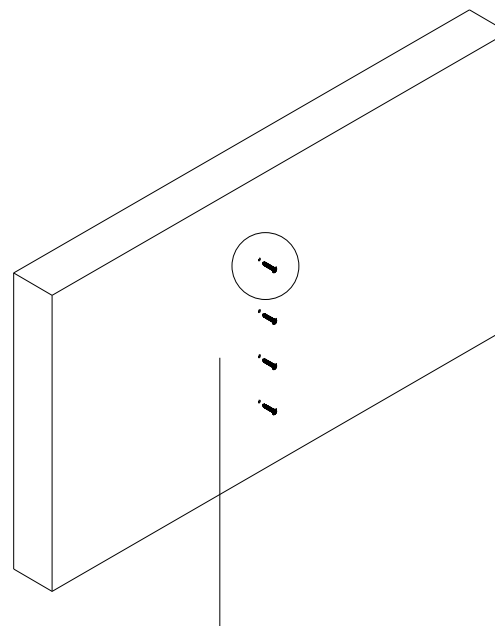


Push C to
this holes
and fix with
plastic
hammer.



8

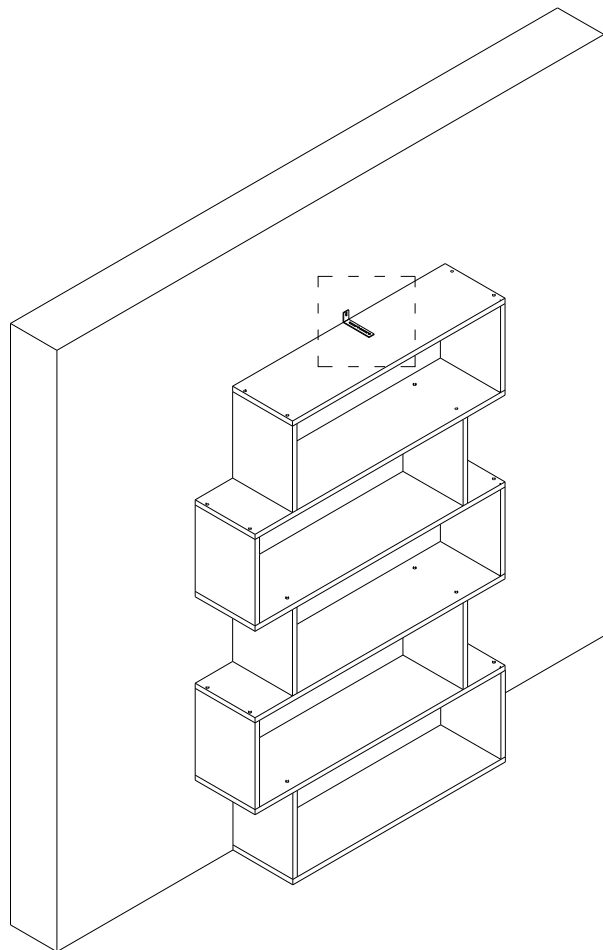


STEP 1

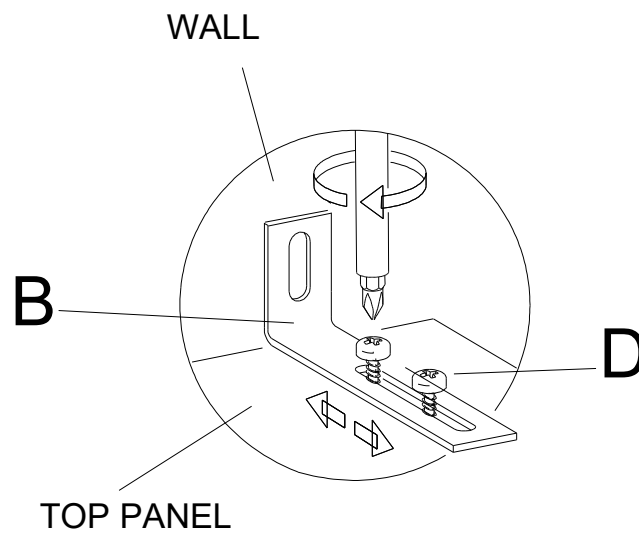


STEP 2


16




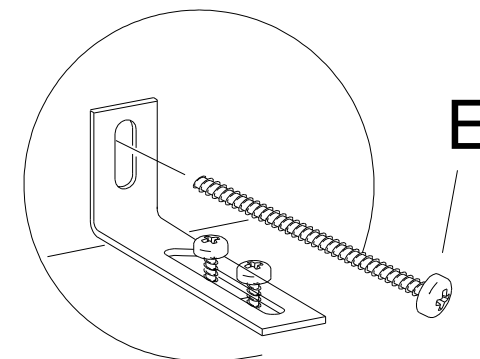


STEP 3

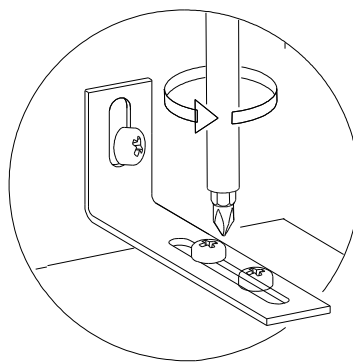


17

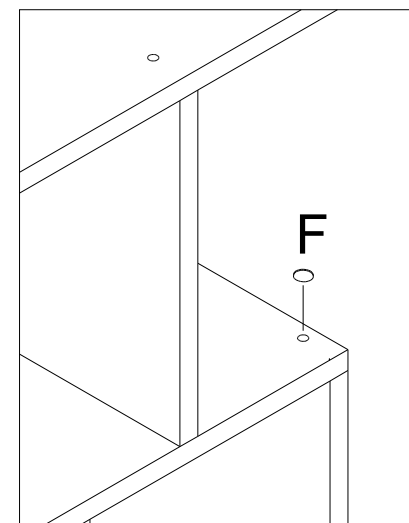




9

STEP 1

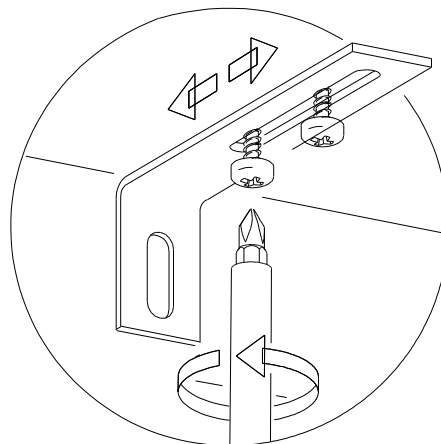


STEP 2

18

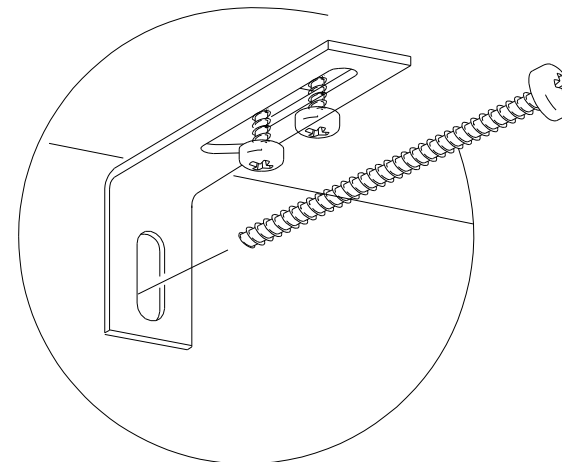

STEP 3

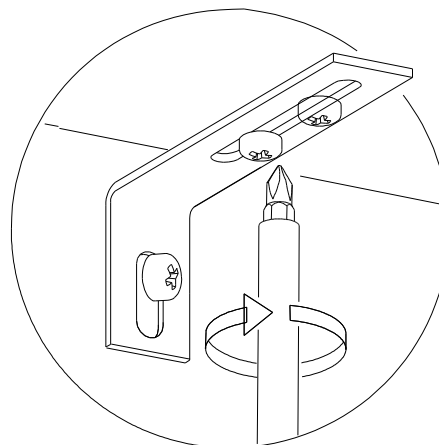

19

