


Assembly instructions

Noa Metal Bed

[120 x 190]

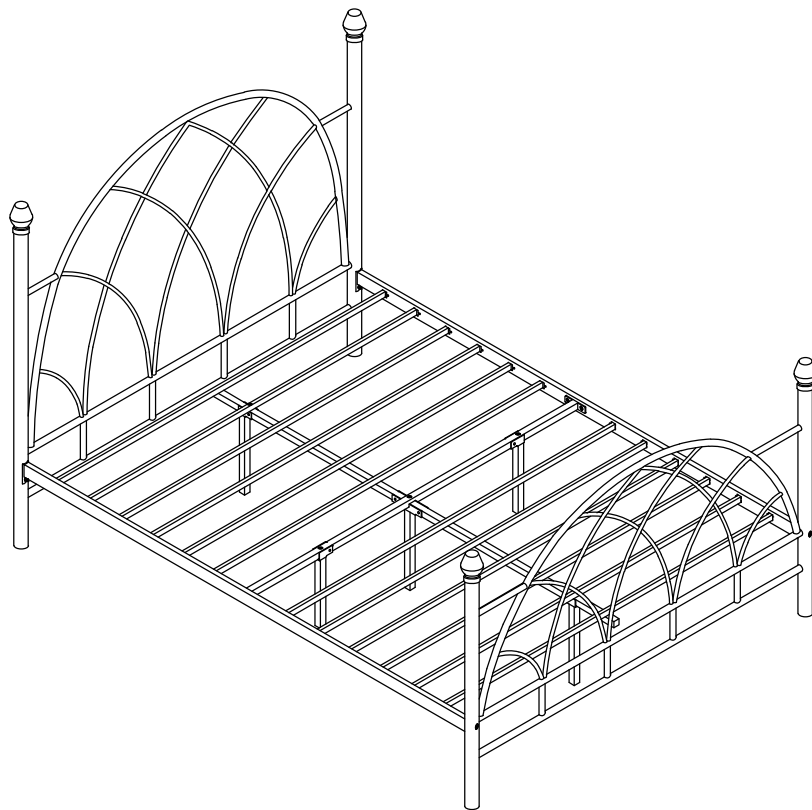


IMPORTANT


1. PLEASE CHECK THAT ALL PARTS ARE PRESENT BEFORE YOU START THE ASSEMBLY OF YOUR FURNITURE.
2. FOR THE PROTECTION OF YOUR FURNITURE, PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE TO PREVENT ANY DAMAGE.
3. PLEASE PERIODICALLY CHECK ALL FITTINGS AND RE-TIGHTEN AS NECESSARY.

PART LIST


① Headboard x 1pc

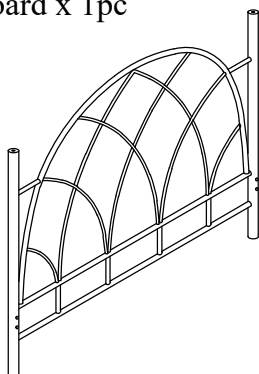


② Footboard x 1pc

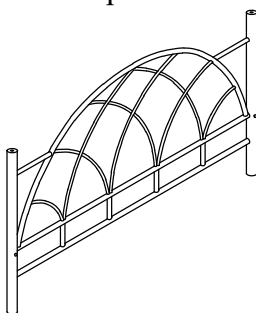


③ Side Rail x 2pcs

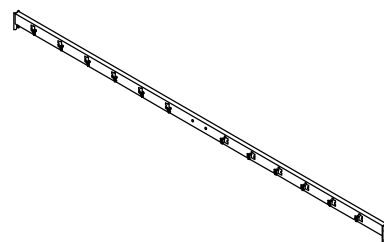


④ x 1pc

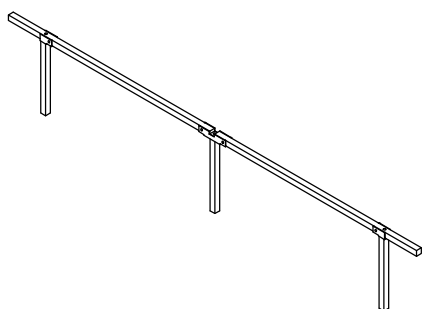


⑤ x 1pc

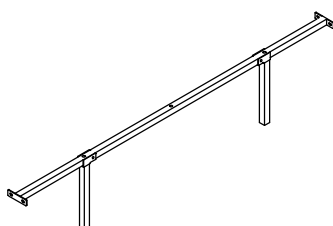


⑥ x 2pc

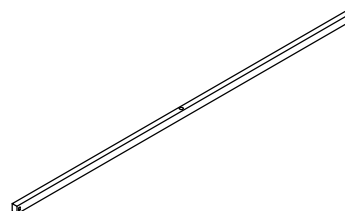

⑦ x 10pcs

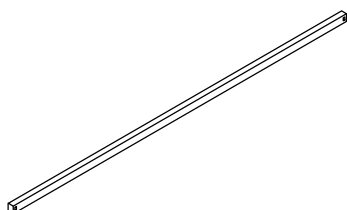

⑧ x 4pcs

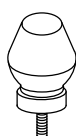

HARDWARE LIST


(A) Bolt M6 x 15mm x 8pcs



(B) Bolt M6 x 60mm x 4pcs



(C) Bolt M8 x 40mm x 2pcs

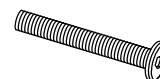

(D) Bolt M8 x 60mm x 3pcs



(E) M6 x 4pcs



(F) M6 x 4pcs



(G) M6 x 4pcs




(H) M4 x 1pc




(I) M5 x 1pc




STEP 1

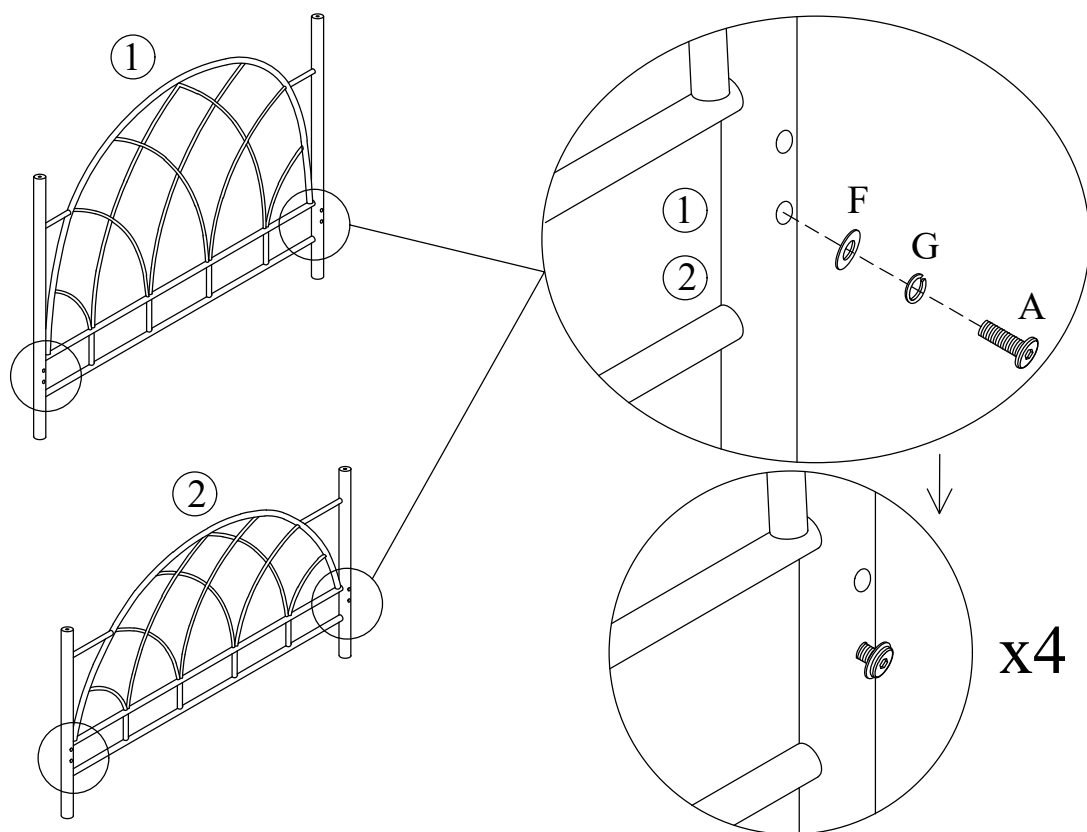


STEP 2

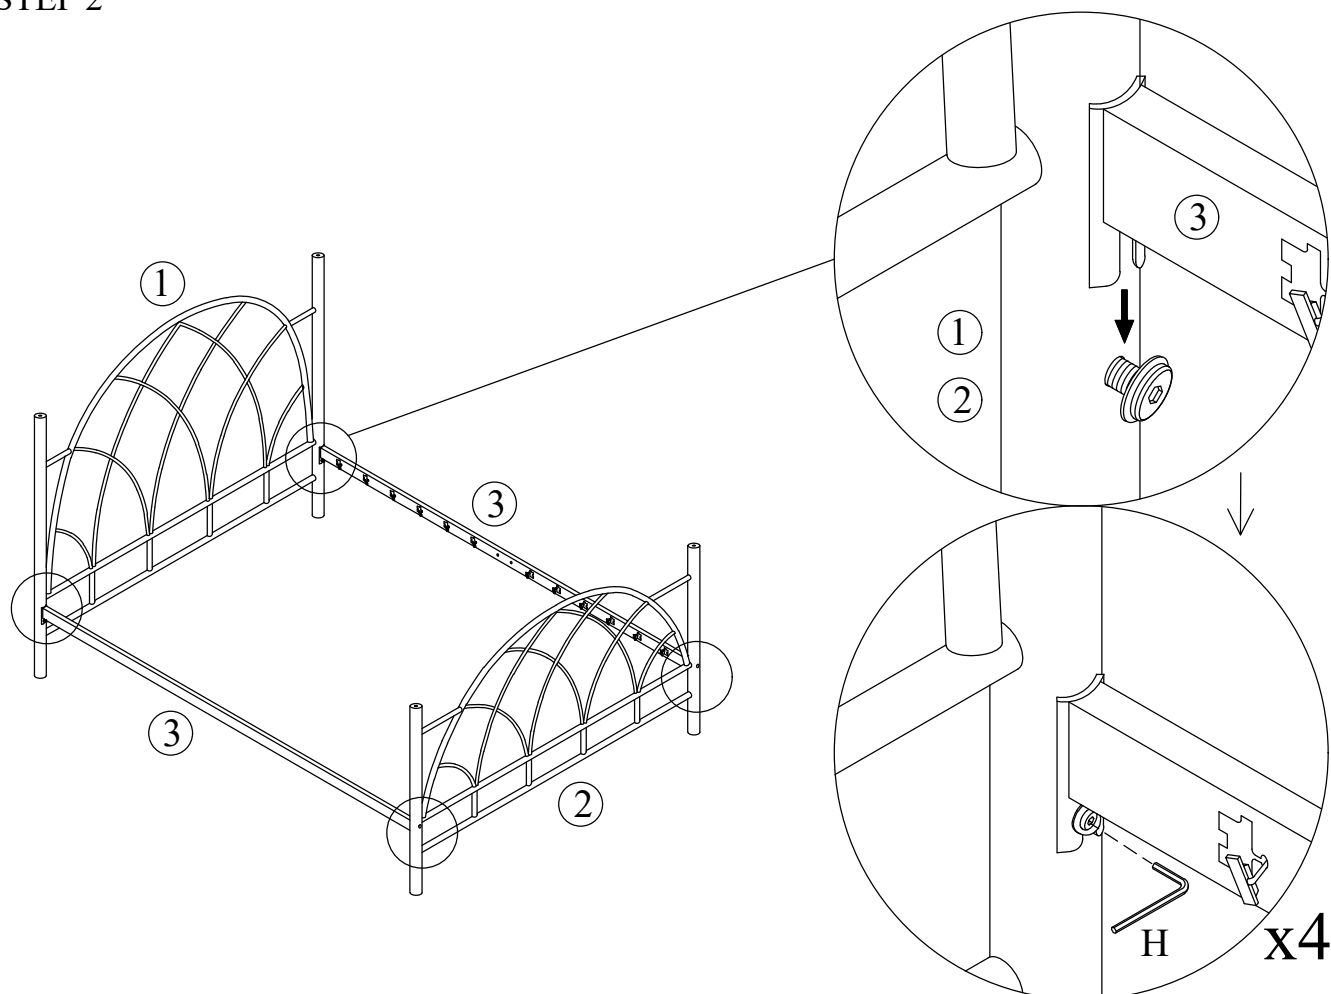


STEP 3

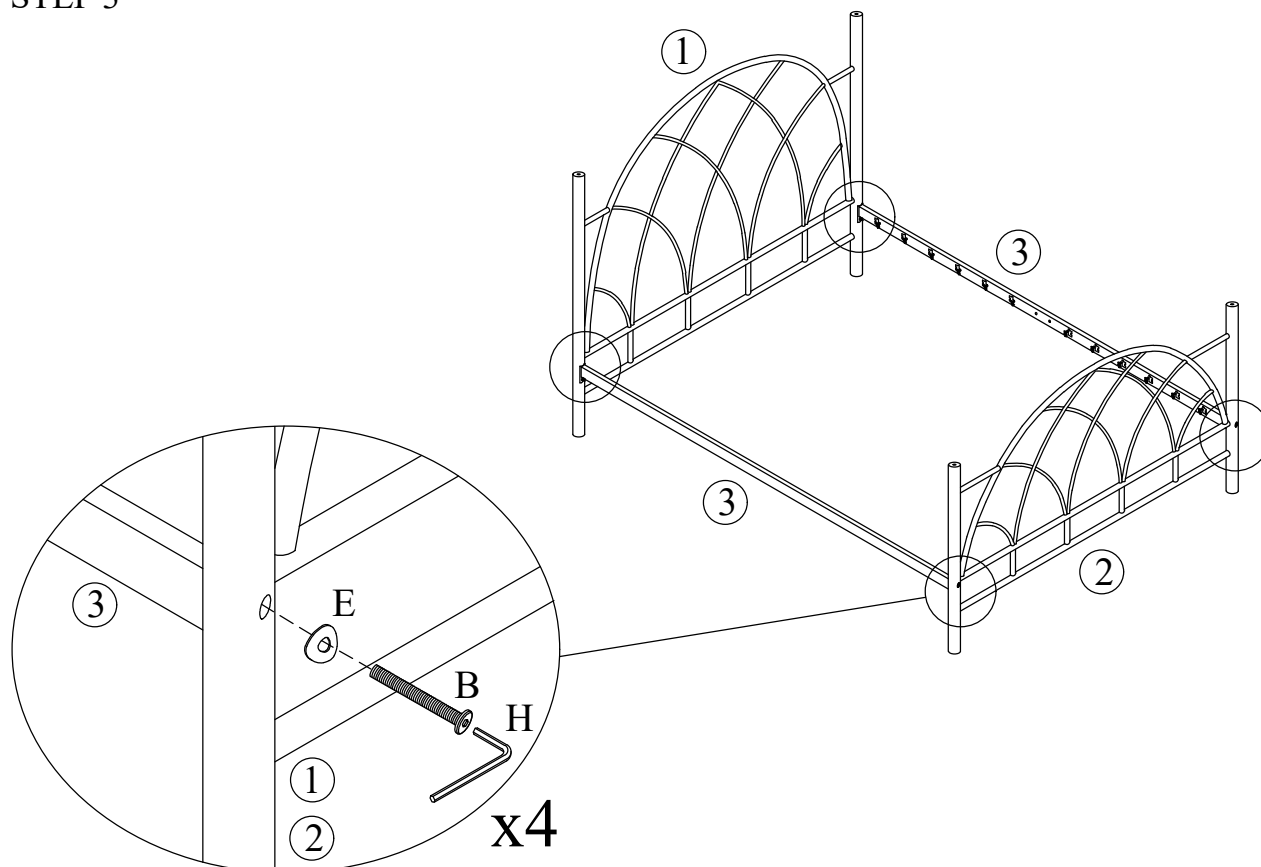

STEP 4

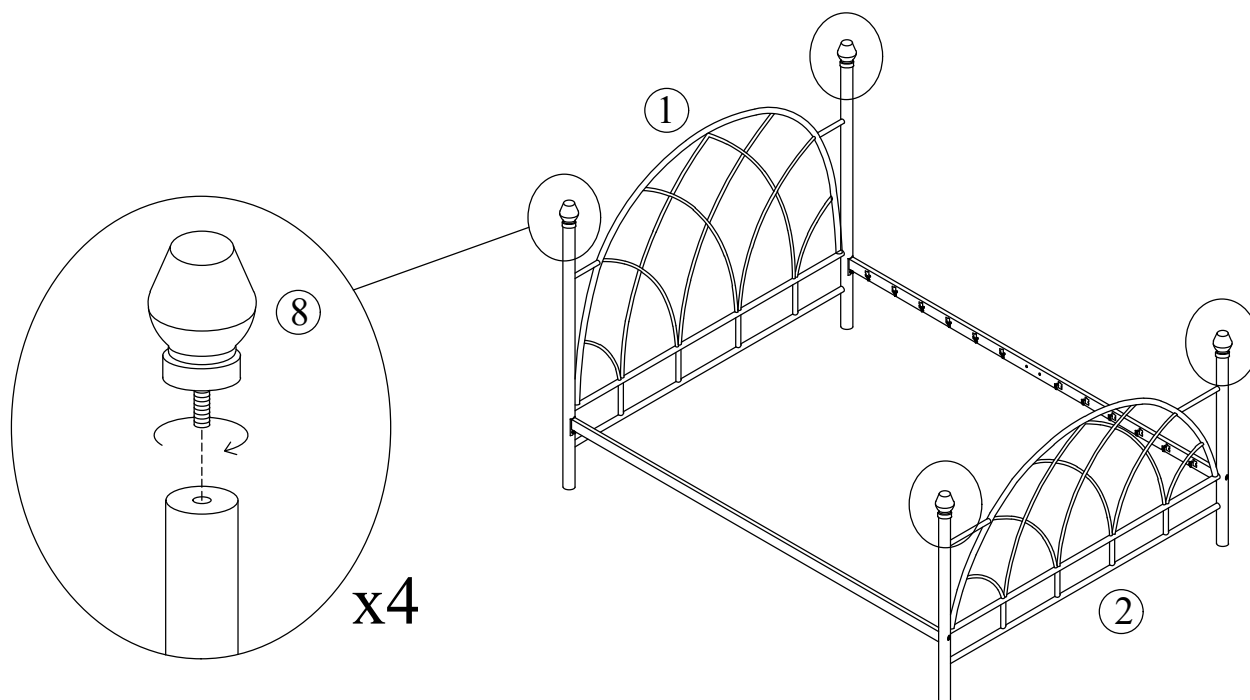


STEP 5


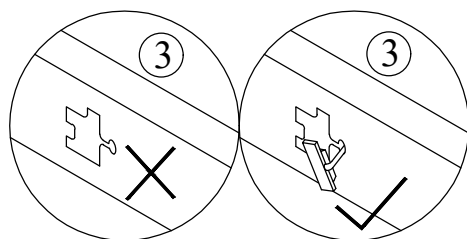


Before assembling the mattress tube, please check whether the plastic clip is fastened on the bed beam, as shown in the picture, please fasten it by hand.


Note: 1. Please insert one end of part ⑥ into the **bottom** of part ③.
2. Then the other end of part ⑥ can be inserted into another part ③.

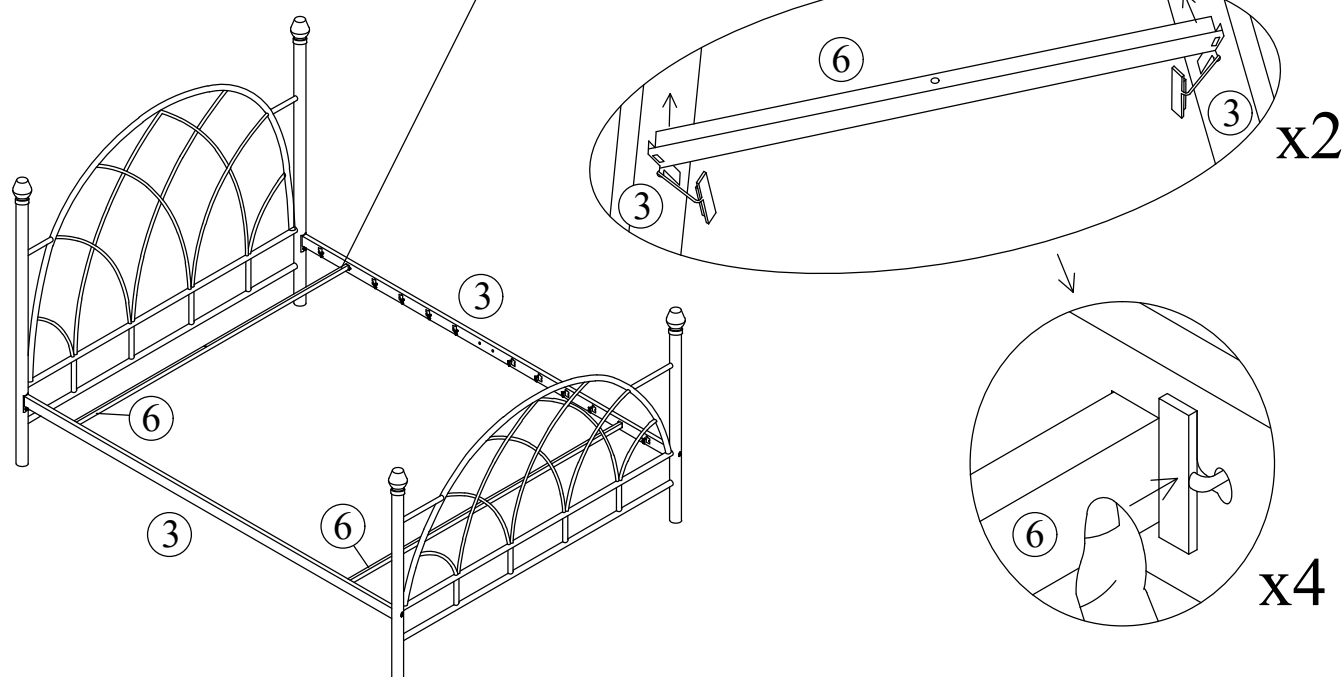

STEP 6

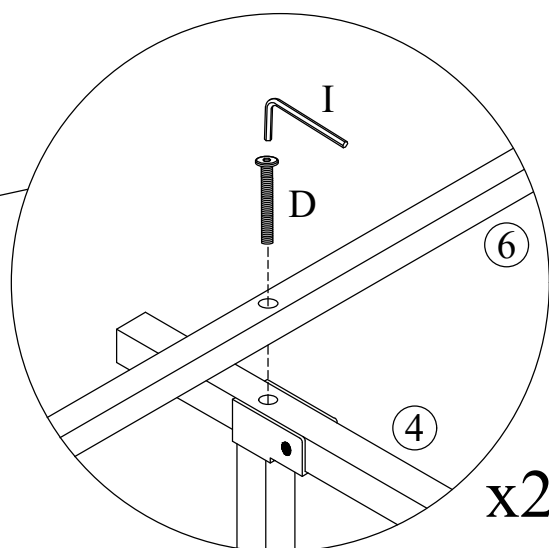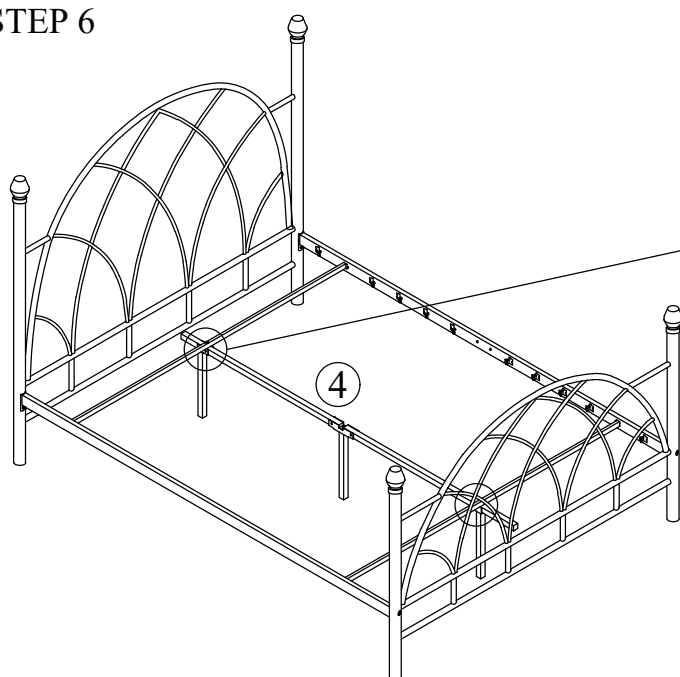

STEP 7

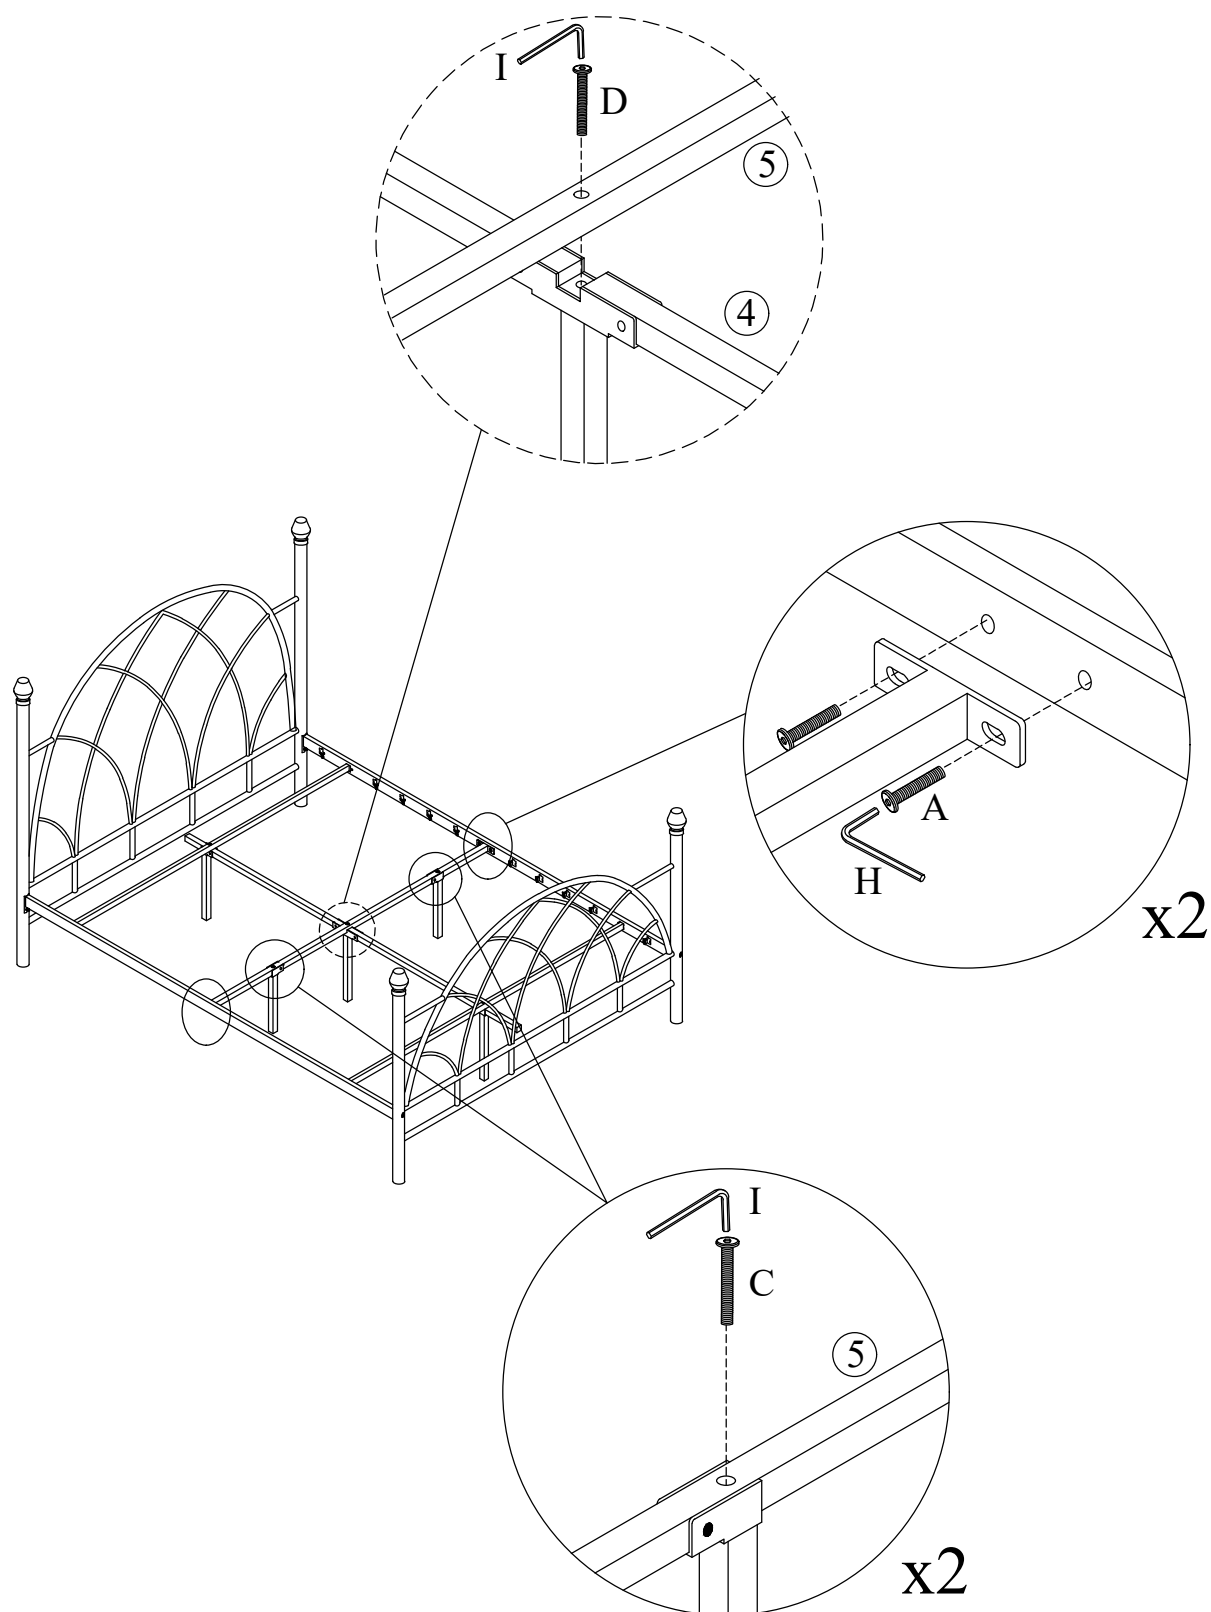

STEP 8

- Note:** 1. Please insert one end of part ⑦ into the **bottom** of part ③.
2. Then the other end of part ⑦ can be inserted into another part ③.

